

2008 Scion xD

GENERAL INFORMATION Service Reminder Indicators - Scion

GENERAL INFORMATION**Service Reminder Indicators - Scion****ENGINE OIL REPLACEMENT REMINDER LIGHT**

NOTE: To determine the appropriate reset procedure, refer to **ENGINE OIL REPLACEMENT REMINDER LIGHT RESET INDEX**. Only vehicles listed in this index have an Engine Oil Replacement Reminder Light reset.

ENGINE OIL REPLACEMENT REMINDER LIGHT RESET INDEX

Model & Year	Reset Procedure
xA	
2004-06	<u>ENGINE OIL REPLACEMENT REMINDER LIGHT RESET - PROCEDURE 1</u>
xB	
2004-09	<u>ENGINE OIL REPLACEMENT REMINDER LIGHT RESET - PROCEDURE 1</u>
xD	
2004-09	<u>ENGINE OIL REPLACEMENT REMINDER LIGHT RESET - PROCEDURE 1</u>
tC	
2005-09	<u>ENGINE OIL REPLACEMENT REMINDER LIGHT RESET - PROCEDURE 1</u>

ENGINE OIL REPLACEMENT REMINDER LIGHT RESET - PROCEDURE 1

- Turn ignition switch to OFF position with the odometer reading showing.
- Turn ignition switch to ON position while holding down the trip meter reset knob, to right of odometer.
- Hold down knob for at least 5 seconds.
- The light goes off, and the display shows zero for 1 second and changes to the odometer reading. If the system fails to reset, the light will remain on or keep flashing.

TIRE PRESSURE MONITOR SYSTEM (TPMS)

NOTE: To determine the appropriate reset procedure, refer to **TPMS RESET INDEX**. Only vehicles listed in this index have a TPMS reset.

TPMS RESET INDEX

Model & Year	Reset Procedure
xB	
2008-09	<u>TPMS RESET - PROCEDURE 1</u>
xD	

2008 Scion xD	
GENERAL INFORMATION Service Reminder Indicators - Scion	

2008-09	<u>TPMS RESET - PROCEDURE 1</u>
tC	
2005-09	<u>TPMS RESET - PROCEDURE 2</u>

TPMS RESET - PROCEDURE 1

NOTE: System needs to be initialized when rotating tires on vehicles differing with front and rear tire inflation pressure.

1. Park vehicle in a safe place and turn ignition key to LOCK position.
2. Adjust the pressure of all installed tires to specified cold tire inflation pressure level.
3. Turn ignition to ON position.
4. Push and hold tire pressure warning reset switch (located below steering column) until the tire pressure warning light blinks slowly 3 times.
5. Leave system for a few minutes with ignition switch in ON position, and then turn ignition key to LOCK position.

If you push the tire warning reset switch while vehicle is moving, initialization will not take place. If reset switch is accidentally pushed, and initialization takes place, adjust tire inflation pressure to the specified level and initialize the system again.

If tire pressure warning light does not blink slowly 3 times when you push and hold the reset switch, initialization has failed and tire pressure warning system may not work properly. In this case, initialize the system again. If initialization cannot be performed, have the system checked at an authorized dealer.

TPMS RESET - PROCEDURE 2

NOTE: This system requires initializing if tire pressure warning light is blinking twice every second, after changing tires or wheels, or after rotating the tires. See INITIALIZING TIRE PRESSURE MONITOR SYSTEM.

Initializing Tire Pressure Monitor System

NOTE: This system requires initializing if tire pressure warning light is blinking twice every second, after changing tires or wheels, or after rotating the tires.

NOTE: Be sure to adjust the tire pressure to specification before initialization.

1. Park the vehicle in a safe place with the parking brake applied. Check and adjust the tire pressure to specification (see placard on driver's door pillar).
2. With vehicle stopped, turn ignition switch to ON position.

NOTE: If the tire pressure warning light comes on, push the reset switch for a few

2008 Scion xD

GENERAL INFORMATION Service Reminder Indicators - Scion

seconds and make sure the warning light goes off.

3. Press and hold the tire pressure warning reset switch until the tire pressure warning light blinks 3 times at one-second intervals. See **Fig. 1**.

NOTE: If reset switch is pushed without adjusting the tire inflation pressure to the specified level, the low tire pressure warning may not turn on even if the tire inflation is low, or it may turn on when the tire inflation pressure is actually normal. If reset switch is pushed while driving, initialization is not performed.

NOTE: If the tire pressure warning light does not blink 3 times, perform the initialization again. If warning light still does not blink as specified, refer to appropriate manufacturer service information.

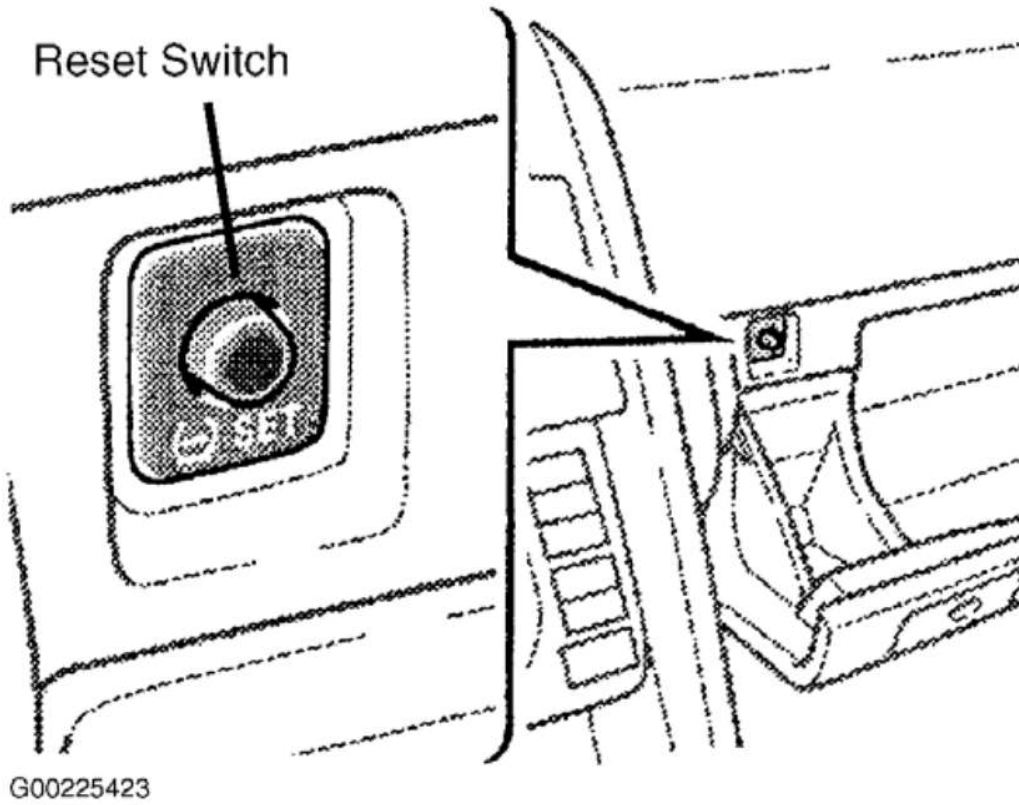
4. Initialization is completed after vehicle is driven at 19 MPH (30 KM/H) or more for more than one hour under the following conditions:
 - The vehicle speed is between 31-62 MPH (50-100 KM/H).
 - The roads are dry, smooth and straight.
 - The number of passengers is 1 or 2 (including driver).

NOTE: If tire pressure warning light blinks twice every second while driving, perform the initialization again.

5. To verify that the system has been initialized, check the length of time that the warning light is on after turning the ignition switch to the ON position. If system is initialized, light should stay on for 3 seconds. If light stays on for 4 seconds, perform the initialization again.

2008 Scion xD

GENERAL INFORMATION Service Reminder Indicators - Scion

**Fig. 1: Locating TPM System Reset Switch**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.