


10. Reservoir Tank

A: REMOVAL

- 1) Drain the over flow hose connecting to the radiator from the reservoir tank.
- 2) Push in the hook (A), and pull the reserve tank in the direction of the arrow to remove.

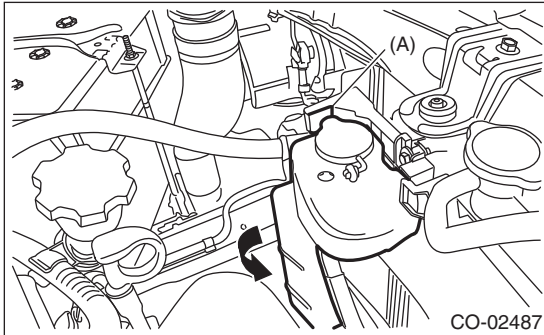

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Make sure the engine coolant level is between "FULL" and "LOW".