

Fuel Tank Pressure Sensor

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


10. Fuel Tank Pressure Sensor

A: REMOVAL


WARNING:

Place “NO OPEN FLAMES” signs near the working area.


- 1) Set the vehicle on a lift.
- 2) Disconnect the ground cable from battery.

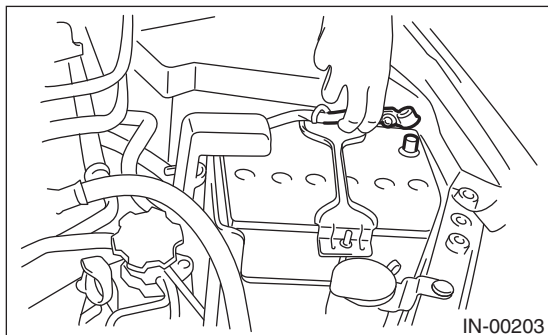

- 3) Open the fuel filler lid, and remove the fuel filler cap.
- 4) Lift up the vehicle.
- 5) Disconnect the connector from the fuel tank pressure sensor (A).
- 6) Disconnect the pressure hose from the fuel tank pressure sensor (B).
- 7) Remove the fuel tank pressure sensor along with the bracket.

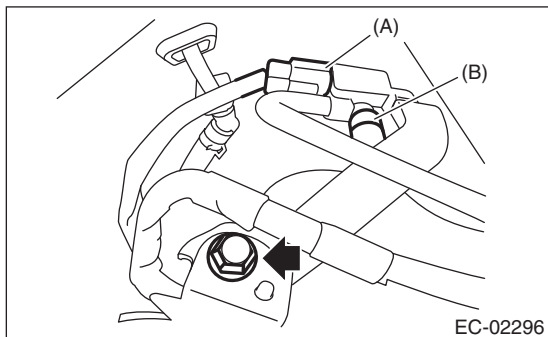

- 8) Remove the fuel tank pressure sensor from the bracket cover.


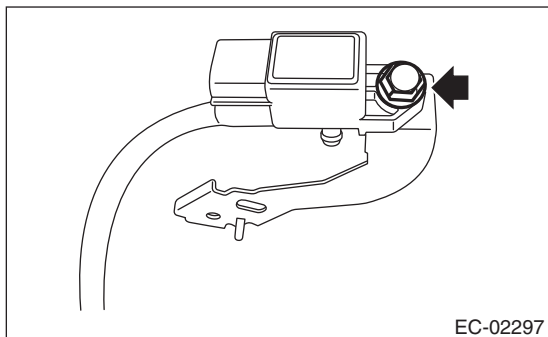


B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.35 N·m (0.7 kgf-m, 5.5 ft-lb)

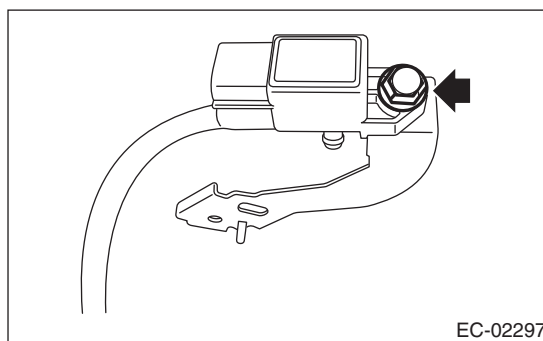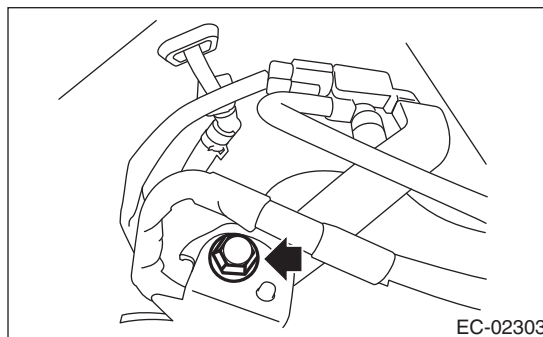

C: INSPECTION

Make sure the hoses are not cracked or loose.