

12.Drain Filter

A: SPECIFICATION

The drain valve is a non-disassembled part, so do not remove the drain filter from drain valve.

Refer to “Canister” for removal and installation procedures. <Ref. to EC(H4SO)-5, REMOVAL, Canister.>

<Ref. to EC(H4SO)-8, INSTALLATION, Canister.>