

14.Drain Valve

A: REMOVAL

Refer to “Canister” for removal procedures. <Ref. to EC(H4SO)-5, REMOVAL, Canister.>

B: INSTALLATION

Refer to “Canister” for installation procedures. <Ref. to EC(H4SO)-8, INSTALLATION, Canister.>