


Purge Control Solenoid Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


5. Purge Control Solenoid Valve

A: REMOVAL

1) Disconnect the ground cable from battery.

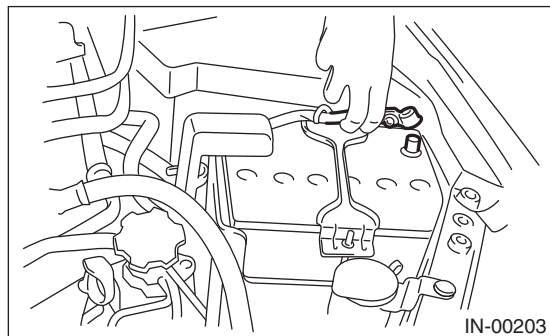

2) Disconnect the connector and evaporation hoses of purge control solenoid valve, and then remove the purge control solenoid valve.

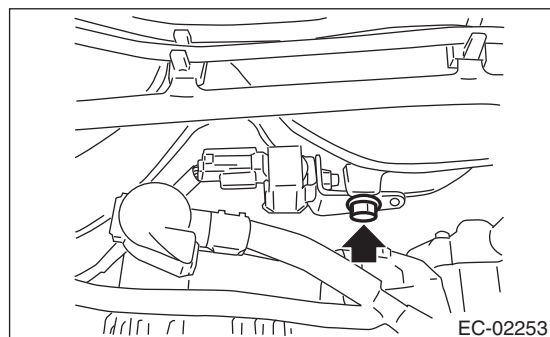


B: INSTALLATION

Install in the reverse order of removal.


NOTE:

- Connect the evaporation hose as shown in the figure.

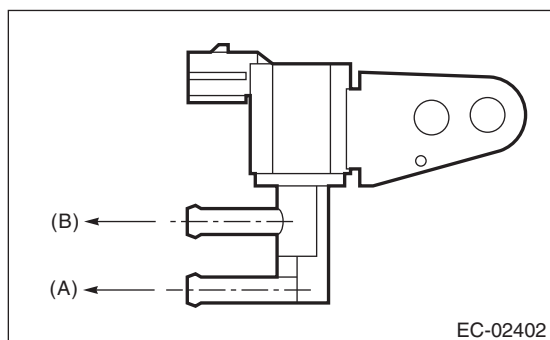


- (A) To fuel pipe (intake manifold)
(B) To fuel pipe (evaporation line)

- Refer to the following figure for the mounting hole of the purge control solenoid valve because the location differs according to intake manifold specification.

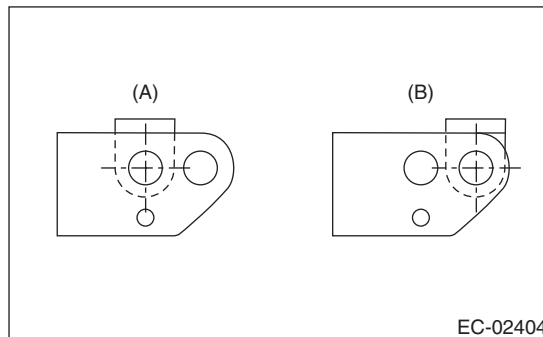

- (A) Without model number
(B) With model number


- See the following figure to check if the intake manifold has a model number.

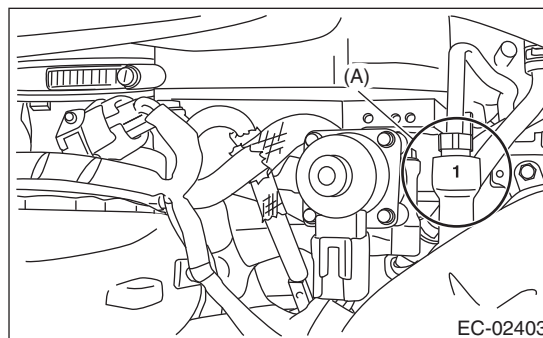

- (A) Model number (single digit number)

Tightening torque (Purge control solenoid valve attachment bolt):

19 N·m (1.9 kgf-m, 14.0 ft-lb)

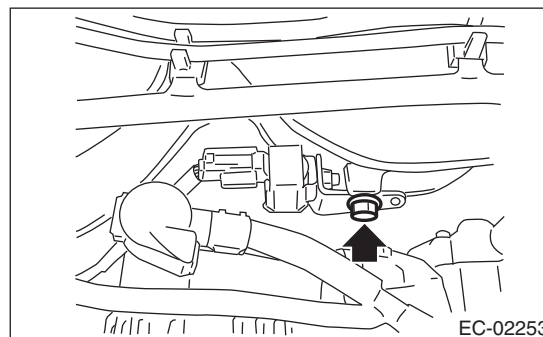

C: INSPECTION

Make sure the hoses are not cracked or loose.