

EGR Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

6. EGR Valve

A: REMOVAL

For removal procedures, refer to “FU” section.
<Ref. to FU(H4SO)-29, REMOVAL, EGR Valve.>

B: INSTALLATION

For installation procedures, refer to “FU” section. <Ref.
to FU(H4SO)-29, INSTALLATION, EGR Valve.>