

7. Fuel Level Sensor

A: REMOVAL

For removal procedures, refer to "FU" section. <Ref. to FU(H4SO)-58, REMOVAL, Fuel Level Sensor.>

B: INSTALLATION

For installation procedures, refer to "FU" section. <Ref. to FU(H4SO)-58, INSTALLATION, Fuel Level Sensor.>