


General Description

EXHAUST

1. General Description

A: COMPONENT

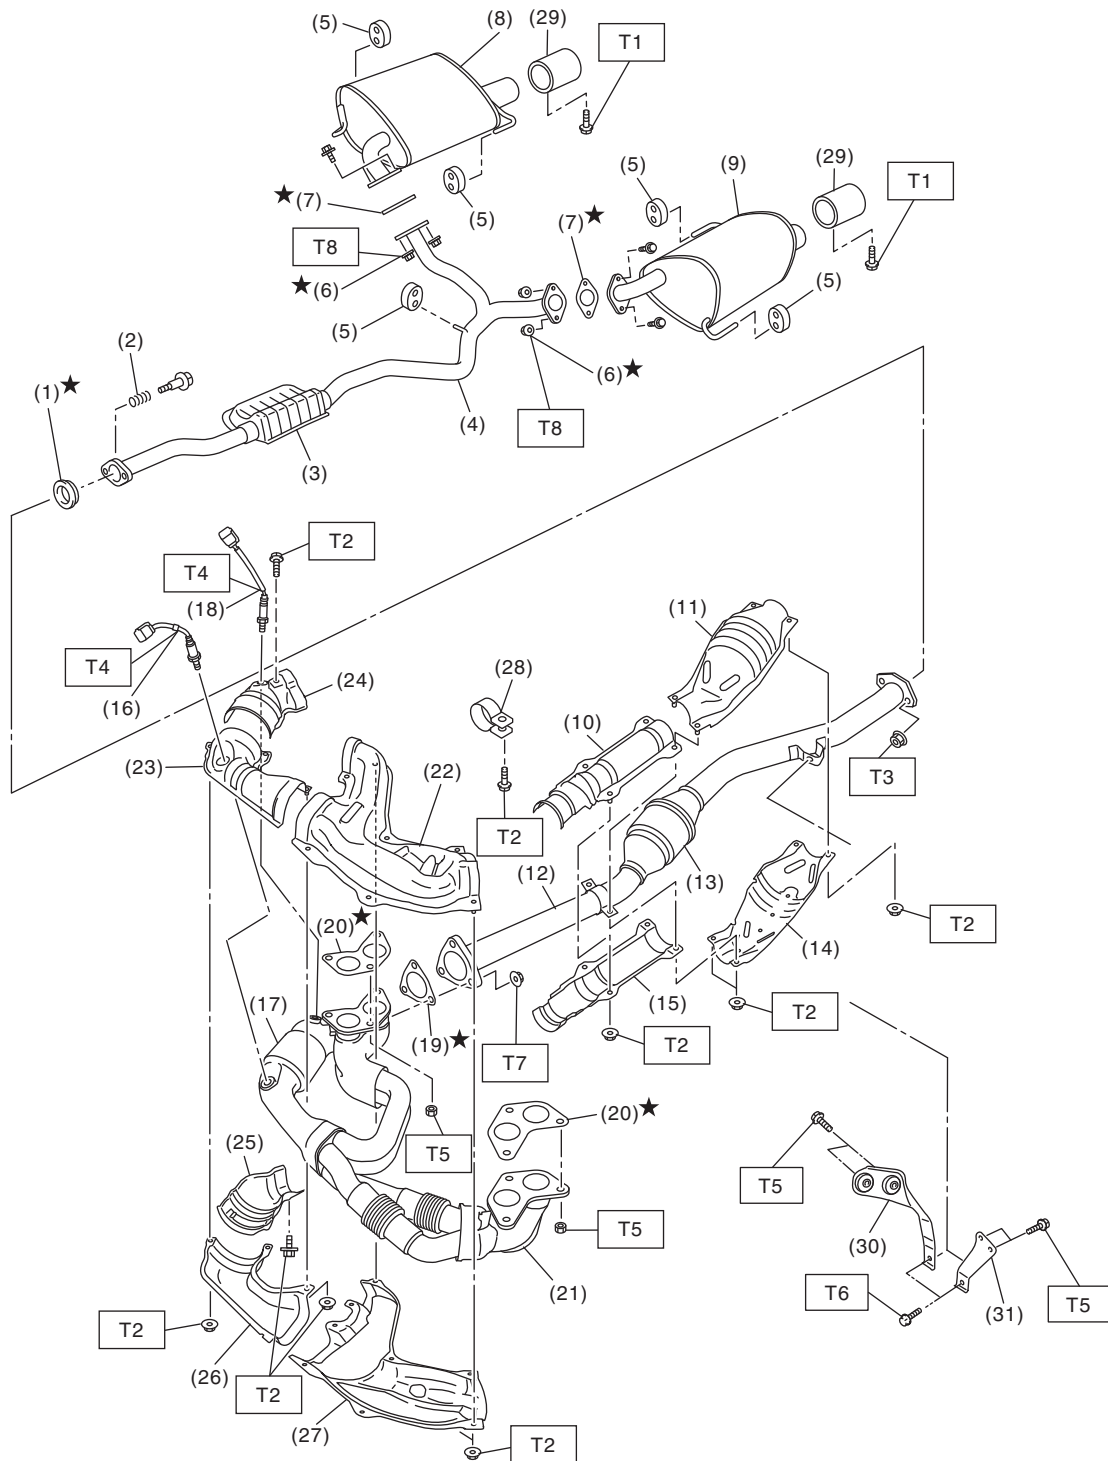

EX-02352

EX(H4SO)-2

General Description

EXHAUST

(1) Gasket	(15) Center exhaust pipe front lower cover	(27) Front exhaust pipe lower cover LH
(2) Spring	(16) Front oxygen (A/F) sensor	(28) Band
(3) Chamber	(17) Front catalytic converter	(29) Ornamental muffler tip (Models with ornamental muffler tips)
(4) Rear exhaust pipe	(18) Rear oxygen sensor	(30) Hanger bracket (MT model)
(5) Cushion rubber	(19) Gasket	(31) Hanger bracket (AT model)
(6) Self-locking nut	(20) Gasket	
(7) Gasket	(21) Front exhaust pipe	Tightening torque:N·m (kgf-m, ft-lb)
(8) Muffler (RH)	(22) Front exhaust pipe upper cover LH	T1: 7.5 (0.8, 5.5)
(9) Muffler (LH)	(23) Front exhaust pipe upper cover RH	T2: 13 (1.3, 9.6)
(10) Center exhaust pipe front upper cover	(24) Front catalytic converter upper cover	T3: 18 (1.8, 13.3)
(11) Rear catalytic converter upper cover	(25) Front catalytic converter lower cover	T4: 21 (2.1, 15.5)
(12) Center exhaust pipe	(26) Front exhaust pipe lower cover RH	T5: 30 (3.1, 22.1)
(13) Rear catalytic converter		T6: 35 (3.6, 25.8)
(14) Rear catalytic converter lower cover		T7: 40 (4.1, 29.5)
		T8: 48 (4.9, 35.4)

B: CAUTION

- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from the battery.
- If any fat adheres to the exhaust pipe, wipe it off. Otherwise a fire may happen.