


14.Oil Temperature Sensor

A: REMOVAL

1) Disconnect the ground cable from the battery.

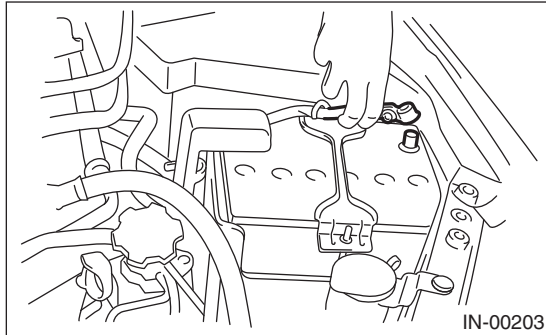


2) Remove the air intake chamber. <Ref. to IN(H4SO)-7, REMOVAL, Air Intake Chamber.>

3) Remove the engine harness connector from the bracket.

4) Disconnect the connector from the oil temperature sensor.

5) Remove the oil temperature sensor.

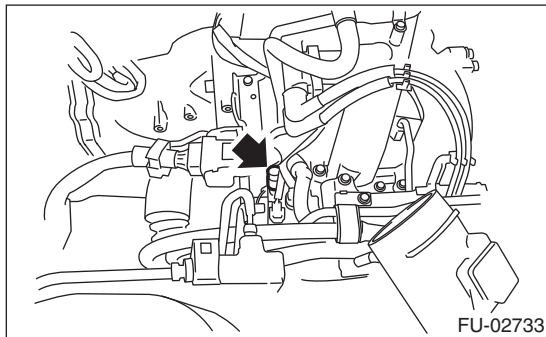

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Apply liquid gasket to the oil temperature sensor threads.

Liquid gasket:

THREE BOND 1324 (Part No. 004403042) or equivalent

Tightening torque:

18 N·m (1.8 kgf-m, 13.3 ft-lb)