


19. Fuel Pump Relay

A: REMOVAL

1) Disconnect the ground cable from the battery.

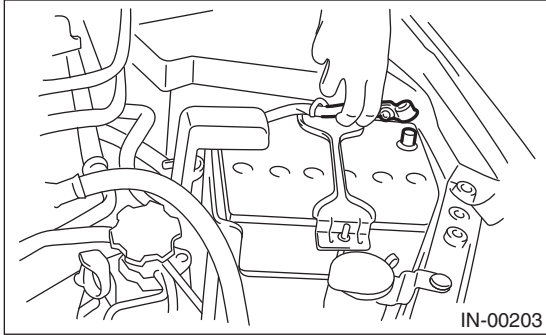

2) Remove the glove box lower cover. <Ref. to EI-45, REMOVAL, Glove Box.>

3) Remove the fuel pump relay from the relay block on the back side of the glove box.



B: INSTALLATION

Install in the reverse order of removal.