


2. Throttle Body


A: REMOVAL

1) Disconnect the ground cable from the battery.

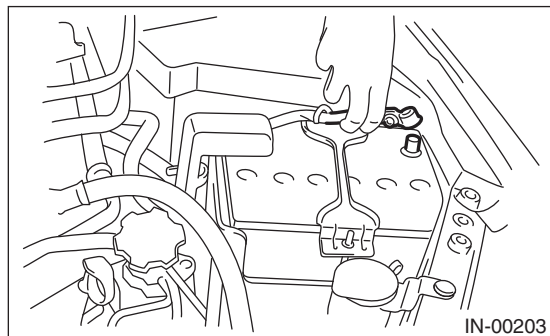


2) Remove the air intake chamber. <Ref. to IN(H4SO)-7, REMOVAL, Air Intake Chamber.>

3) Disconnect the throttle position sensor connector (A) and manifold pressure sensor connector (B).

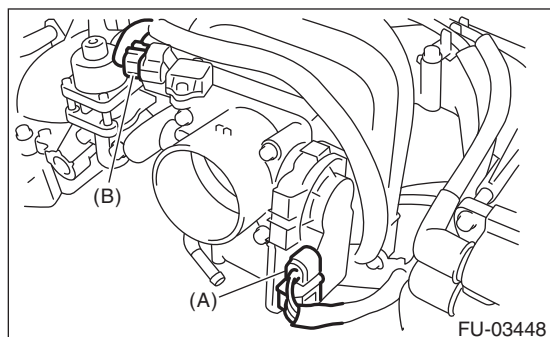

4) Disconnect the engine coolant hoses (A) from the throttle body.

5) Remove the bolts (B) which secure the throttle body to the intake manifold, and remove the throttle body.

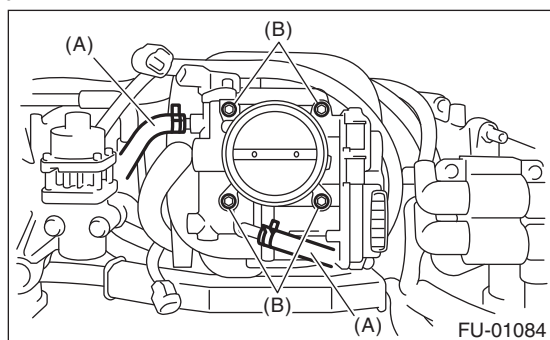

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Use a new gasket.

Tightening torque:

8 N·m (0.8 kgf-m, 5.9 ft-lb)