


Electronic Throttle Control Relay

FUEL INJECTION (FUEL SYSTEMS)

20. Electronic Throttle Control Relay


A: REMOVAL

- 1) Disconnect the ground cable from the battery.

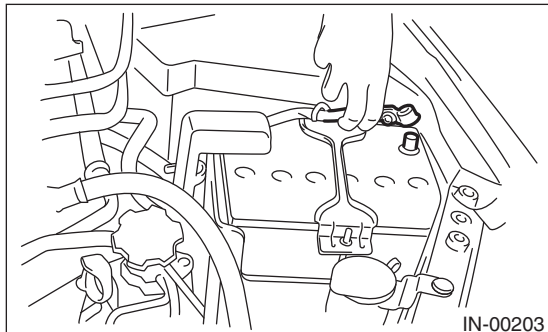

- 2) Remove the glove box lower cover. <Ref. to EI-45, REMOVAL, Glove Box.>

- 3) Remove the electronic throttle control relay from the relay block on the back side of the glove box.

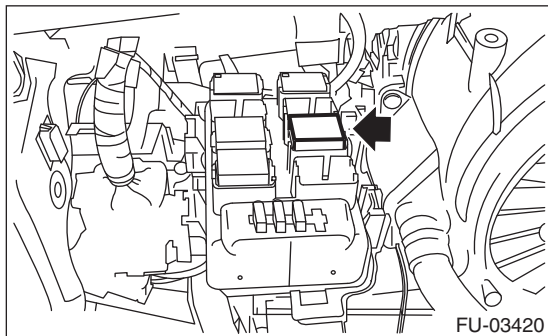

B: INSTALLATION

Install in the reverse order of removal.