

28.Fuel Damper

A: REMOVAL

WARNING:


Place “NO OPEN FLAMES” signs near the working area.

CAUTION:

- Be careful not to spill fuel.
- Catch the fuel from hoses using a container or cloth.

1) Release the fuel pressure. <Ref. to FU(H4SO)-43, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>

2) Remove the fuel damper valve from the fuel delivery hose.

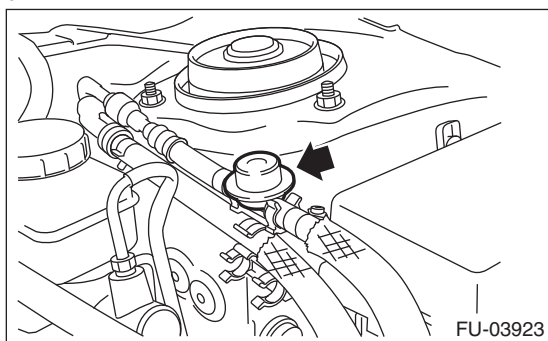

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

1.25 N·m (0.1 kgf-m, 0.9 ft-lb)