


29.Purge Damper

A: REMOVAL


WARNING:

Place “NO OPEN FLAMES” signs near the working area.

1) Remove the purge damper valve from the purge damper valve stay.

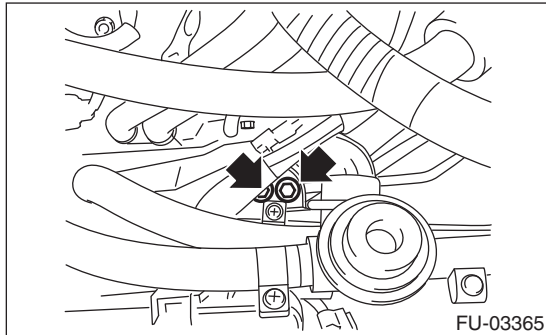

2) Disconnect the evaporation hose from the purge damper valve.

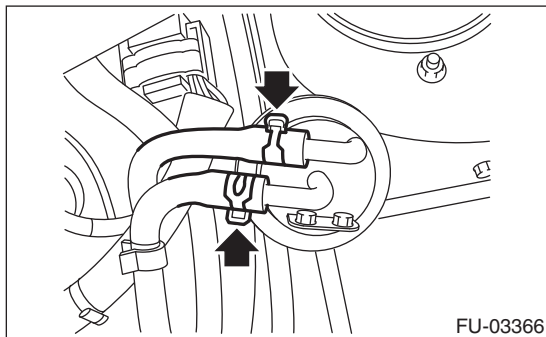

B: INSTALLATION

CAUTION:

If there is damage on the evaporation hose, replace with a new hose.

Install in the reverse order of removal.

Tightening torque:

8 N·m (0.8 kgf-m, 5.9 ft-lb)

