



5. Crankshaft Position Sensor

A: REMOVAL


1) Disconnect the ground cable from the battery.

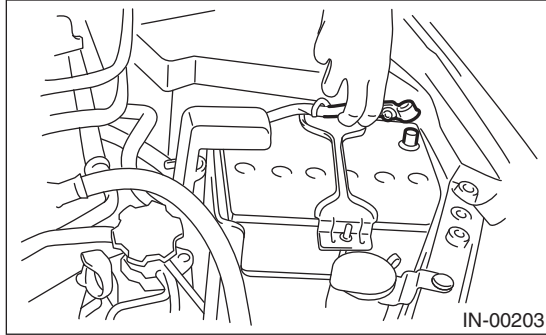

2) Remove the bolt which installs crankshaft position sensor to cylinder block.

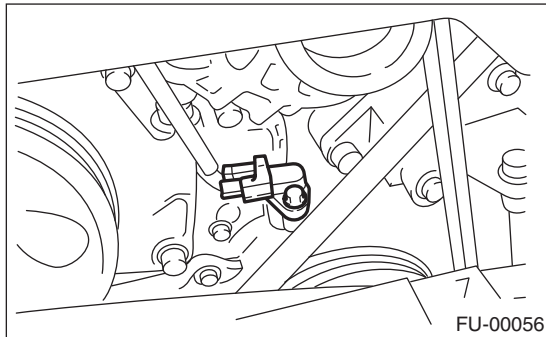

3) Remove the crankshaft position sensor, and then disconnect the connector from it.

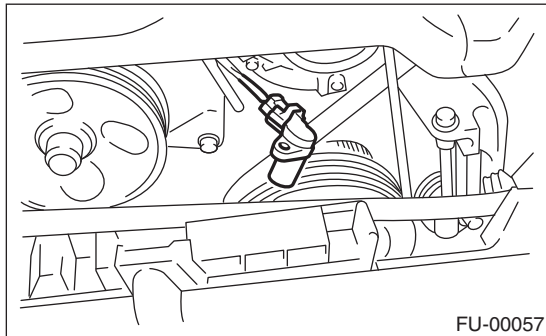

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

T: 6.4 N·m (0.7 kgf-m, 4.7 ft-lb)

