


Air Cleaner Element

INTAKE (INDUCTION)


2. Air Cleaner Element

A: REMOVAL

1) Disconnect the ground cable from battery.

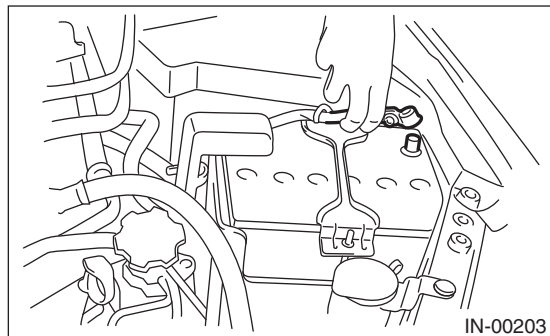


2) Disconnect the connector (A) from the mass air flow and intake air temperature sensor and remove the clip (B).

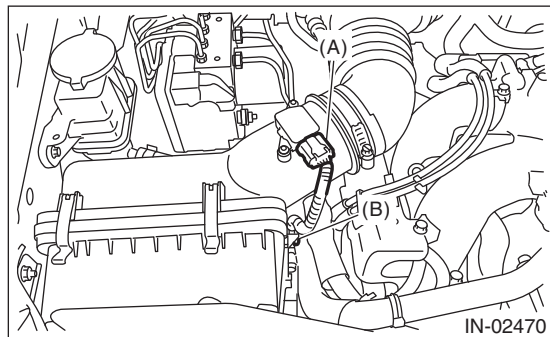


3) Loosen the clamps (A) which connect the air cleaner case and the intake boot.

4) Remove the clip (B) securing the upper side of air cleaner case.

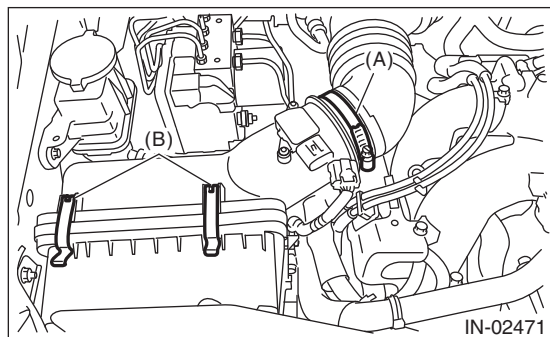

5) Remove the air cleaner case (rear) and air cleaner element.

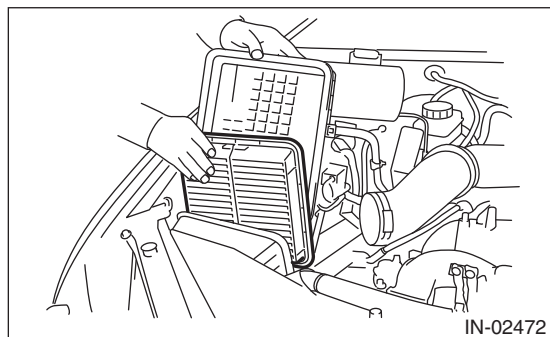

B: INSTALLATION


Install in the reverse order of removal.

CAUTION:

Be sure to use **SUBARU** genuine air cleaner element depending on the engine type when replacing the air cleaner elements. Otherwise engine performance may be damaged.

NOTE:


- Make sure there is no foreign material in the air cleaner case.
- When installing the air cleaner case (rear), align the protrusion of the air cleaner case (rear) to the hole on the air cleaner case (front) to install.

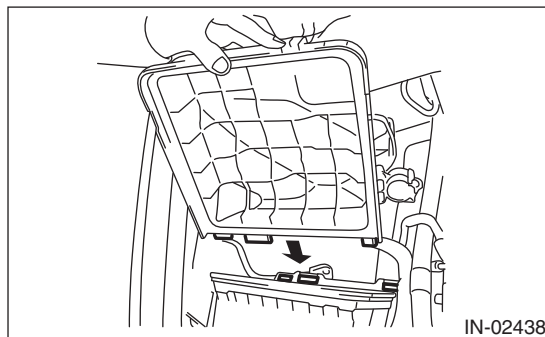

Tightening torque:

Clamp (A)

3 N·m (0.3 kgf-m, 2.2 ft-lb)

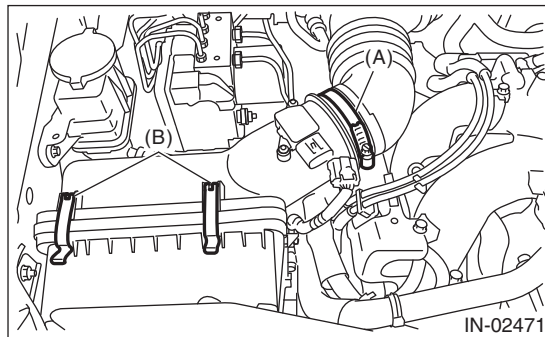

C: INSPECTION

- 1) Replace if excessively damaged or dirty.
- 2) Replace the air cleaner case (rear) when the HC adsorption filter is damaged. (U5 model)