



3. Air Cleaner Case

A: REMOVAL

1) Disconnect the ground cable from the battery.

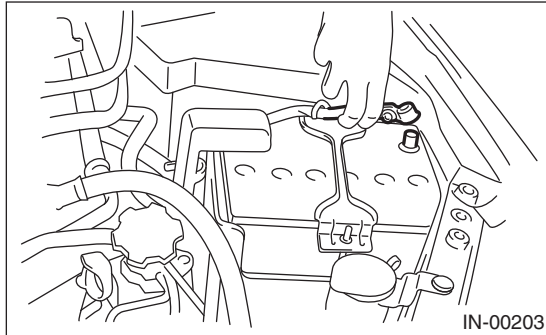


2) Disconnect the connector (A) from the mass air flow and intake air temperature sensor and remove the clip (B).

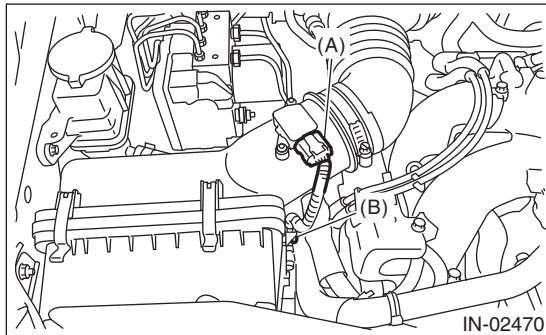


3) Loosen the clamps (A) which connect the air cleaner case and the intake boot.

4) Remove the clip (B) securing the upper side of air cleaner case.

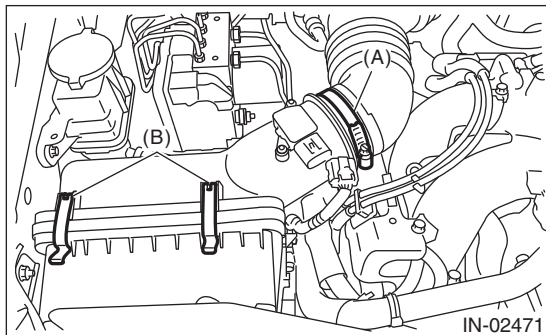


5) Remove the air cleaner case (rear) and air cleaner element.

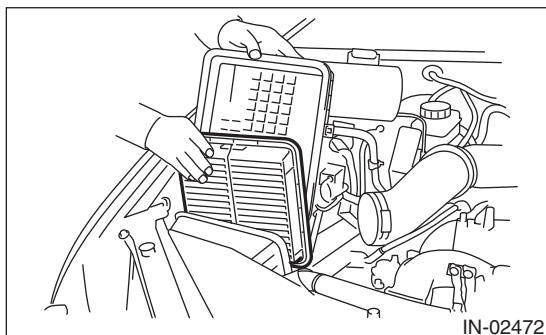

6) Remove the air intake duct (rear). <Ref. to IN(H4SO)-8, REMOVAL, Air Intake Duct.>

7) Remove the bolts (A) and nut (B) which secure the air cleaner case to body.

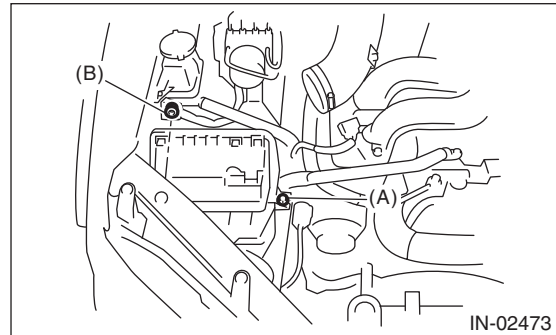

8) Remove the air cleaner case (front).

Air Cleaner Case

INTAKE (INDUCTION)

B: INSTALLATION

Install in the reverse order of removal.


Tightening torque:

Bolt (A)

6 N·m (0.6 kgf-m, 4.4 ft-lb)


NUT (B)

7.5 N·m (0.8 kgf-m, 5.5 ft-lb)

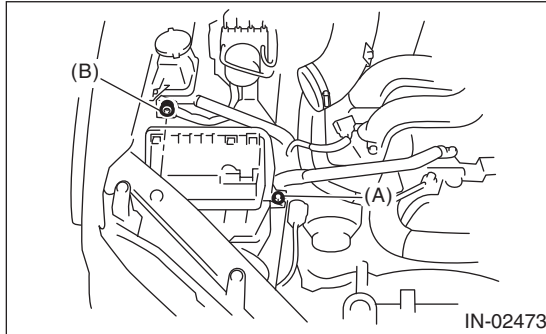

NOTE:


When installing the air cleaner case (rear), align the protrusion of the air cleaner case (rear) to the hole on the air cleaner case (front) to install.

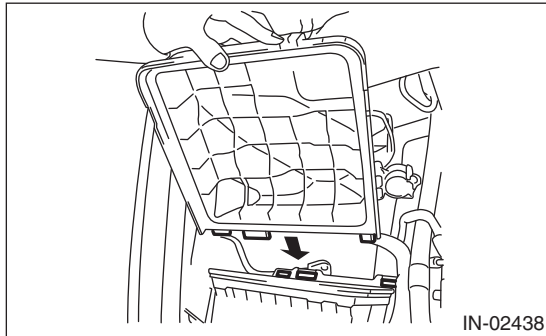

Tightening torque:

Clamp (A)

3 N·m (0.3 kgf-m, 2.2 ft-lb)

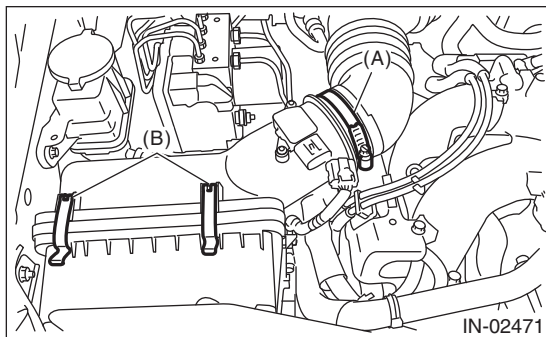

C: INSPECTION

Check for cracks or loose connections.