



5. Air Intake Duct

A: REMOVAL

- 1) Remove the clip which installs the air intake duct (rear) on the front side of body.
- 2) Remove the air intake duct (rear).

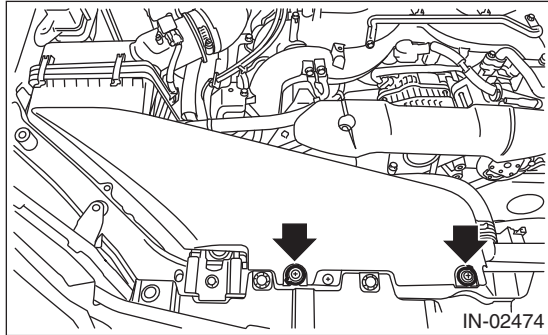

- 3) Remove the clip (A) and four claws and then remove the air intake duct (front).

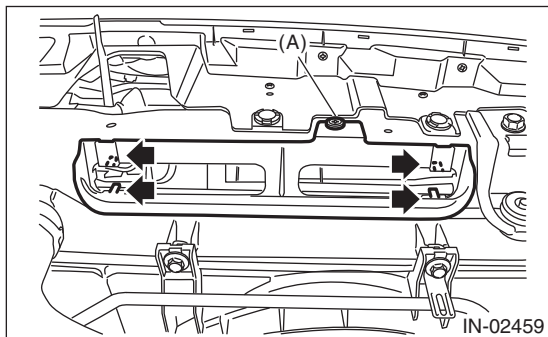

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Check for cracks or clip damage.
- 2) Check that no foreign matter is mixed in air intake duct.