

6. Resonator Chamber

A: REMOVAL

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to “Air Cleaner Case” for the removal procedure. <Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>

B: INSTALLATION

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to “Air Cleaner Case” for installation procedure. <Ref. to IN(H4SO)-6, INSTALLATION, Air Cleaner Case.>

C: INSPECTION

Check for cracks or loose connections.

Resonator Chamber

INTAKE (INDUCTION)

MECHANICAL

ME(H4SO)

	Page
1. General Description	2
2. Compression	23
3. Idle Speed	24
4. Ignition Timing	25
5. Intake Manifold Vacuum	26
6. Engine Oil Pressure	27
7. Fuel Pressure	28
8. Valve Clearance	29
9. Engine Assembly	32
10. Engine Mounting	40
11. Preparation for Overhaul	41
12. V-belt	42
13. Crank Pulley	50
14. Timing Belt Cover	52
15. Timing Belt	53
16. Cam Sprocket	59
17. Crank Sprocket	61
18. Valve Rocker Assembly	62
19. Camshaft	66
20. Cylinder Head	71
21. Cylinder Block	81
22. Oil Switching Solenoid Valve	104
23. Intake and Exhaust Valve	107
24. Piston	108
25. Connecting Rod	109
26. Crankshaft	110
27. Engine Trouble in General	111
28. Engine Noise	117