

11.Drain Filter

A: SPECIFICATION

The drain valve is a non-disassembled part, so do not remove the drain filter from drain valve. Refer to “Canister” for removal and installation procedures.
<Ref. to EC(H4DOTC)-7, REMOVAL, Canister.>
<Ref. to EC(H4DOTC)-10, INSTALLATION, Canister.>