

13.Drain Valve

A: REMOVAL

Refer to “Canister” for removal procedures. <Ref. to EC(H4DOTC)-7, REMOVAL, Canister.>

B: INSTALLATION

Refer to “Canister” for installation procedures. <Ref. to EC(H4DOTC)-10, INSTALLATION, Canister.>