

PCV Hose Assembly

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


14.PCV Hose Assembly

A: REMOVAL

CAUTION:

Do not remove unless the PCV hose, diagnostics connector and PCV valve are damaged.

- 1) Remove the collector cover.
 - 2) Remove the intake manifold.
<Ref. to FU(H4DOTC)-14, REMOVAL, Intake Manifold.>
 - 3) Remove the secondary air combination valve RH.
<Ref. to EC(H4DOTC)-24, SECONDARY AIR COMBINATION VALVE RH, REMOVAL, Secondary Air Combination Valve.>
 - 4) Fit the depression in the ST with the protrusion on the clamp to unlock.
 - 5) Remove the PCV hose assembly.
- ST 18353AA000 CLAMP PLIERS

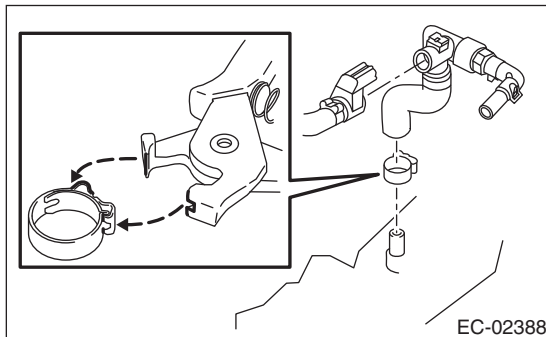


B: INSTALLATION

- 1) Install the PCV hose assembly, then lock by fitting the ST on the clamp protrusion.

NOTE:

Use a new clamp.

ST 18353AA000 CLAMP PLIERS

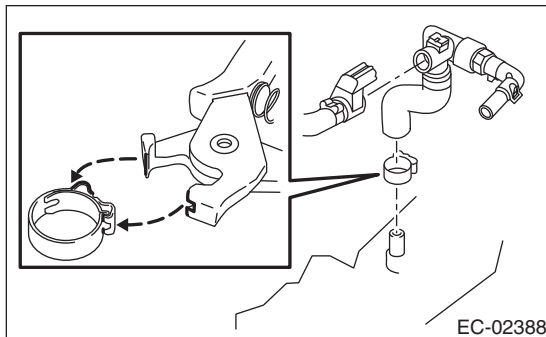

- 2) Install the secondary air combination valve RH.
<Ref. to EC(H4DOTC)-25, SECONDARY AIR COMBINATION VALVE RH, INSTALLATION, Secondary Air Combination Valve.>
- 3) Install the intake manifold.
<Ref. to FU(H4DOTC)-18, INSTALLATION, Intake Manifold.>
- 4) Install the collector cover.