


Secondary Air Pump

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


15.Secondary Air Pump

A: REMOVAL


- 1) Remove the collector cover.
- 2) Disconnect the ground cable from the battery.

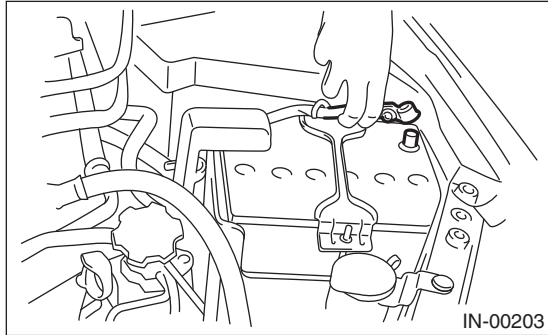

- 3) Disconnect the connector (A) and air duct (B) from secondary air pump.

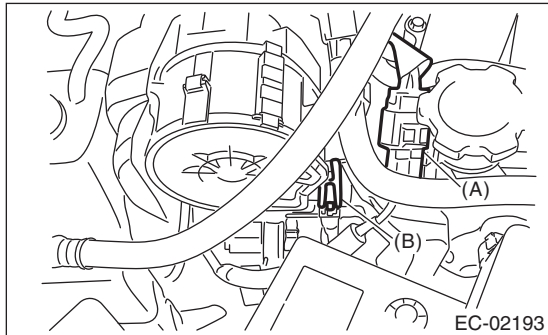

- 4) Remove the clip (A) which holds the harness on the harness stay and remove the bolts (B) which holds the secondary air pump on the vehicle.

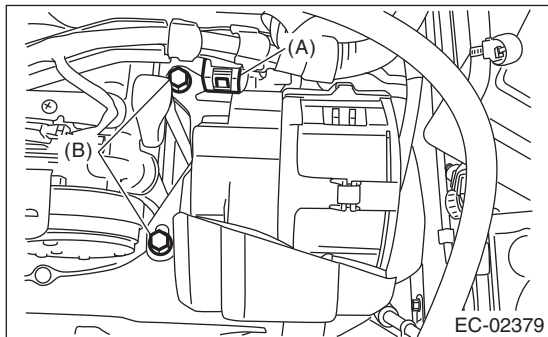


B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

19 N·m (1.9 kgf-m, 14.0 ft-lb)

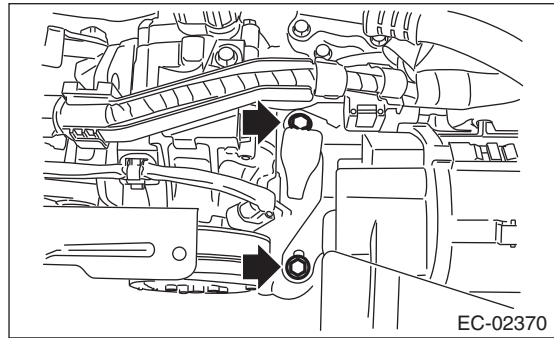

C: INSPECTION

Make sure the air duct is not cracked or loose.