

Fuel Level Sensor

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

6. Fuel Level Sensor

A: REMOVAL

For removal procedures, refer to the "FU(H4DOTC)" section. <Ref. to FU(H4DOTC)-66, REMOVAL, Fuel Level Sensor.>

B: INSTALLATION

For installation procedures, refer to the "FU(H4DOTC)" section. <Ref. to FU(H4DOTC)-66, INSTALLATION, Fuel Level Sensor.>