

Fuel Sub Level Sensor

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

8. Fuel Sub Level Sensor

A: REMOVAL

For removal procedures, refer to the "FU(H4DOTC)" section. <Ref. to FU(H4DOTC)-67, REMOVAL, Fuel Sub Level Sensor.>

B: INSTALLATION

For installation procedures, refer to the "FU(H4DOTC)" section. <Ref. to FU(H4DOTC)-68, INSTALLATION, Fuel Sub Level Sensor.>