


14. Compulsory Valve Operation Check Mode

A: OPERATION

1) Prepare the Subaru Select Monitor kit. <Ref. to EN(H4DOTC)(diag)-7, PREPARATION TOOL, General Description.>

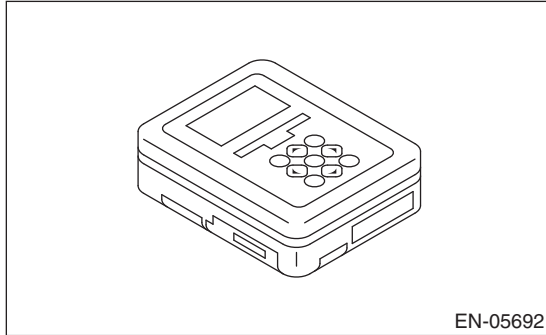

2) Prepare the personal computer which has been installed the Subaru Select Monitor.


3) Connect the USB cable between SDI (Subaru Diagnosis Interface) and USB port on the personal computer (dedicated port for the Subaru Select Monitor).

NOTE:


The dedicated port for the Subaru Select Monitor means the USB port which was used to install the Subaru Select Monitor.

4) Connect the diagnosis cable to the SDI.

5) Connect the delivery (test) mode connector (A) located under the glove box.

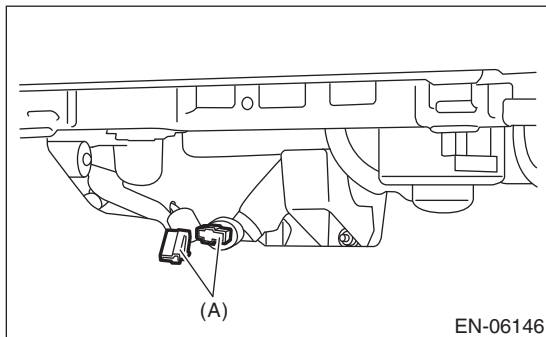

6) Connect the SDI to data link connector located in the lower portion of the instrument panel (on the driver's side).

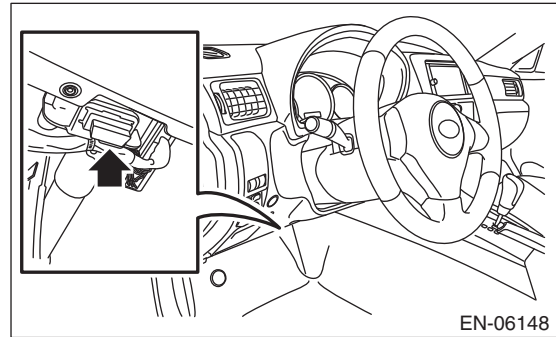

CAUTION:

Do not connect any scan tools except Subaru Select Monitor and general scan tool.

7) Start up the personal computer.

8) Turn the ignition switch to ON (engine OFF), and run the "PC application for Subaru Select Monitor".

9) On the «Main Menu» display screen, select the {Each System Check}.

10) On the «System Selection Menu» display screen, select the {Engine Control System}.

11) Click the [OK] button after the information of engine type has been displayed.

12) On the «Engine Diagnosis» display screen, select the {System Operation Check Mode}.

13) On the «System Operation Check Mode» display screen, select the {Actuator ON/OFF Operation}.

14) Select the desired compulsory actuator on the «Actuator ON/OFF Operation» display screen and click the [Next] button.

Compulsory Valve Operation Check Mode

ENGINE (DIAGNOSTICS)

15) Clicking the [End] button completes the compulsory valve operation check mode. The display will then return to the «Actuator ON/OFF Operation» screen.

- A list of the support data is shown in the following table.

Description	Display
Compulsory fuel pump relay operation check	Fuel Pump Relay
Compulsory purge control solenoid valve operation check	CPC Solenoid Valve
Compulsory purge control solenoid valve 2 operation check	CPC Solenoid 2
Compulsory radiator fan relay operation check	Radiator Fan Relay
Compulsory air conditioning relay operation check	A/C Compressor Relay
Compulsory wastegate control solenoid valve operation check	Turbocharger Wastegate Solenoid
Compulsory pressure control solenoid valve operation check	PCV Solenoid Valve
Compulsory drain valve operation check	Vent. Solenoid Valve
Compulsory secondary air combination valve 1 operation check	Secondary Air Combi Valve 1
Compulsory secondary air combination valve 2 operation check	Secondary Air Combi Valve 2
Compulsory secondary air pump relay operation check	Secondary Air Pump Relay

NOTE:

- The following parts will be displayed but not functional.

Display
EGR Solenoid Valve
ASV Solenoid Valve
FICD Solenoid
Pressure Switching Sol.1
Pressure Switching Sol.2
AAI Solenoid Valve
Tank Sensor Cntl Valve
EXH. Bypass Control Permit Flag
Sub Fuel Pump Relay
Fuel Pressure Switching Solenoid

- For detailed operation procedure, refer to the “PC application help for Subaru Select Monitor”.