


6. Muffler

A: REMOVAL

CAUTION:

Be careful not to burn yourself, because the exhaust pipe becomes extremely hot after running.


- 1) Set the vehicle on a lift.
- 2) Lift up the vehicle.
- 3) Separate the muffler from rear exhaust pipe.

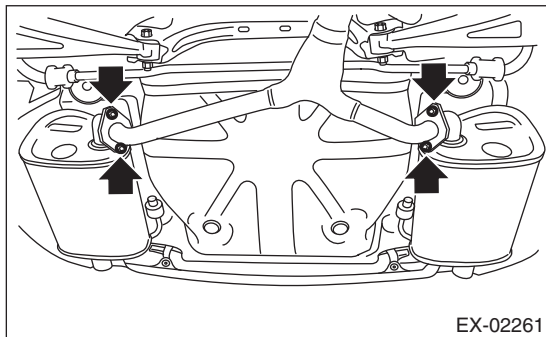

- 4) Apply a coat of spray type lubricant to the mating area of cushion rubber.
- 5) Remove the cushion rubber, and remove the muffler.

CAUTION:

Be careful not to drop the muffler during removal.

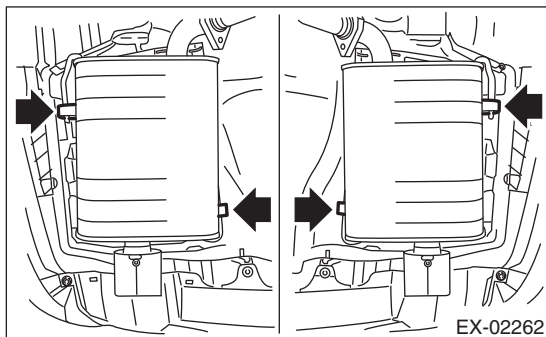

B: INSTALLATION


Install in the reverse order of removal.

NOTE:

- Use a new gasket and self-locking nut.
- After assembling, degrease the lubricant which was applied to the cushion rubber while removing/ installing.

Tightening torque:

48 N·m (4.9 kgf-m, 35.4 ft-lb)

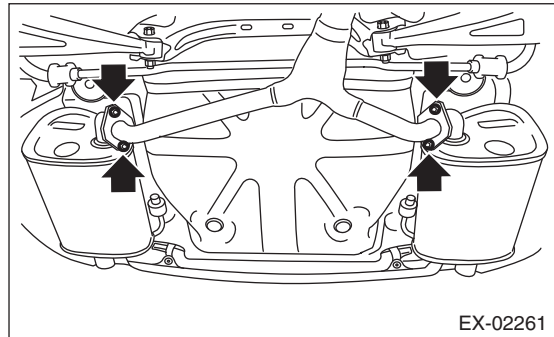

C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.
- 3) Check the cushion rubber for wear or crack.

COOLING

CO(H4DOTC)

	Page
1. General Description	2
2. Radiator Fan System	7
3. Engine Coolant	13
4. Water Pump	15
5. Thermostat	17
6. Radiator	19
7. Radiator Cap	23
8. Radiator Main Fan and Fan Motor	24
9. Radiator Sub Fan and Fan Motor	26
10. Reservoir Tank	28
11. Coolant Filler Tank	29
12. Engine Cooling System Trouble in General	30