



17.Rear Oxygen Sensor

A: REMOVAL

- 1) Set the vehicle on a lift.
- 2) Disconnect the ground cable from battery.

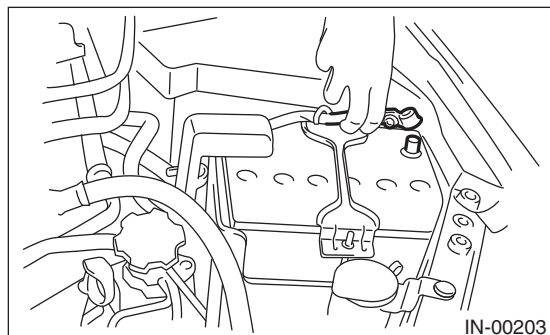


- 3) Lift up the vehicle.
- 4) Disconnect the connector from the rear oxygen sensor, and remove the clip (A) holding the rear oxygen sensor harness.

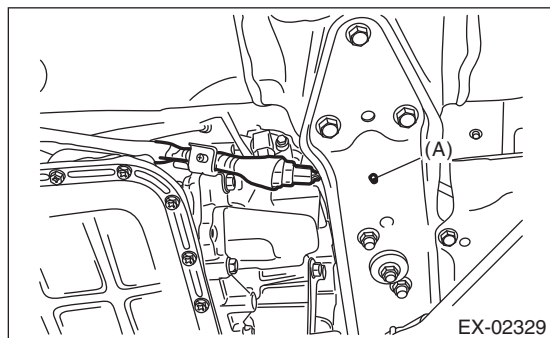

- 5) Apply spray-type lubricant or equivalent to the threaded portion of rear oxygen sensor, and leave it for one minute or more.
- 6) Remove the rear oxygen sensor.

CAUTION:

When removing the rear oxygen sensor, wait until exhaust pipe cools, otherwise it will damage the exhaust pipe.

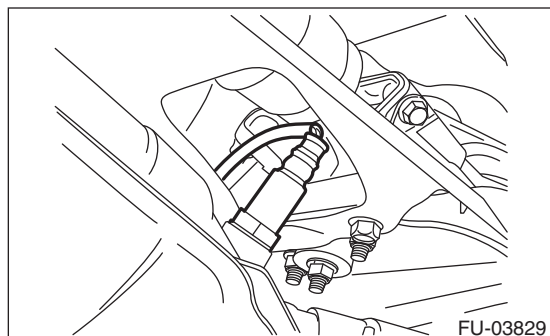

B: INSTALLATION

- 1) Before installing rear oxygen sensor, apply the anti-seize compound only to the threaded portion of rear oxygen sensor to make the next removal easier.

CAUTION:

Never apply anti-seize compound to the protector of rear oxygen sensor.


Anti-seize compound:

NEVER-SEEZ NSN, JET LUBE SS-30 or equivalent


- 2) Install the rear oxygen sensor.

Tightening torque:

21 N·m (2.1 kgf-m, 15.5 ft-lb)

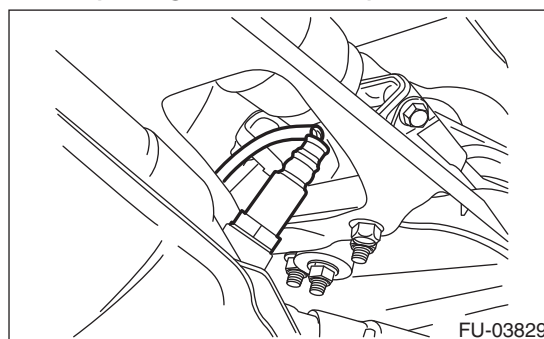

- 3) Connect the connector to the rear oxygen sensor, and hold the rear oxygen sensor harness with clip (A).

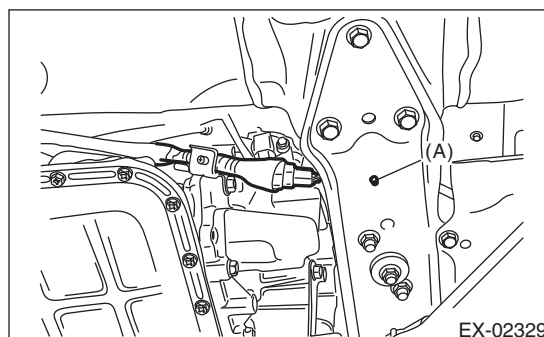

- 4) Lower the vehicle.
- 5) Connect the battery ground cable to the battery.

