


Fuel Pump Control Unit

FUEL INJECTION (FUEL SYSTEMS)

22. Fuel Pump Control Unit


A: REMOVAL

1) Disconnect the ground cable from battery.

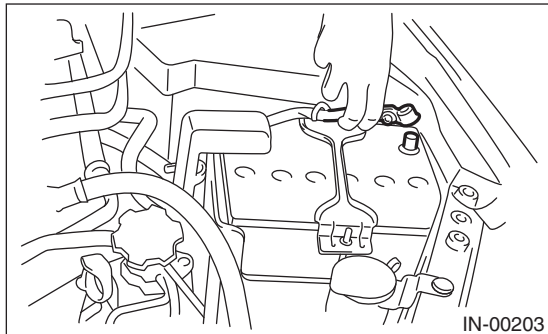

2) Remove the rear quarter trim of the right side.
<Ref. to EI-55, REMOVAL, Rear Quarter Trim.>

3) Remove the fuel pump control unit.

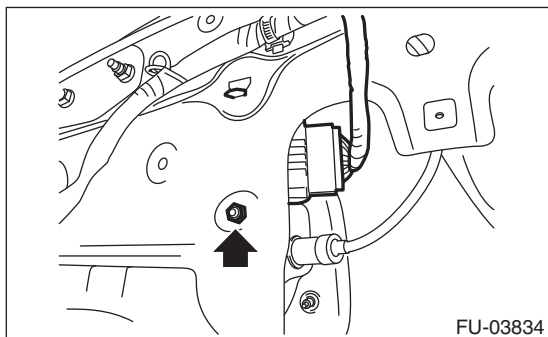

4) Disconnect the connector from fuel pump control unit.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

5 N·m (0.5 kgf-m, 3.7 ft-lb)