


## 31.Purge Damper

### A: REMOVAL


#### WARNING:

Place “NO OPEN FLAMES” signs near the working area.

1) Remove the purge damper from the purge damper stay.

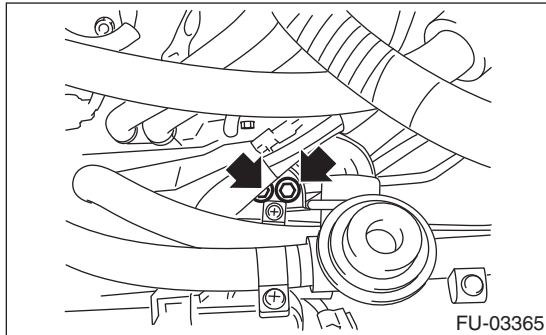

2) Disconnect the evaporation hose from the purge damper.

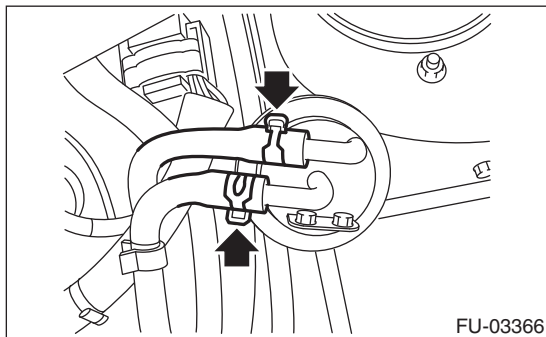

### B: INSTALLATION

#### CAUTION:

If there is damage on the evaporation hose, replace with a new hose.

Install in the reverse order of removal.

#### Tightening torque:

**8 N·m (0.8 kgf-m, 5.9 ft-lb)**

