


Crankshaft Position Sensor

FUEL INJECTION (FUEL SYSTEMS)


5. Crankshaft Position Sensor

A: REMOVAL


- 1) Remove the collector cover.
- 2) Disconnect the ground cable from the battery.

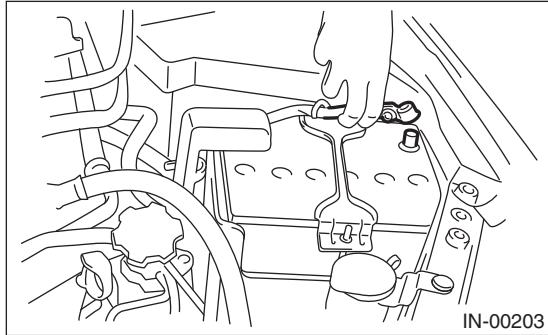

- 3) Remove the bolt which installs crankshaft position sensor to cylinder block.

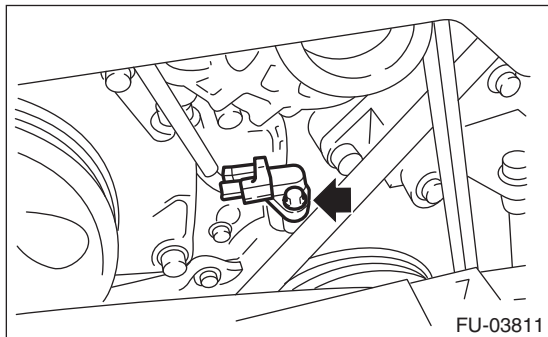

- 4) Remove the crankshaft position sensor, and then disconnect the connector from it.

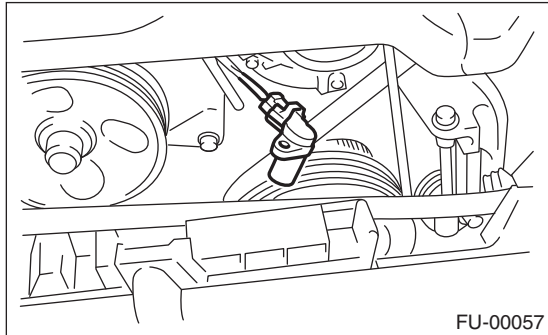

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

6.4 N·m (0.7 kgf-m, 4.7 ft-lb)

