


6. Camshaft Position Sensor


A: REMOVAL

1. CAMSHAFT POSITION SENSOR RH

- 1) Remove the collector cover.
- 2) Disconnect the ground cable from battery.

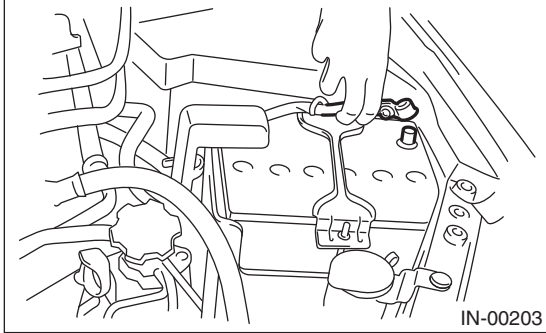


- 3) Disconnect the connector from camshaft position sensor RH.
- 4) Remove the camshaft position sensor RH from the rear side of the cylinder head.

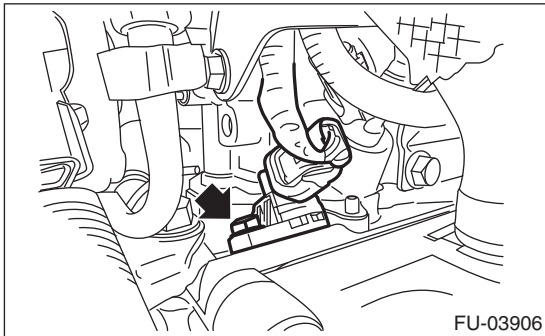


2. CAMSHAFT POSITION SENSOR LH

- 1) Disconnect the ground cable from the battery.

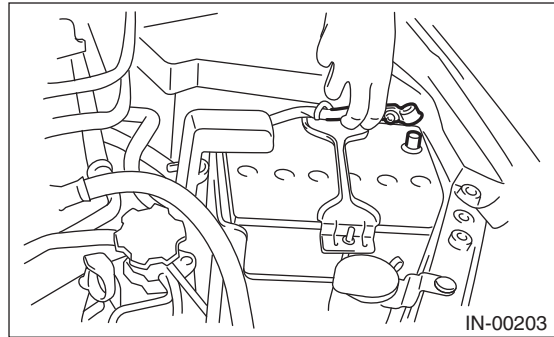

- 2) Remove the intake manifold. <Ref. to FU(H4DOTC)-14, REMOVAL, Intake Manifold.>
- 3) Remove the camshaft position sensor LH.

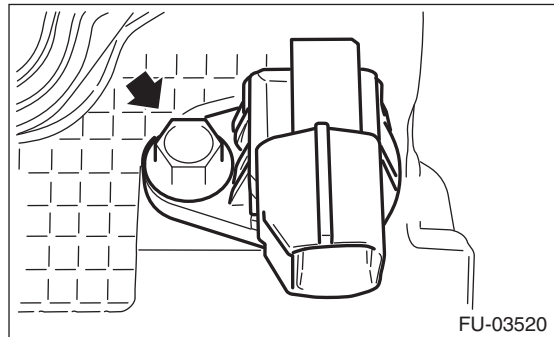

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

6.4 N·m (0.7 kgf-m, 4.7 ft-lb)