

# General Description


## IGNITION

### 1. General Description

#### A: SPECIFICATION

| Item          |                                       | Specification                     |
|---------------|---------------------------------------|-----------------------------------|
| Ignition coil | Type                                  | FK0334                            |
|               | Ignition system                       | Independent ignition coil         |
|               | Manufacturer                          | Diamond Electric                  |
| Spark plug    | Manufacturer and type                 | NGK: SILFR6A                      |
|               | Thread size (diameter, pitch, length) | mm 14, 1.25, 26.5                 |
|               | Spark plug gap                        | mm (in) 0.7 — 0.8 (0.028 — 0.031) |
|               | Electrode                             | Iridium                           |

#### B: COMPONENT

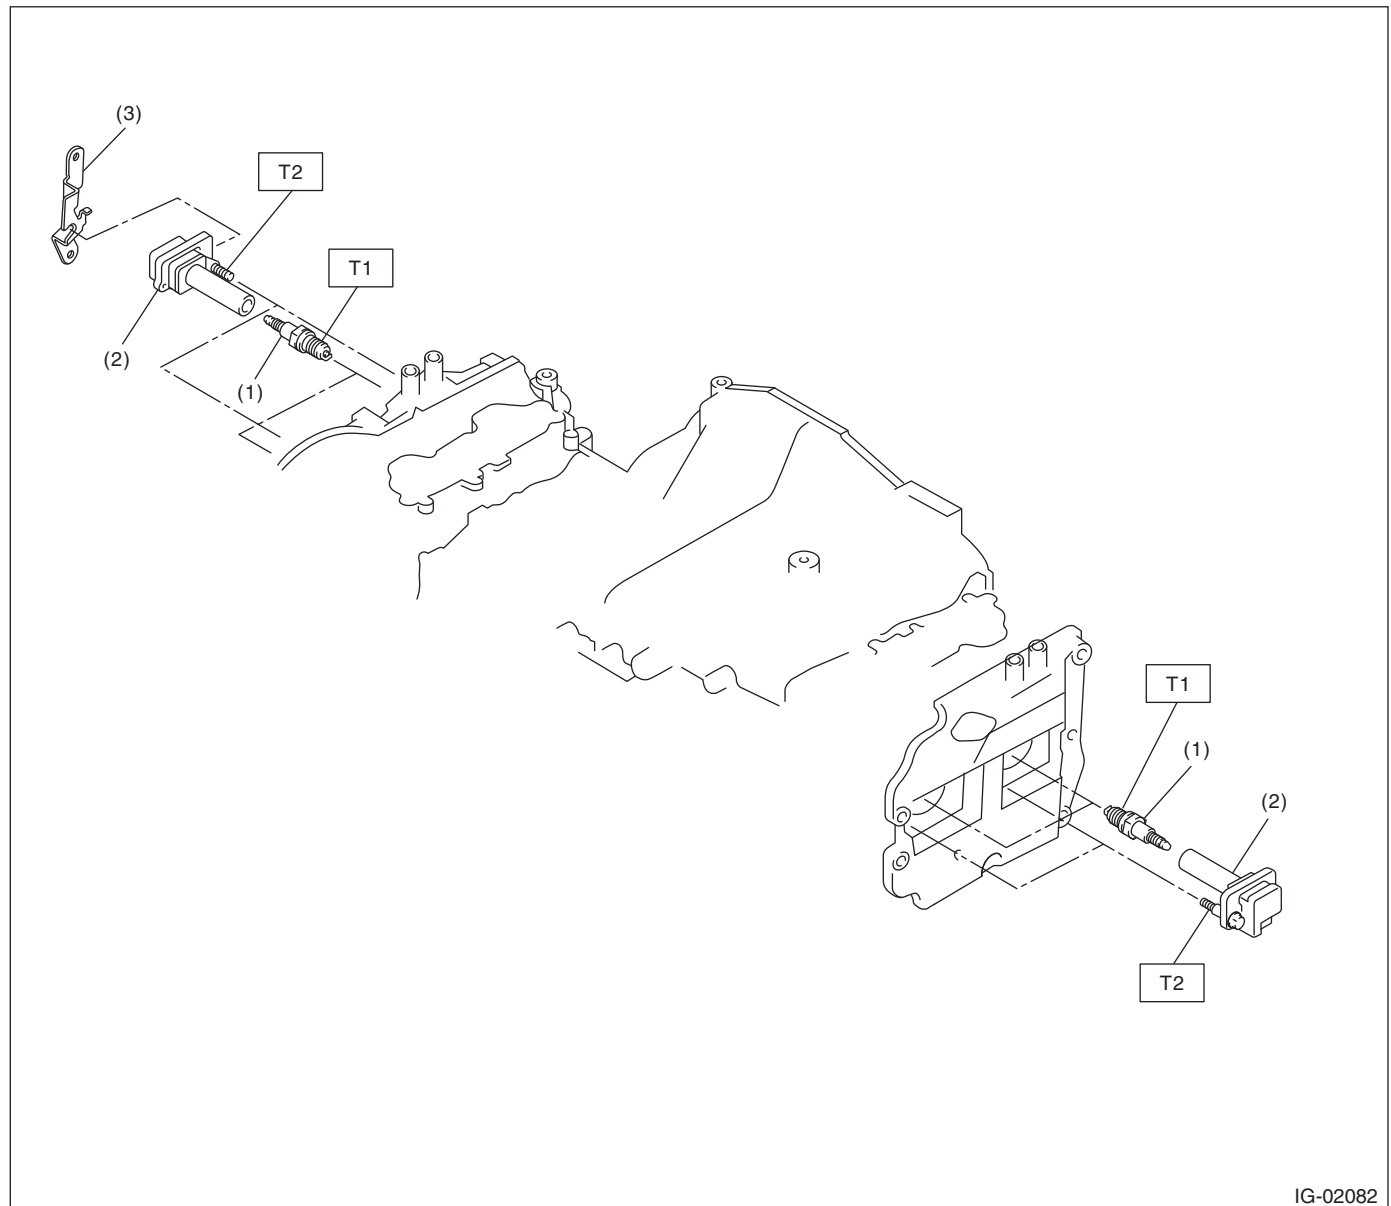

IG-02082

- (1) Spark plug
- (2) Ignition coil

- (3) Engine harness stay  
(#3 ignition coil side)

**Tightening torque: N·m (kgf-m, ft-lb)**  
**T1: 21 (2.1, 15.5)**  
**T2: 16 (1.6, 11.8)**

### **C: CAUTION**

- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from the battery.