



3. Air Cleaner Case

A: REMOVAL


- 1) Remove the collector cover.
- 2) Disconnect the ground cable from the battery.

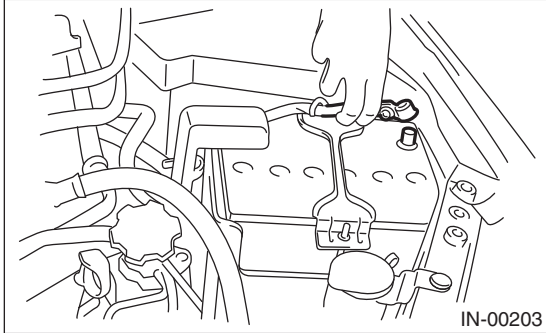

- 3) Remove the air intake duct (rear). <Ref. to IN(H4DOTC)-9, REMOVAL, Air Intake Duct.>
- 4) Disconnect the connector (A) from mass air flow and intake air temperature sensor.
- 5) Loosen the clamp (B) which connects the air intake boot and intake duct.
- 6) Remove the clip (C) from the air cleaner case.

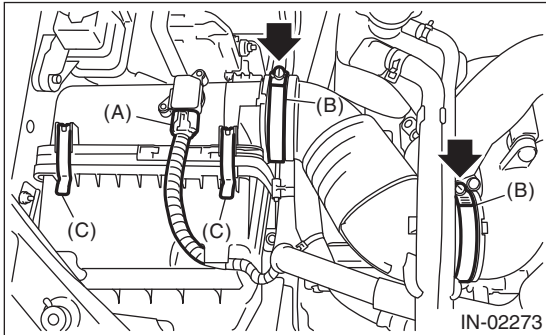

- 7) Remove the air cleaner case (rear) and air intake boot.
- 8) Remove the air cleaner element.
- 9) Remove the bolts (A) and nuts (B) which secure the air cleaner case (front) to the body.

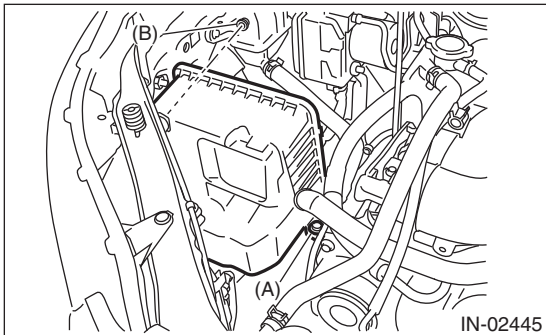


- 10) Remove the air cleaner case (front).

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

When installing the air cleaner case (rear), align the protrusion of the air cleaner case (rear) to the hole on the air cleaner case (front) to install.

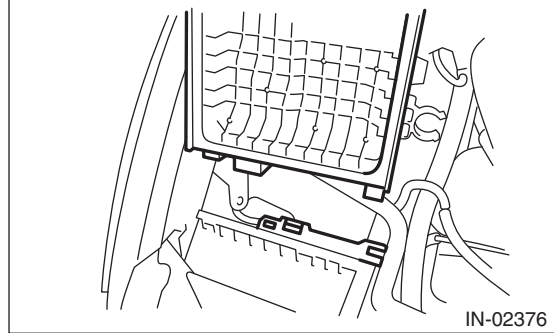


Tightening torque:

Bolt (A)

6 N·m (0.6 kgf-m, 4.4 ft-lb)


Nut (B)

7.5 N·m (0.8 kgf-m, 5.5 ft-lb)

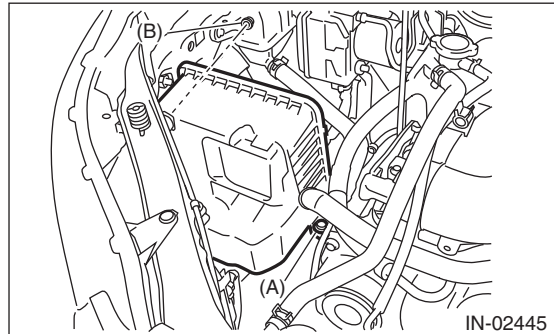

Tightening torque:

2.5 N·m (0.3 kgf-m, 1.8 ft-lb)

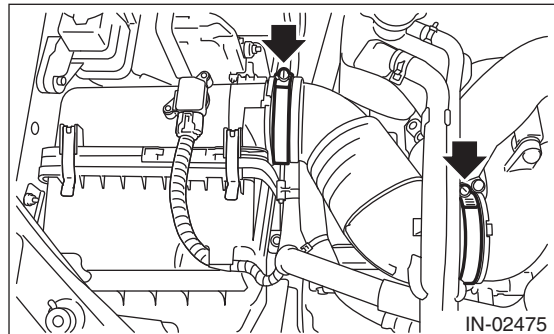

C: INSPECTION

Check for cracks or loose connections.