

9. Resonator Chamber

A: REMOVAL

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to “Air Cleaner Case” for the removal procedure. <Ref. to IN(H4DOTC)-8, REMOVAL, Air Cleaner Case.>

B: INSTALLATION

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to “Air Cleaner Case” for installation procedure. <Ref. to IN(H4DOTC)-8, INSTALLATION, Air Cleaner Case.>

C: INSPECTION

Check for cracks or loose connections.

MECHANICAL

ME(H4DOTC)

	Page
1. General Description	2
2. Compression	20
3. Idle Speed	21
4. Ignition Timing	22
5. Intake Manifold Vacuum	23
6. Engine Oil Pressure	24
7. Fuel Pressure	25
8. Valve Clearance	26
9. Engine Assembly	30
10. Engine Mounting	37
11. Preparation for Overhaul	38
12. V-belt	39
13. Crank Pulley	47
14. Timing Belt Cover	49
15. Timing Belt	50
16. Cam Sprocket	57
17. Crank Sprocket	59
18. Camshaft	60
19. Cylinder Head	66
20. Cylinder Block	75
21. Intake and Exhaust Valve	97
22. Piston	98
23. Connecting Rod	99
24. Crankshaft	100
25. Engine Trouble in General	101
26. Engine Noise	107