



6. Oil Pressure Switch

A: REMOVAL


- 1) Remove the collector cover.
- 2) Disconnect the ground cable from the battery.

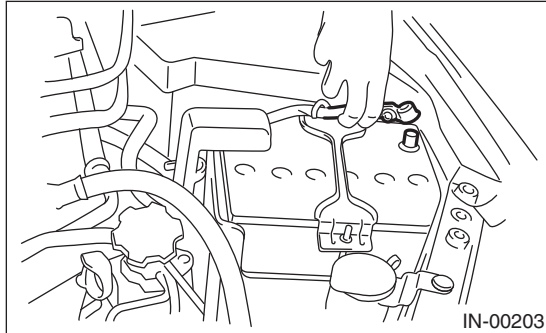

- 3) Remove the generator from the bracket. <Ref. to SC(H4SO)-15, REMOVAL, Generator.>
- 4) Disconnect the terminal from oil pressure switch.

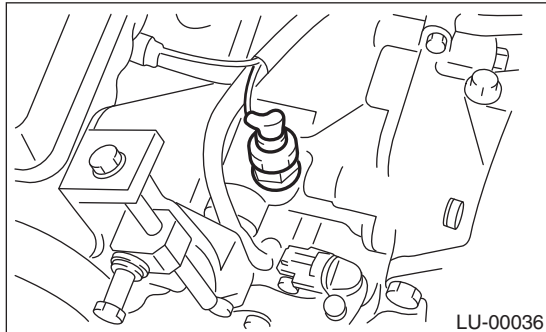

- 5) Remove the oil pressure switch.

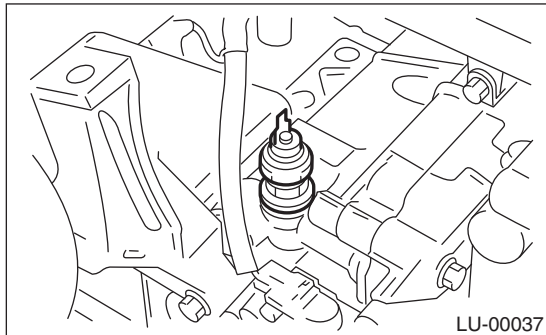


B: INSTALLATION

- 1) Apply liquid gasket to the oil pressure switch threads.

Liquid gasket:


THREE BOND 1324 (Part No. 004403007) or equivalent

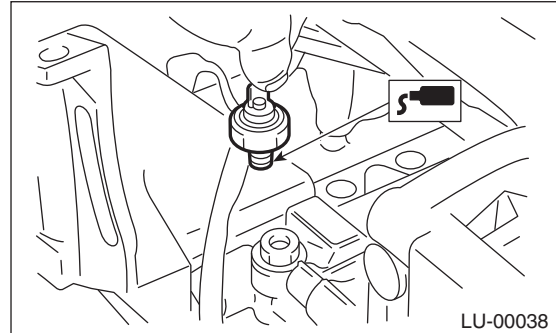


- 2) Install the oil pressure switch to the cylinder block.

Tightening torque:

25 N·m (2.5 kgf-m, 18.4 ft-lb)

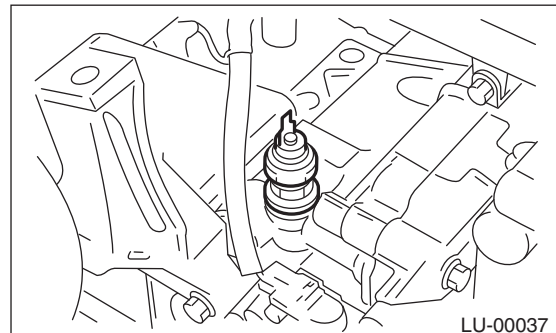

- 3) Connect the terminal to the oil pressure switch.

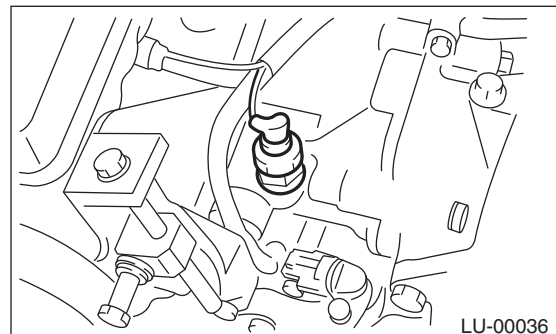


- 4) Install the generator to the bracket. <Ref. to SC(H4SO)-16, INSTALLATION, Generator.>

Oil Pressure Switch

LUBRICATION

5) Connect the ground cable to the battery.

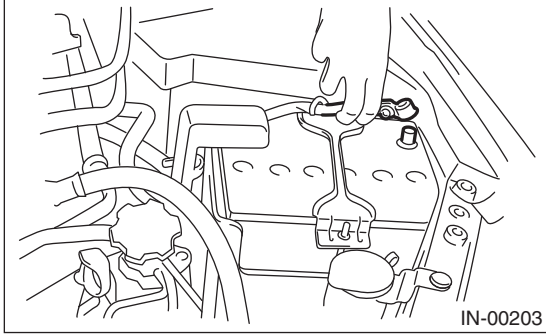

6) Install the collector cover.

C: INSPECTION

Check the oil pressure switch installation portion for oil leakage and oil seepage.