

21.Intake and Exhaust Valve

A: SPECIFICATION

Refer to “Cylinder Head” for removal and installation procedures of the intake and exhaust valves. <Ref. to ME(H4DOTC)-66, REMOVAL, Cylinder Head.>
<Ref. to ME(H4DOTC)-67, INSTALLATION, Cylinder Head.>