 


Citroen Relay (2014 – 2018) – fuse box diagram

Year of production: 2014, 2015, 2016, 2017, 2018

Dashboard, left-hand side, fuses

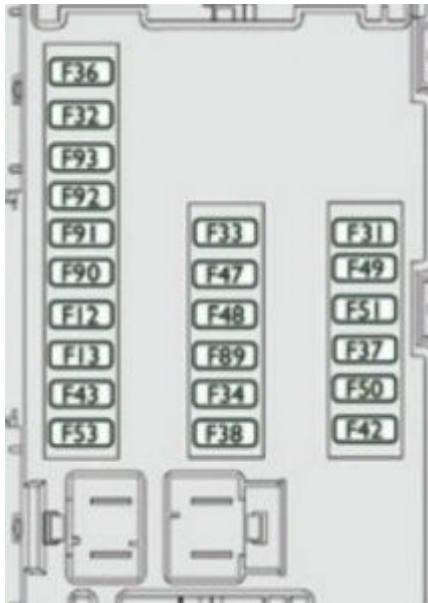 


Citroen Relay – fuse box diagram – dashboard (left hand side)

No.	A	Allocation
12	7.5	Right-hand dipped headlamp
13	7.5	Left-hand dipped headlamp
31	5	Engine compartment control unit relay – Dashboard control unit relay (ignition switch +)
32	7.5	Cabin lighting (battery +)
33	7.5	Battery check sensor on Stop & Start version (battery +)
34	7.5	Minibus interior lighting – Hazard warning lamps
36	10	Audio system – Air conditioning controls – Alarm – Tachograph – Battery cut-off control unit – Additional heating programmer (battery +)
37	7.5	Brake lamp switch – Third brake lamp – Instrument panel (ignition +)
38	20	Central door locking (battery +)
42	5	ABS control unit and sensor – ASR sensor – DSC sensor – Brake lamp switch
43	20	Windscreen wiper motor (ignition switch +)
47	20	Driver's electric window motor

48	20	Passenger's electric window motor
49	5	Parking sensors control unit – Audio system – Steering mounted controls – Centre and side switch panels -Auxiliary switch panel – Battery cut-off control unit (ignition switch +)
50	7.5	Airbags and pre-tensioners control unit
51	5	Tachograph – Power steering control unit – Air conditioning – Reversing lamps – Water in Diesel sensor -Air flow sensor (ignition switch +)
53	7.5	Instrument panel (battery +)
89	–	Not used
90	7.5	Left-hand main beam
91	7.5	Right-hand main beam
92	7.5	Left-hand front foglamp
93	7.5	Right-hand front foglamp

Door pillar, right-hand side, fuses

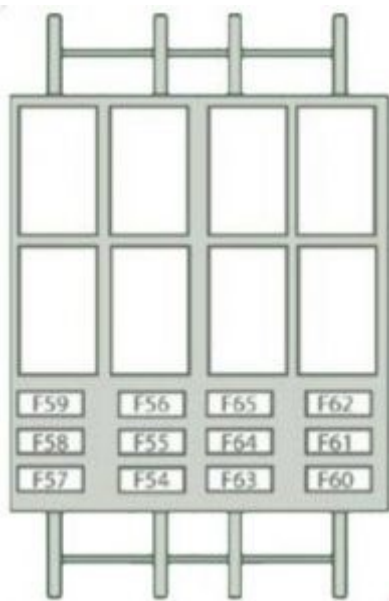 


Citroen Relay – fuse box diagram – dashboard (right hand side)

No.	A	Allocation
54	–	Not used
55	15	Heated seats
56	15	Rear passenger 12V socket
57	10	Under seat additional heating

58	15	Heated rear screen, left-hand
59	15	Heated rear screen, right-hand
60	–	Not used
61	–	Not used
62	–	Not used
63	10	Rear passenger additional control
64	–	Not used
65	30	Rear passenger additional heating fan

Fuses in the engine compartment

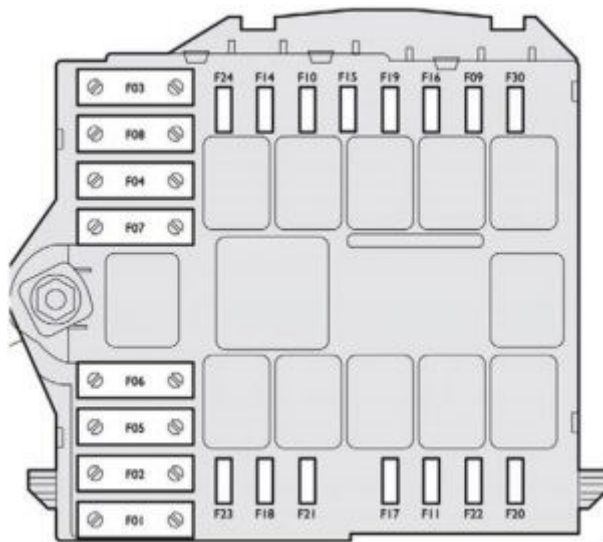

Citroen Relay – fuse box diagram – engine

compartment

No.	A	Allocation
1	40	ABS pump supply
2	50	Diesel pre-heat unit
3	30	Ignition switch – Starter motor
4	40	Fuel heater
5	20/50	Cabin ventilation with additional programmable heating (battery +)
6	40/60	Cabin fan maximum speed (battery +)
7	40/50/60	Cabin fan minimum speed (battery +)
8	40	Cabin fan assembly (ignition switch +)

9	15	Rear 12 V socket (battery +)
10	15	Horn
11	–	Not used
14	15	Front 12 V socket (battery +)
15	15	Cigarette lighter (battery +)
16	–	Not used
17	–	Not used
18	7.5	Engine management control unit (battery +)
19	7.5	Air conditioning compressor
20	30	Screenwash/headlamp wash pump
21	15	Fuel pump supply
22	–	Not used
23	30	ABS electrovalves
24	7.5	Auxiliary switch panel – Door mirror controls and folding (ignition switch +)
30	15	Door mirror heating

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.