



## G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

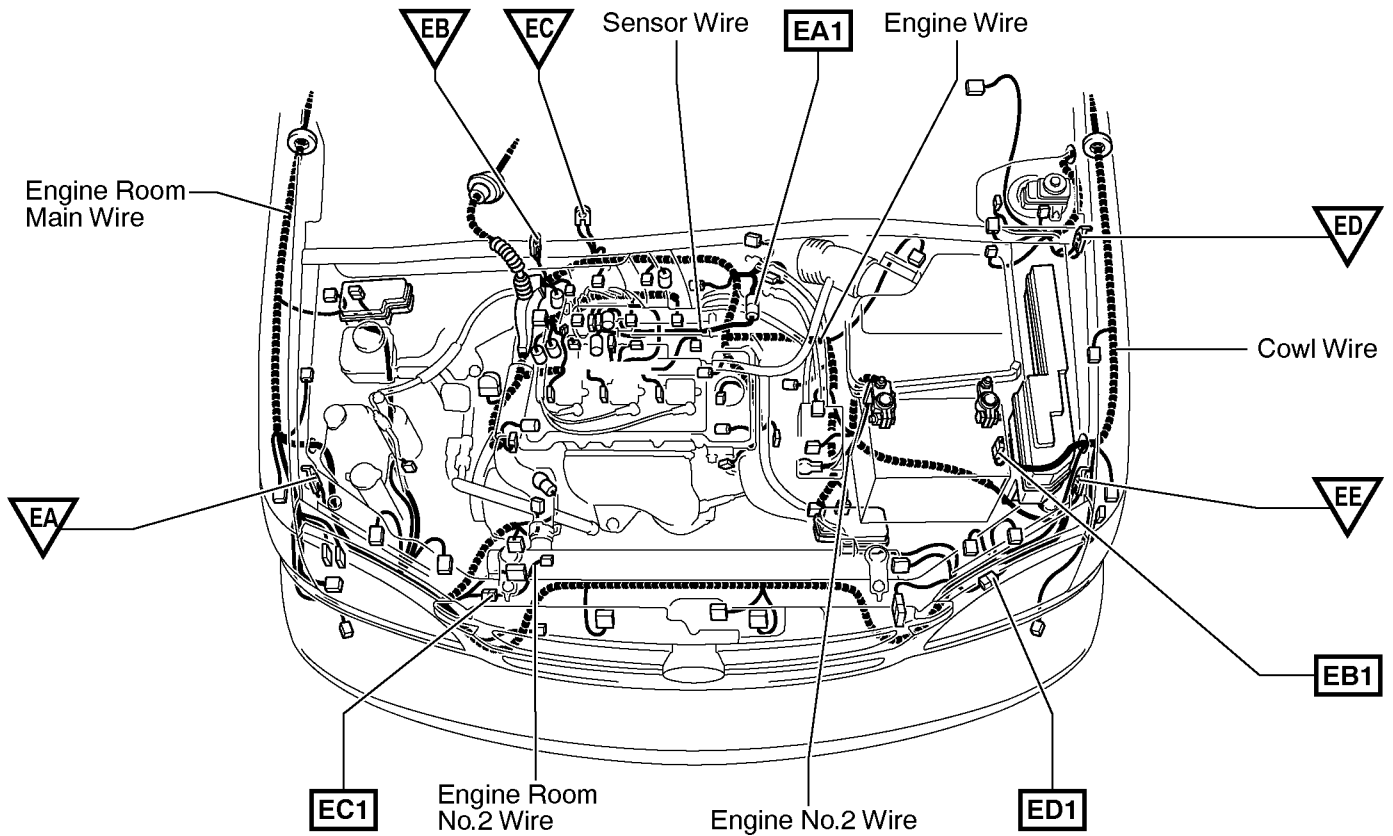

○ : Location of Splice Points

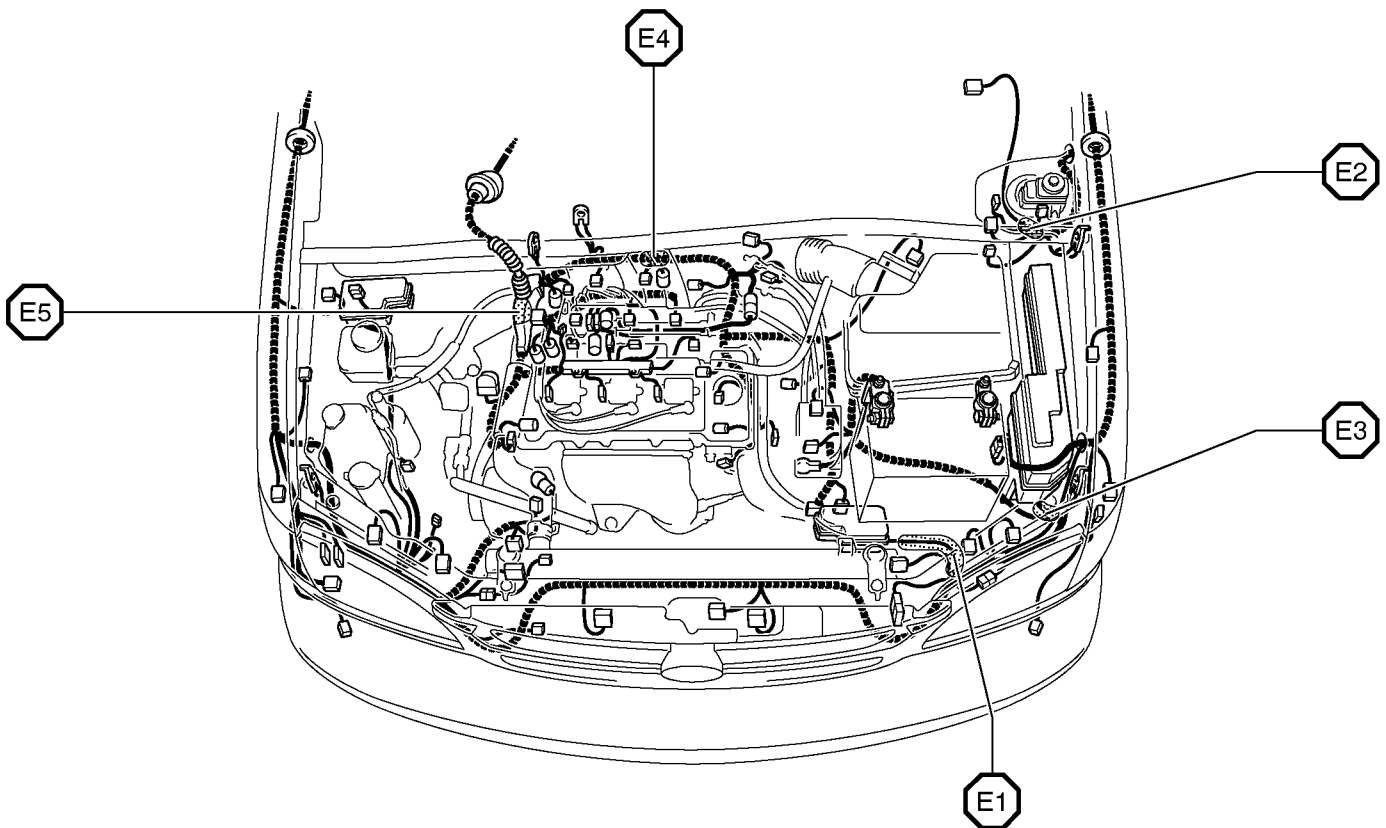


## Connector Joining Wire Harness and Wire Harness

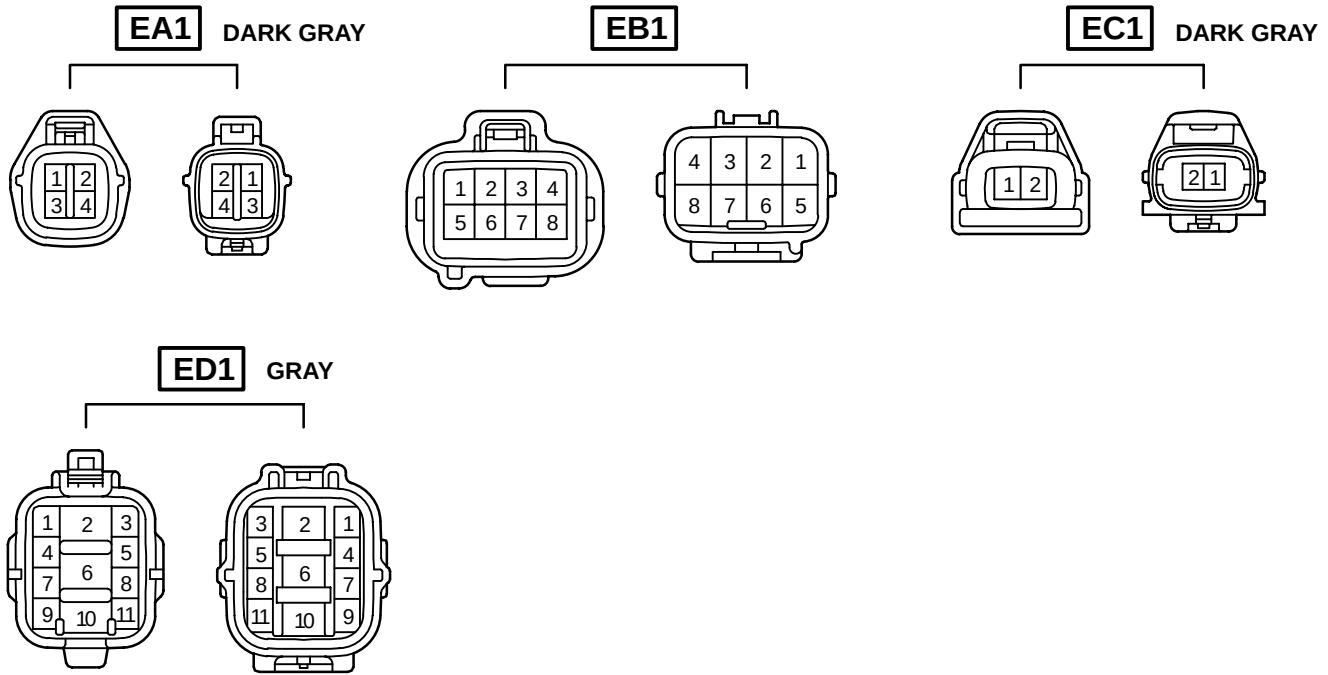


| Code | Joining Wire Harness and Wire Harness (Connector Location)                           |
|------|--------------------------------------------------------------------------------------|
| EA1  | Engine Wire and Sensor Wire (Near the Cylinder Head of the Left Bank)                |
| EB1  | Cowl Wire and Engine Room Main Wire (Inside the Lower Cover of Engine Room J/B No.2) |
| EC1  | Engine Room Main Wire and Engine Room No.2 Wire (Near the Condenser Fan Motor)       |
| ED1  | Cowl Wire and Engine Room Main Wire (Behind Headlight LH)                            |

## G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

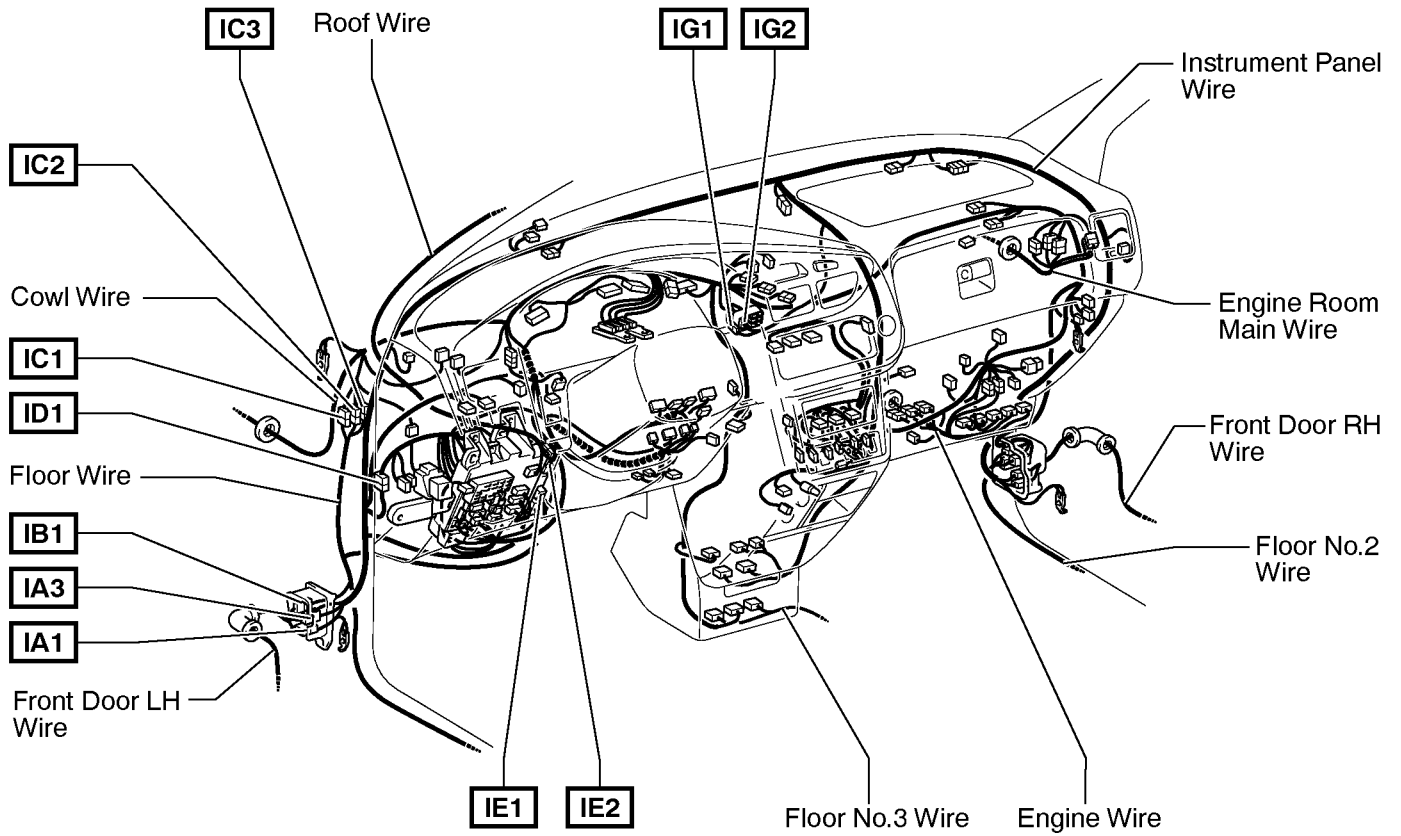

▽ : Location of Ground Points

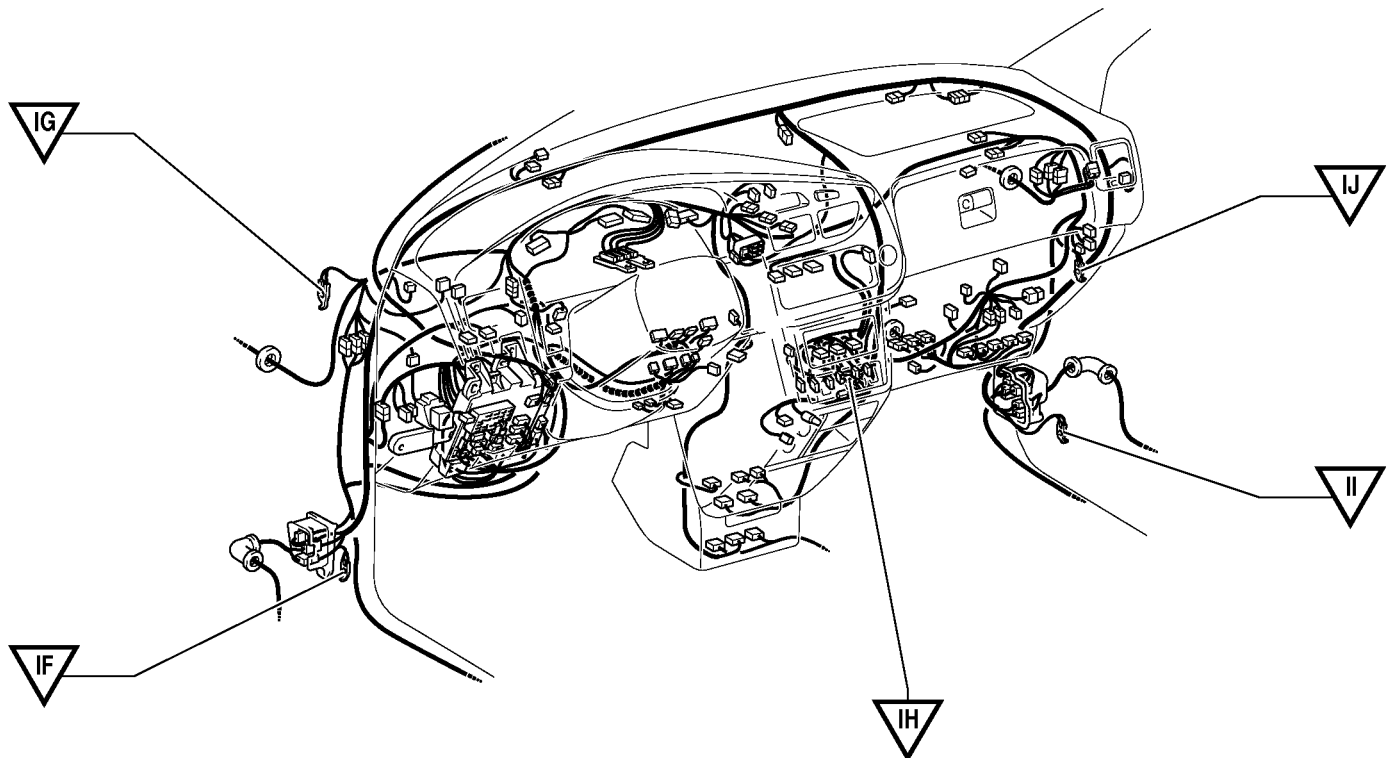


## Connector Joining Wire Harness and Wire Harness

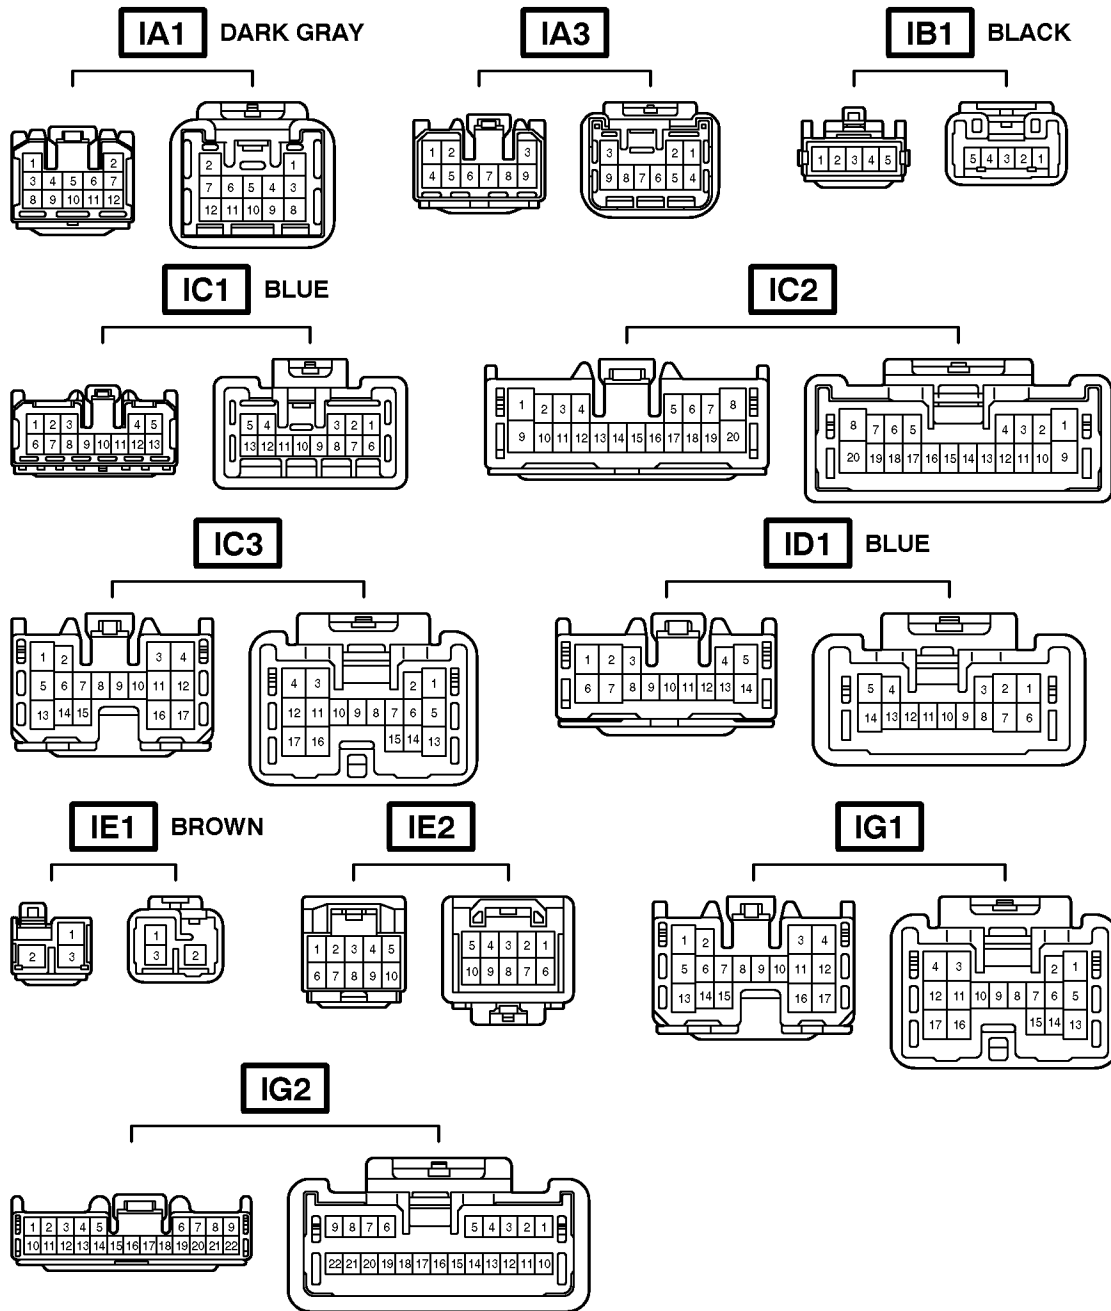


| Code | Joining Wire Harness and Wire Harness (Connector Location)                    |
|------|-------------------------------------------------------------------------------|
| IA1  | Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)                |
| IA3  |                                                                               |
| IB1  | Floor Wire and Instrument Panel Wire (Left Kick Panel)                        |
| IC1  | Cowl Wire and Floor Wire (Left Cowl Side Panel)                               |
| IC2  |                                                                               |
| IC3  | Instrument Panel Wire and Cowl Wire (The Back Side of the Lower Finish Panel) |
| ID1  |                                                                               |
| IE1  | Floor Wire and Cowl Wire (The Back Side of the Lower Finish Panel)            |
| IE2  |                                                                               |
| IG1  | Instrument Panel Wire and Cowl Wire (Behind the Combination Meter)            |
| IG2  |                                                                               |

## G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

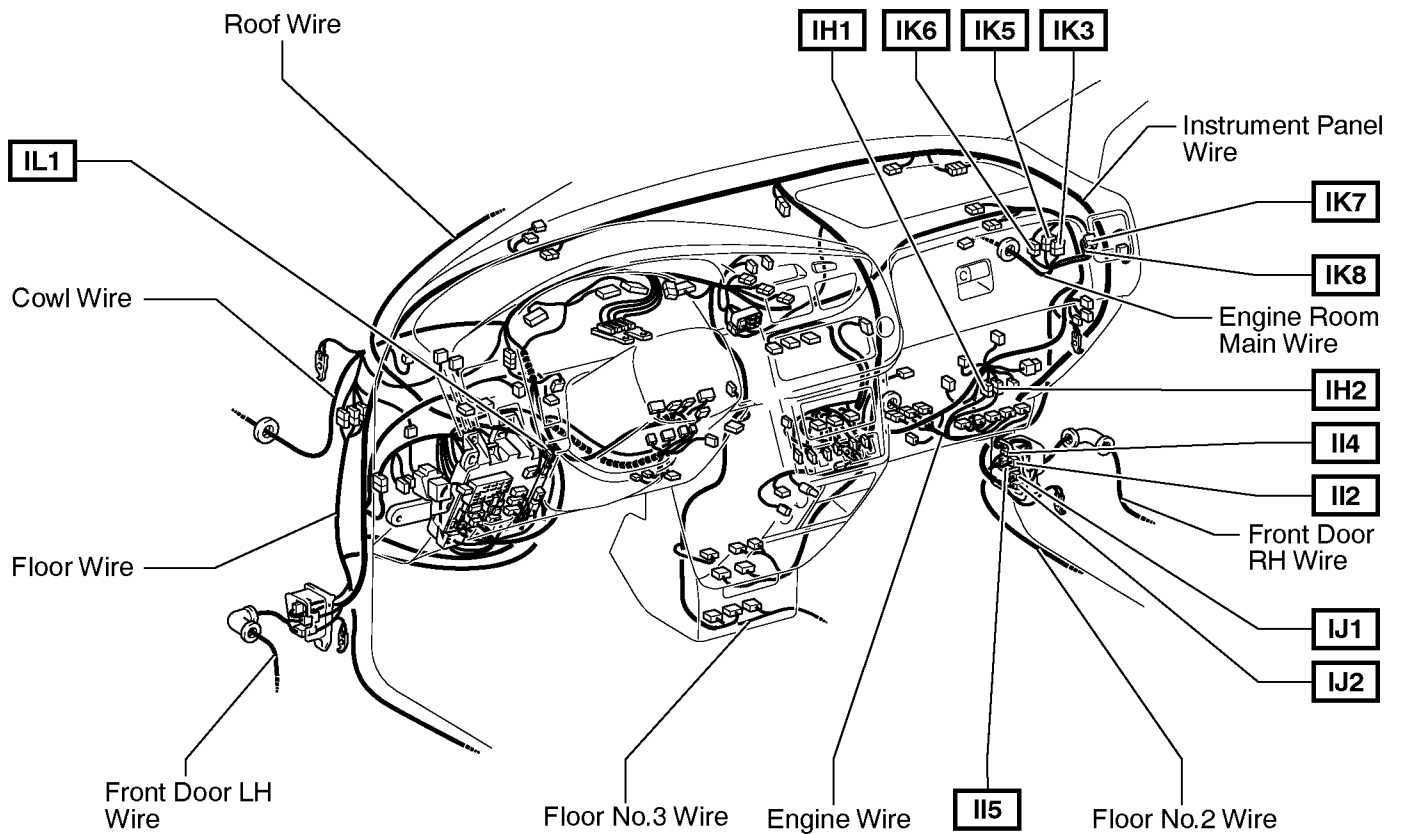

○ : Location of Splice Points

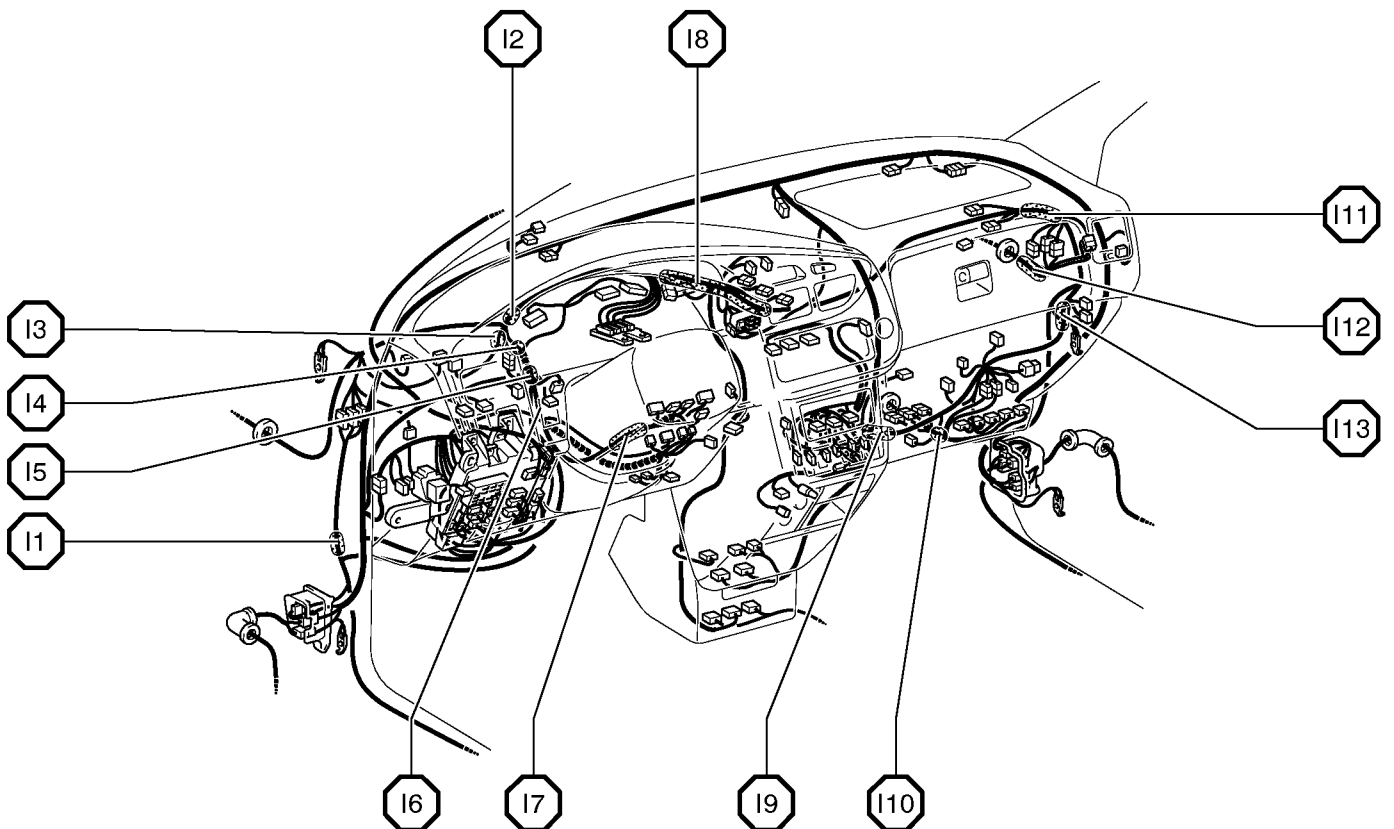

## Connector Joining Wire Harness and Wire Harness

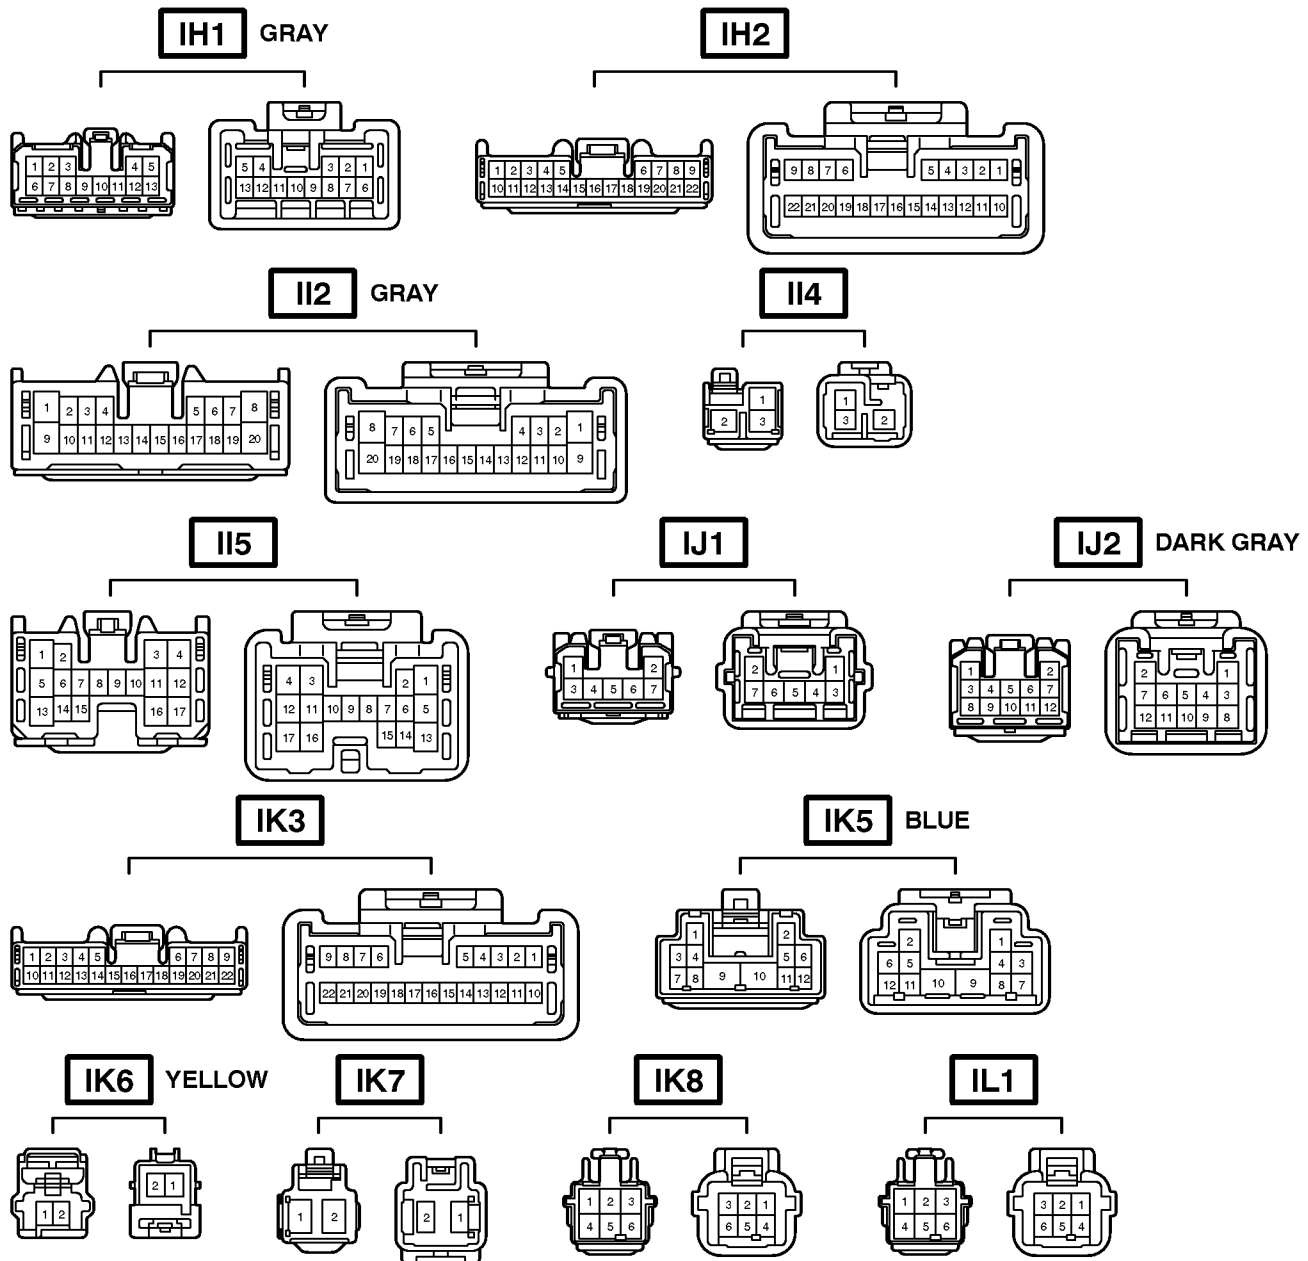


| Code | Joining Wire Harness and Wire Harness (Connector Location)        |
|------|-------------------------------------------------------------------|
| IH1  | Engine Wire and Cowl Wire (Front Side of the Blower Motor)        |
| IH2  |                                                                   |
| II2  | Floor No.2 Wire and Cowl Wire (Right Kick Panel)                  |
| II4  |                                                                   |
| II5  |                                                                   |
| IJ1  | Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)   |
| IJ2  |                                                                   |
| IK3  | Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)       |
| IK5  |                                                                   |
| IK6  |                                                                   |
| IK7  |                                                                   |
| IK8  |                                                                   |
| IL1  | Roof Wire and Cowl Wire (The Back Side of the Lower Finish Panel) |


## G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

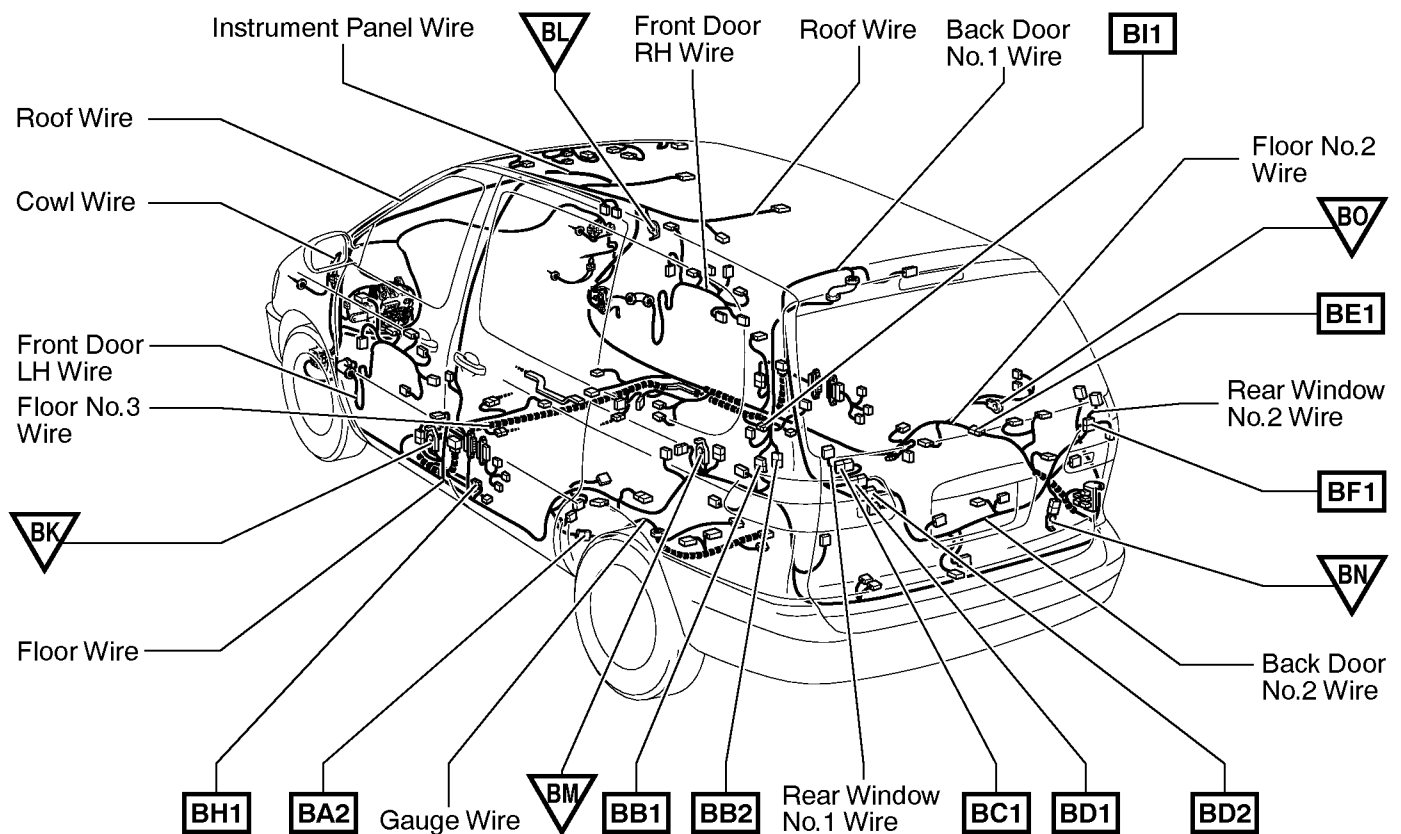

○ : Location of Splice Points

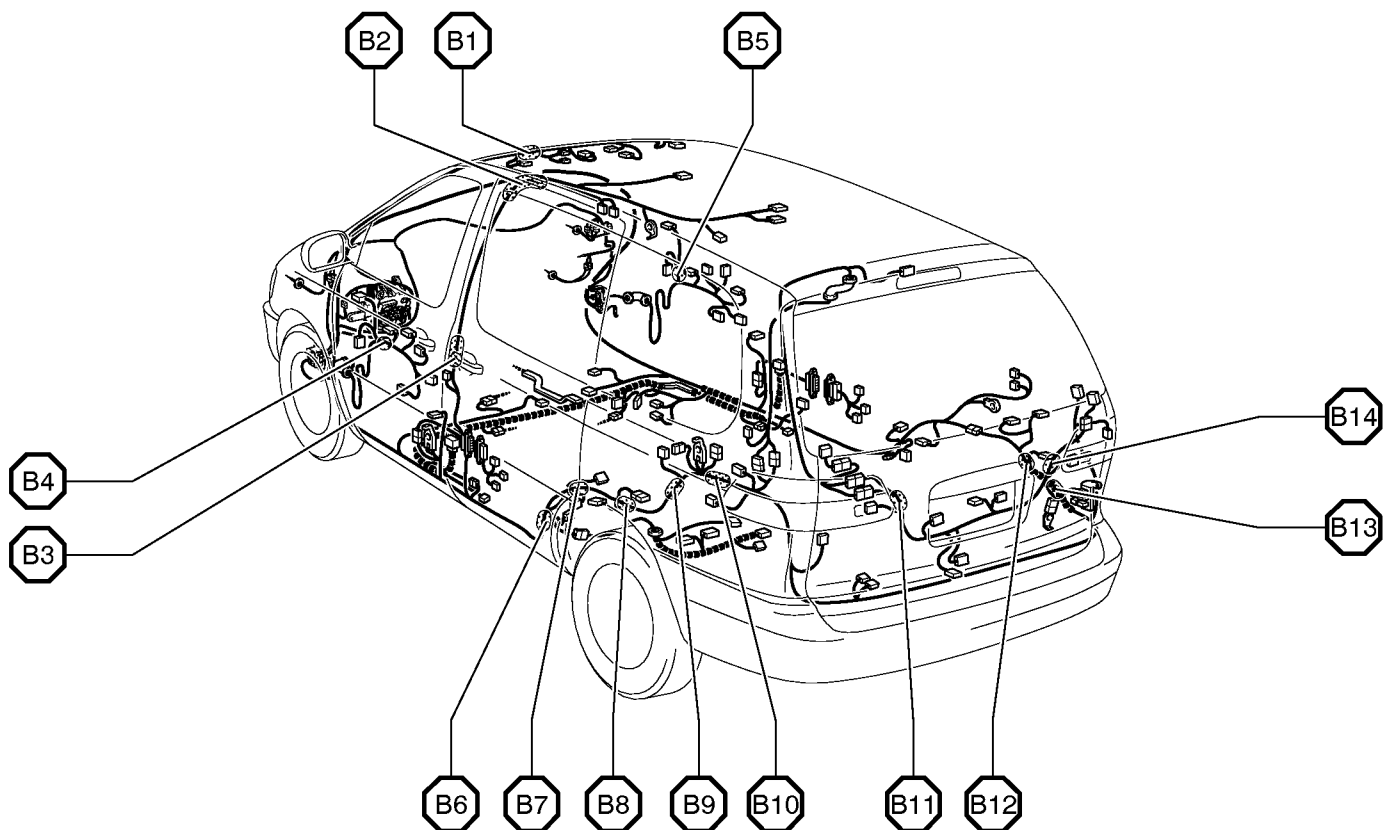


## Connector Joining Wire Harness and Wire Harness

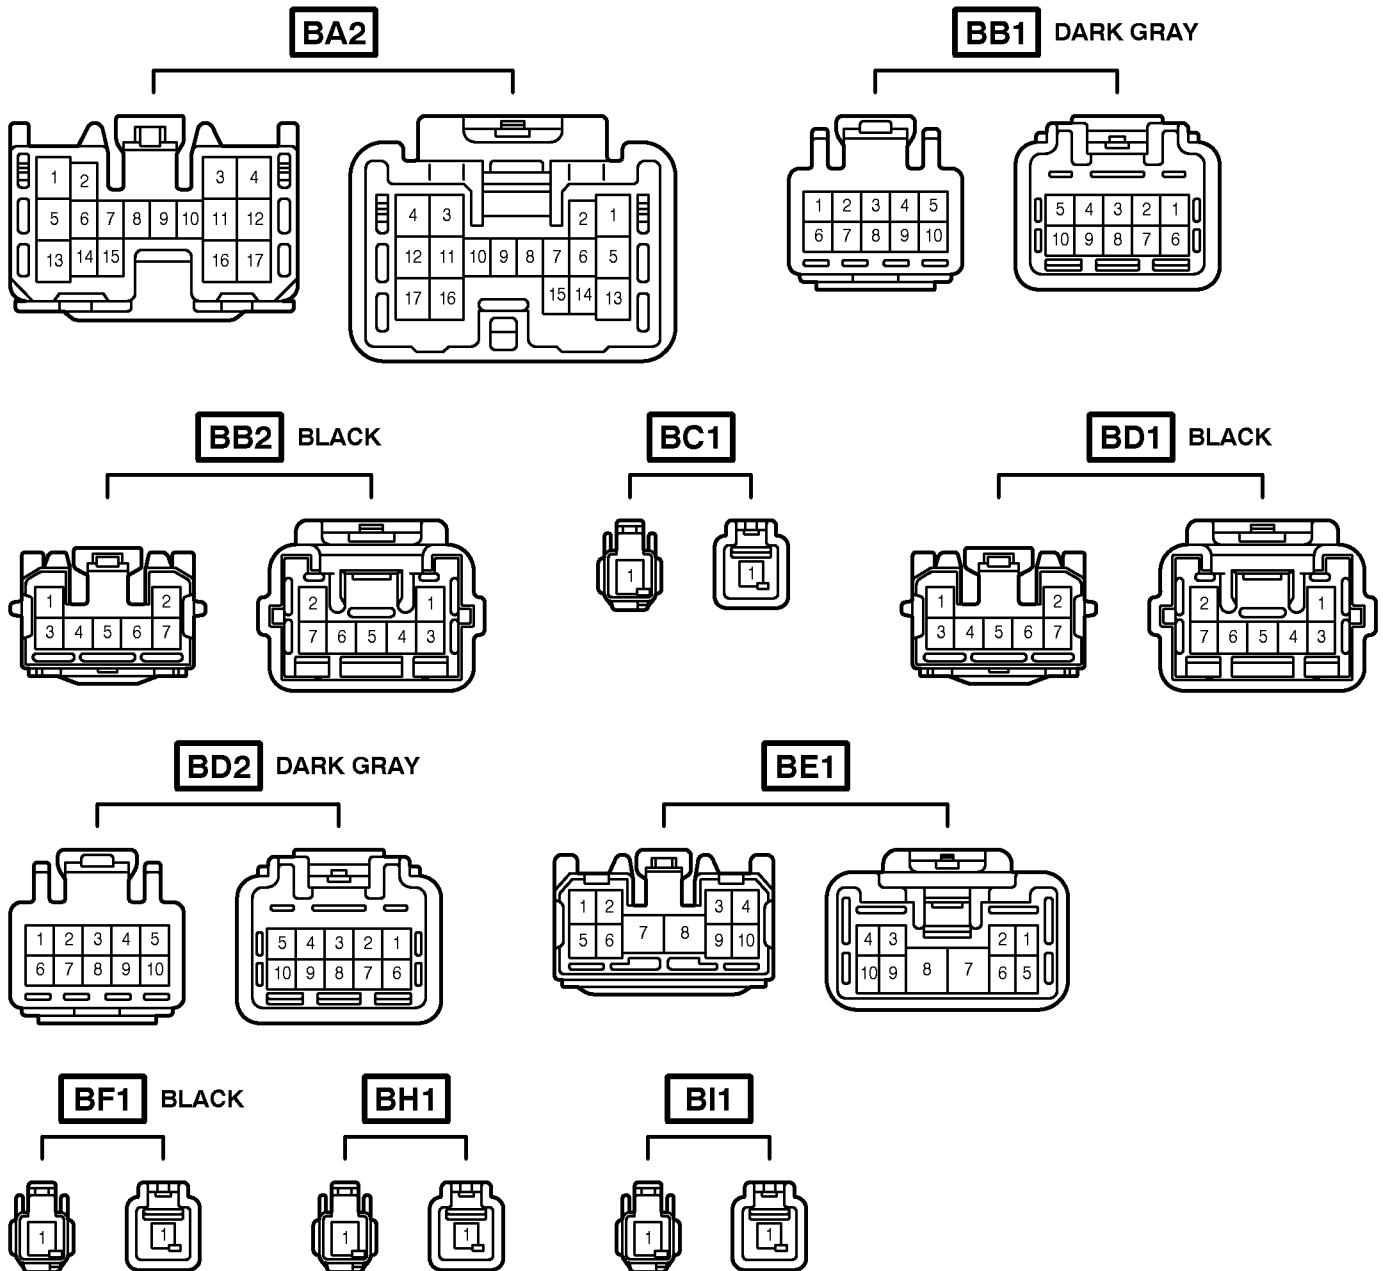


| Code | Joining Wire Harness and Wire Harness (Connector Location)                  |
|------|-----------------------------------------------------------------------------|
| BA2  | Gauge Wire and Floor Wire (On the Left Rear Wheel House)                    |
| BB1  | Back Door No.1 Wire and Floor Wire (Left Rear Quarter Panel)                |
| BB2  | Back Door No.1 Wire and Back Door No.1 Wire (Left Side of the Back Door)    |
| BC1  | Rear Window No.1 Wire and Back Door No.1 Wire (Left Side of the Back Door)  |
| BD1  | Back Door No.1 Wire and Back Door No.2 Wire (Left Side of the Back Door)    |
| BD2  | Back Door No.1 Wire and Back Door No.2 Wire (Left Side of the Back Door)    |
| BE1  | Floor No.2 Wire and Floor Wire (On the Right Rear Wheel House)              |
| BF1  | Rear Window No.2 Wire and Back Door No.2 Wire (Right Side of the Back Door) |
| BH1  | Floor No.3 Wire and Floor Wire (Under the Left Center Pillar)               |
| B11  | Floor No.3 Wire and Floor No.2 Wire (Under the Right Center Pillar)         |

## G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

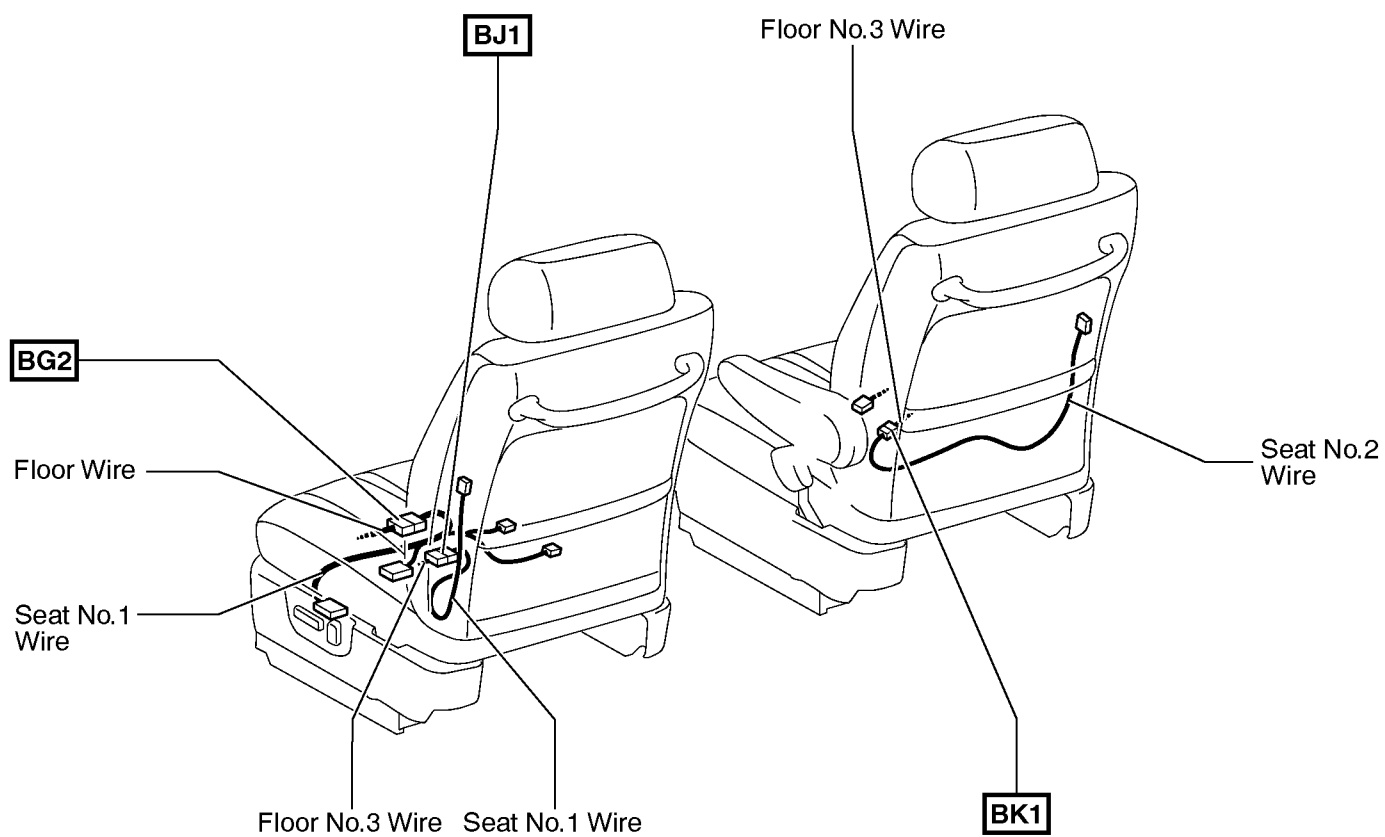

## Connector Joining Wire Harness and Wire Harness

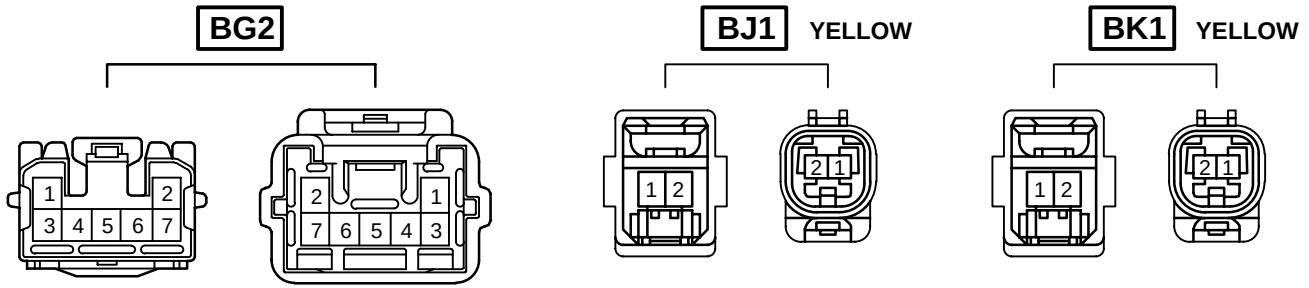

| Code | Joining Wire Harness and Wire Harness (Connector Location)              |
|------|-------------------------------------------------------------------------|
| BG2  | Floor Wire and Seat No.1 Wire (Beneath the Driver's Seat)               |
| BJ1  | Floor No.3 Wire and Seat No.1 Wire (Beneath the Driver's Seat)          |
| BK1  | Floor No.3 Wire and Seat No.2 Wire (Beneath the Front Passenger's Seat) |