

2009 Toyota Highlander Limited

GENERAL INFORMATION Service Reminder Indicators - Toyota

ENGINE OIL CHANGE REMINDER LIGHT RESET - PROCEDURE 8**1. OIL REPLACEMENT INFORMATION MODE RESET OPERATION**

HINT:

- The TRIP meter reset knob is located below the speedometer.
- This reset operation is required only for U.S.A..
- a. Turn the ignition switch on (IG).
- b. Press the ODO/TRIP switch until the ODO meter appears.
- c. Turn the ignition switch off.
- d. Turn the ignition switch on (IG) while pressing and holding the TRIP meter reset knob. Hold the TRIP meter reset knob until the following conditions are met and 5 seconds have passed.
 - The multi-information display shows "Resetting Oil Maintenance Data".
 - When oil replacement reminder light turns off, the reset is complete.

2009 Toyota Highlander Limited

GENERAL INFORMATION Service Reminder Indicators - Toyota

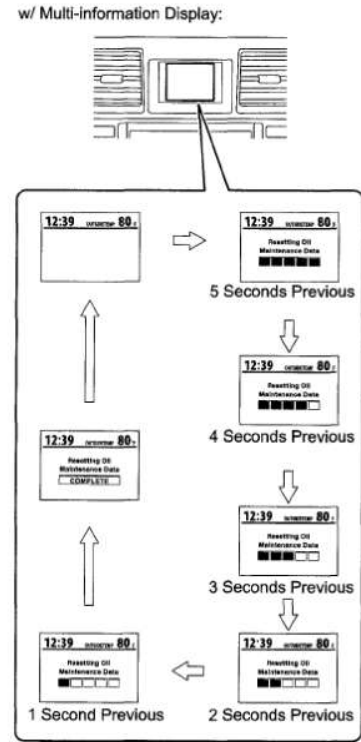
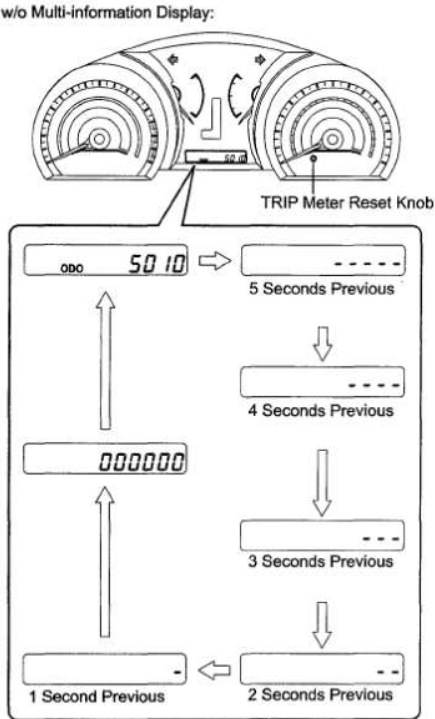


Fig. 1: Identifying Multi-Information Display Table
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.