


Citroen C3 Picasso (from 2008) – fuse box diagram

Year of production: 2008, 2009, 2010, 2011, 2012, 2013, 2014, 2015, 2016

Fuse box diagram under dashboard

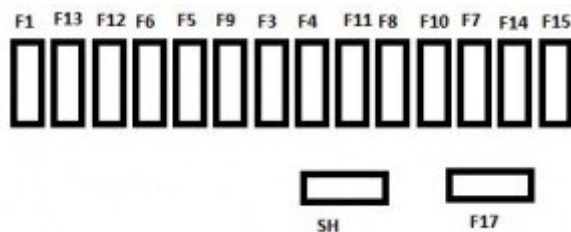


Citroen C3 Picasso – fuse box- dashboard

Fuse	Ampere rating [A]	Functions
FH36	5	Trailer relay unit.
F37	15	Trailer accessories socket supply.
F38	20	Navigation.
FH39	20	Heated seats.
F40	30	Trailer relay unit.

Fuse	Ampere rating [A]	Functions
F1	15	Rear wiper
F2	—	Not used
F3	5	Air bags and pretensioners control unit.
F4	10	Steering wheel angle sensor, air conditioning, clutch switch, particle filter pump, diagnostic socket, air- flow meter.
F5	30	Electric windows panel, passenger's electric window control, front electric windows motor.
F6	30	Rear electric windows motor and driver's electric window motor.
F7	5	Courtesy and front map reading lights, glove box lighting, torch, rear reading lights.
F8	20	Multifunction display, audio system, navigation radio
F9	30	Audio system (fitted as an option), 12 V socket, lighter.
F10	15	Steering wheel controls.
F11	15	Ignition, diagnostic socket.
F12	15	Rain/brightness sensor, trailer relay unit.
F13	5	Main stop switch, engine relay unit.
F14	15	Parking assistance control unit, seat belt unfastened warning lamp, airbag control unit, instrument panel, air conditioning, USB Box.

F15	30	Locking.
F16	—	Not used
F17	40	Rear screen and exterior mirrors de-icing.
SH	—	PARC shunt

Fuse box in engine compartment

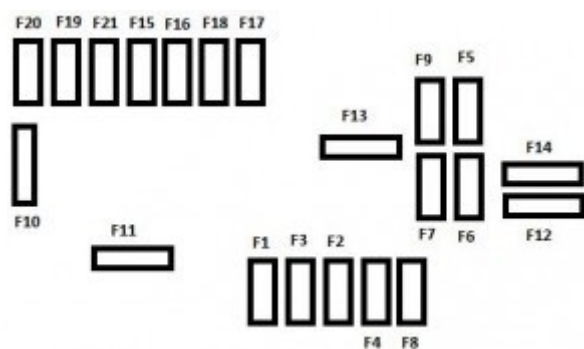

Citroen C3 Picasso – fuse box – engine

compartment

Fuse	Ampere rating [A]	Functions
F1	20	Engine control unit supply, cooling fan unit control, multifunction engine control main relay.
F2	15	Horn
F3	10	Front/rear wash-wipe
F4	20	Daytime running lamps
F5	15	Diesel heater (diesel engine), fuel pump (petrol engine)
F6	10	ABS/ESP control unit, ABS/ESP cut-off relay, secondary stop switch.
F7	10	Electrical power steering
F8	25	Starter control
F9	10	Switching and protection unit (Diesel)
F10	30	Diesel engine injection pump valve, injectors and ignition coils (petrol engine)
F11	40	Air conditioning blower
F12	30	Windscreen wipers slow/fast speed
F13	40	Built-in systems interface supply (ignition positive).
F14	30	Valvetronic supply (petrol)
F15	10	Right-hand main beam headlamp
F16	10	Left-hand main beam headlamp
F17	15	Left-hand dipped headlamp
F18	15	Right-hand dipped headlamp
F19	15	Multifunction engine control supply (petrol engine), air cooling solenoid valves (Diesel).
F20	10	Multifunction engine control supply (petrol engine), Turbo pressure regulation valve (Diesel), engine coolant level detector (Diesel).

F21	5	Fan assembly control supply, APC, ABS ESP relays
MF1	60	Fan assembly
MF2	30	ABS/ESP control unit.
MF3	30	ABS/ESP control unit.
MF4	60	Built-in Systems Interface (BSI) supply
MF5	60	Built-in Systems Interface (BSI) supply
MF6	—	Not used
Mf7	—	Passenger compartment fusebox
MF8	—	Not used

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.