



Headlight without Daytime Running Light

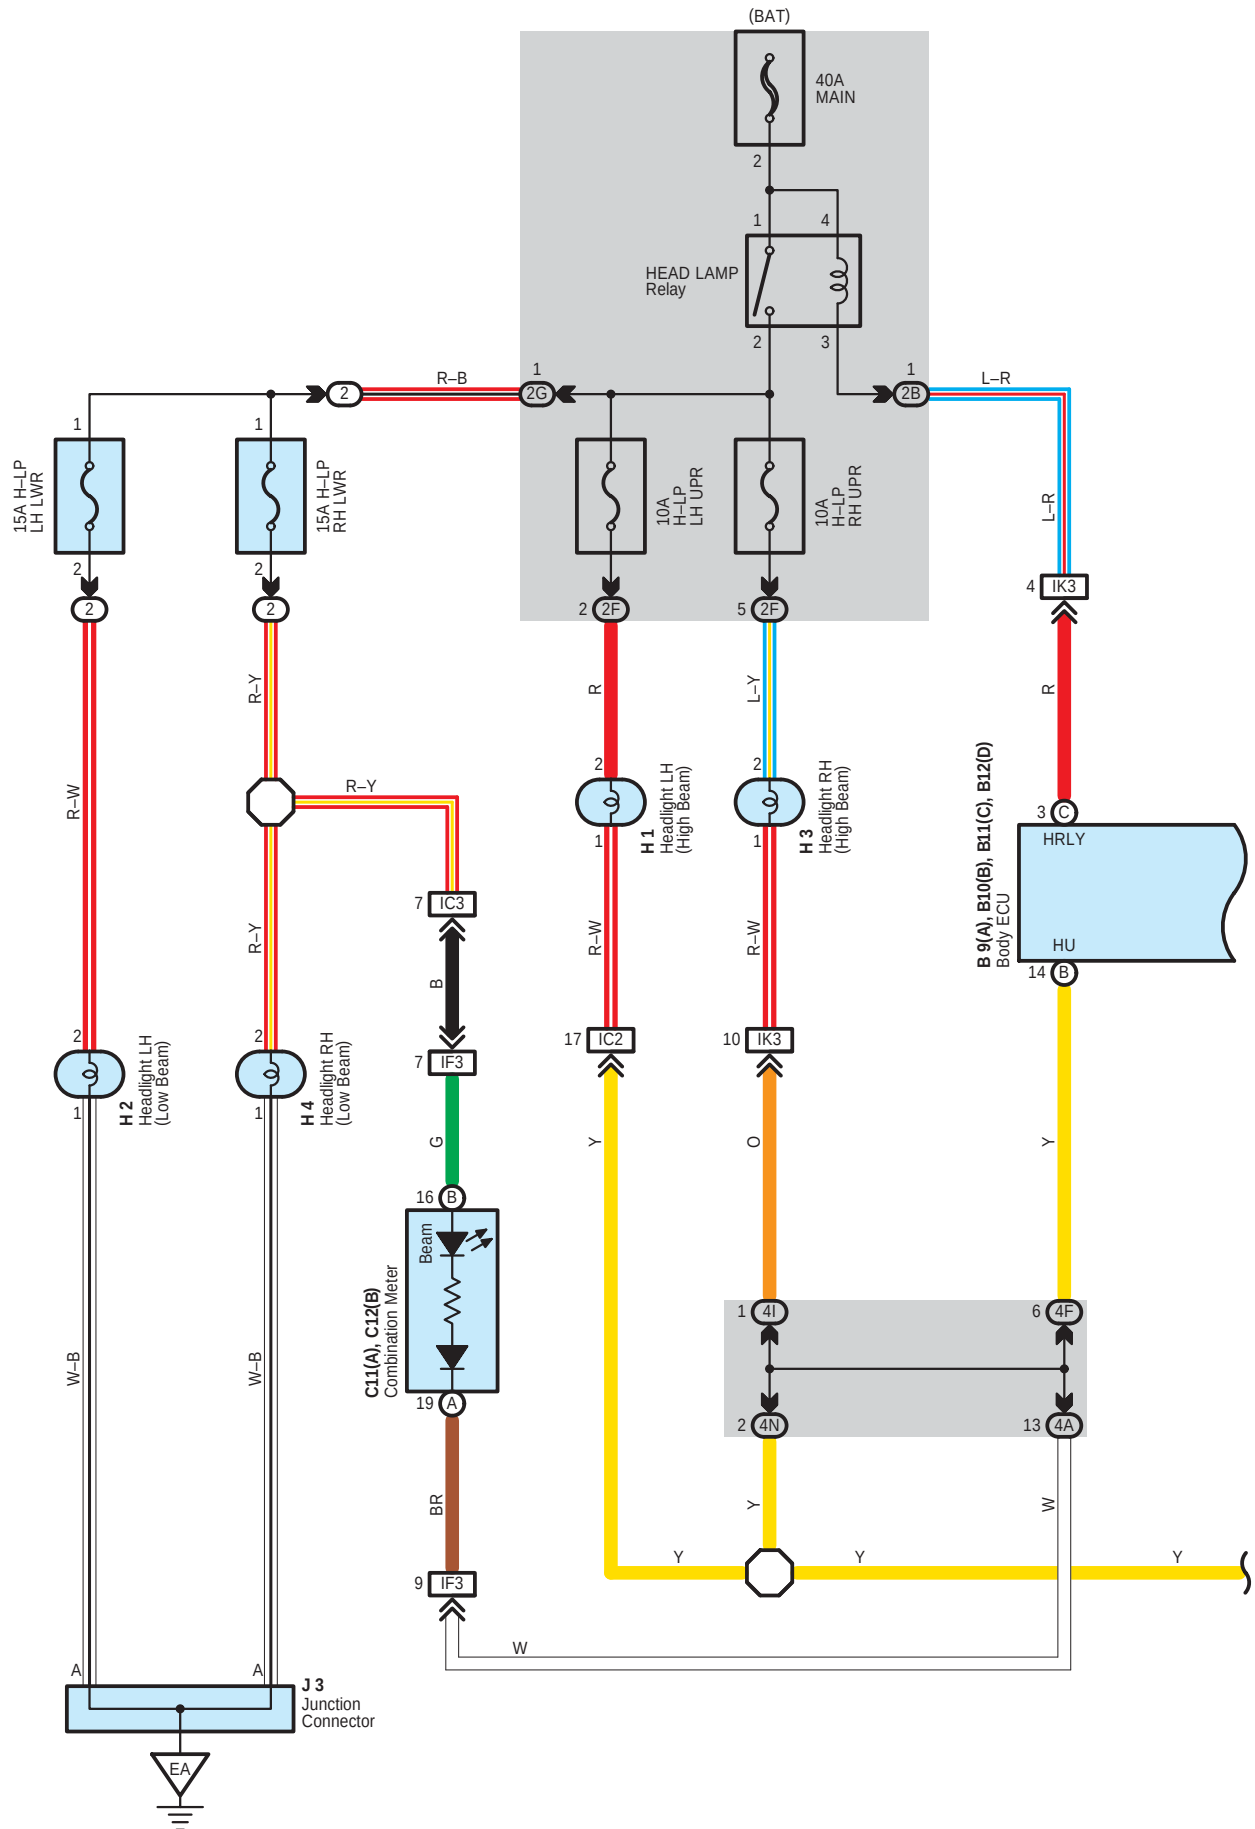

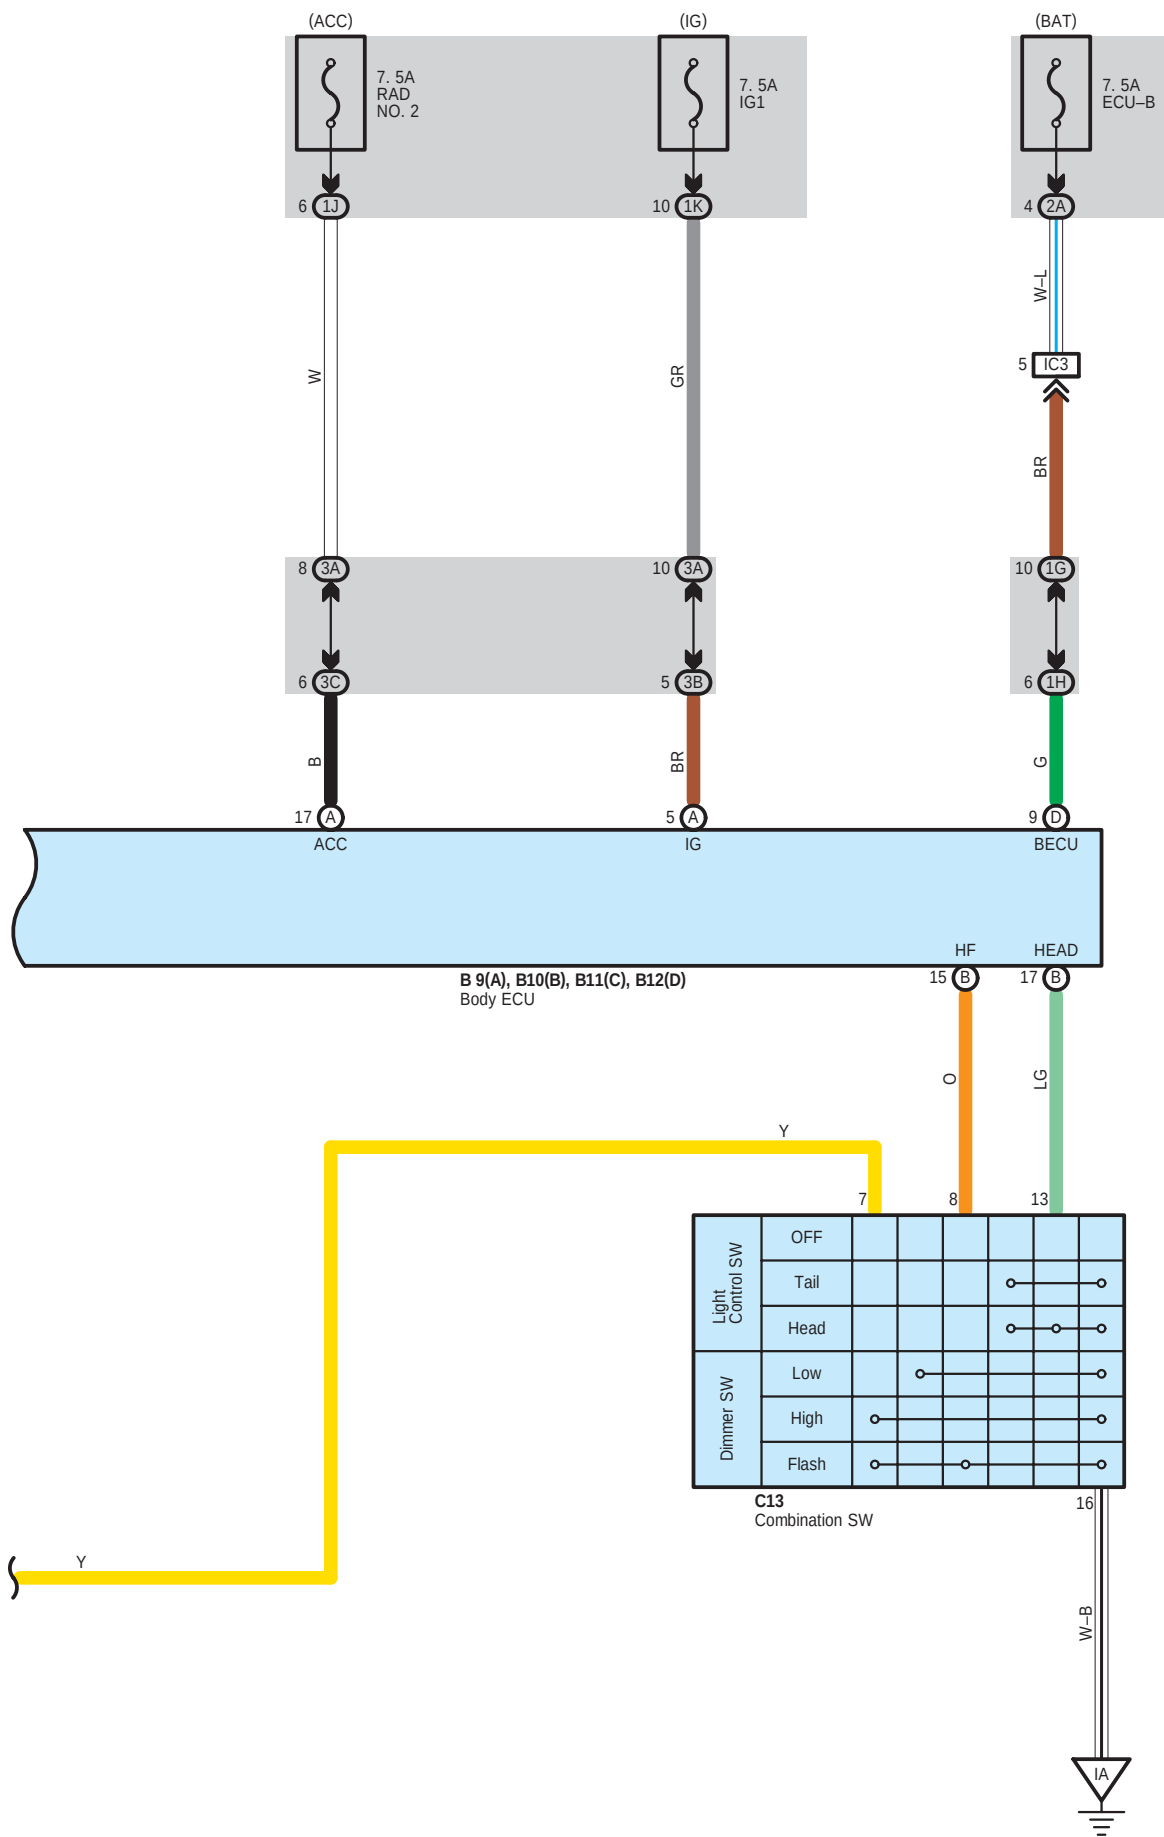

Headlight without Daytime Running Light

: Parts Location

Code		See Page	Code	See Page	Code	See Page
B9	A	42	C13	42	H3	40 (2AZ-FE)
B10	B	42	H1	38 (3MZ-FE)	H4	38 (3MZ-FE)
B11	C	42		40 (2AZ-FE)		40 (2AZ-FE)
B12	D	42	H2	38 (3MZ-FE)	J3	39 (3MZ-FE)
C11	A	42		40 (2AZ-FE)		41 (2AZ-FE)
C12	B	42	H3	38 (3MZ-FE)		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1H		
1J	28	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1K		
2A	27	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2B		
2F		
2G		
3A	30	Instrument Panel Wire and Center J/B (Behind the Instrument Panel Center)
3B		
3C		
4A	33	Cowl Wire and Passenger Side J/B (Right Side of Grove Box)
4F		
4I	32	
4N		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC2	50	Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)
IC3		
IF3	50	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
IK3	51	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)

: Ground Points

Code	See Page	Ground Points Location
EA	48 (3MZ-FE)	Right Front Fender Apron
	49 (2AZ-FE)	
IA	50	Left Cowl Side Panel

