


Front Fog Light

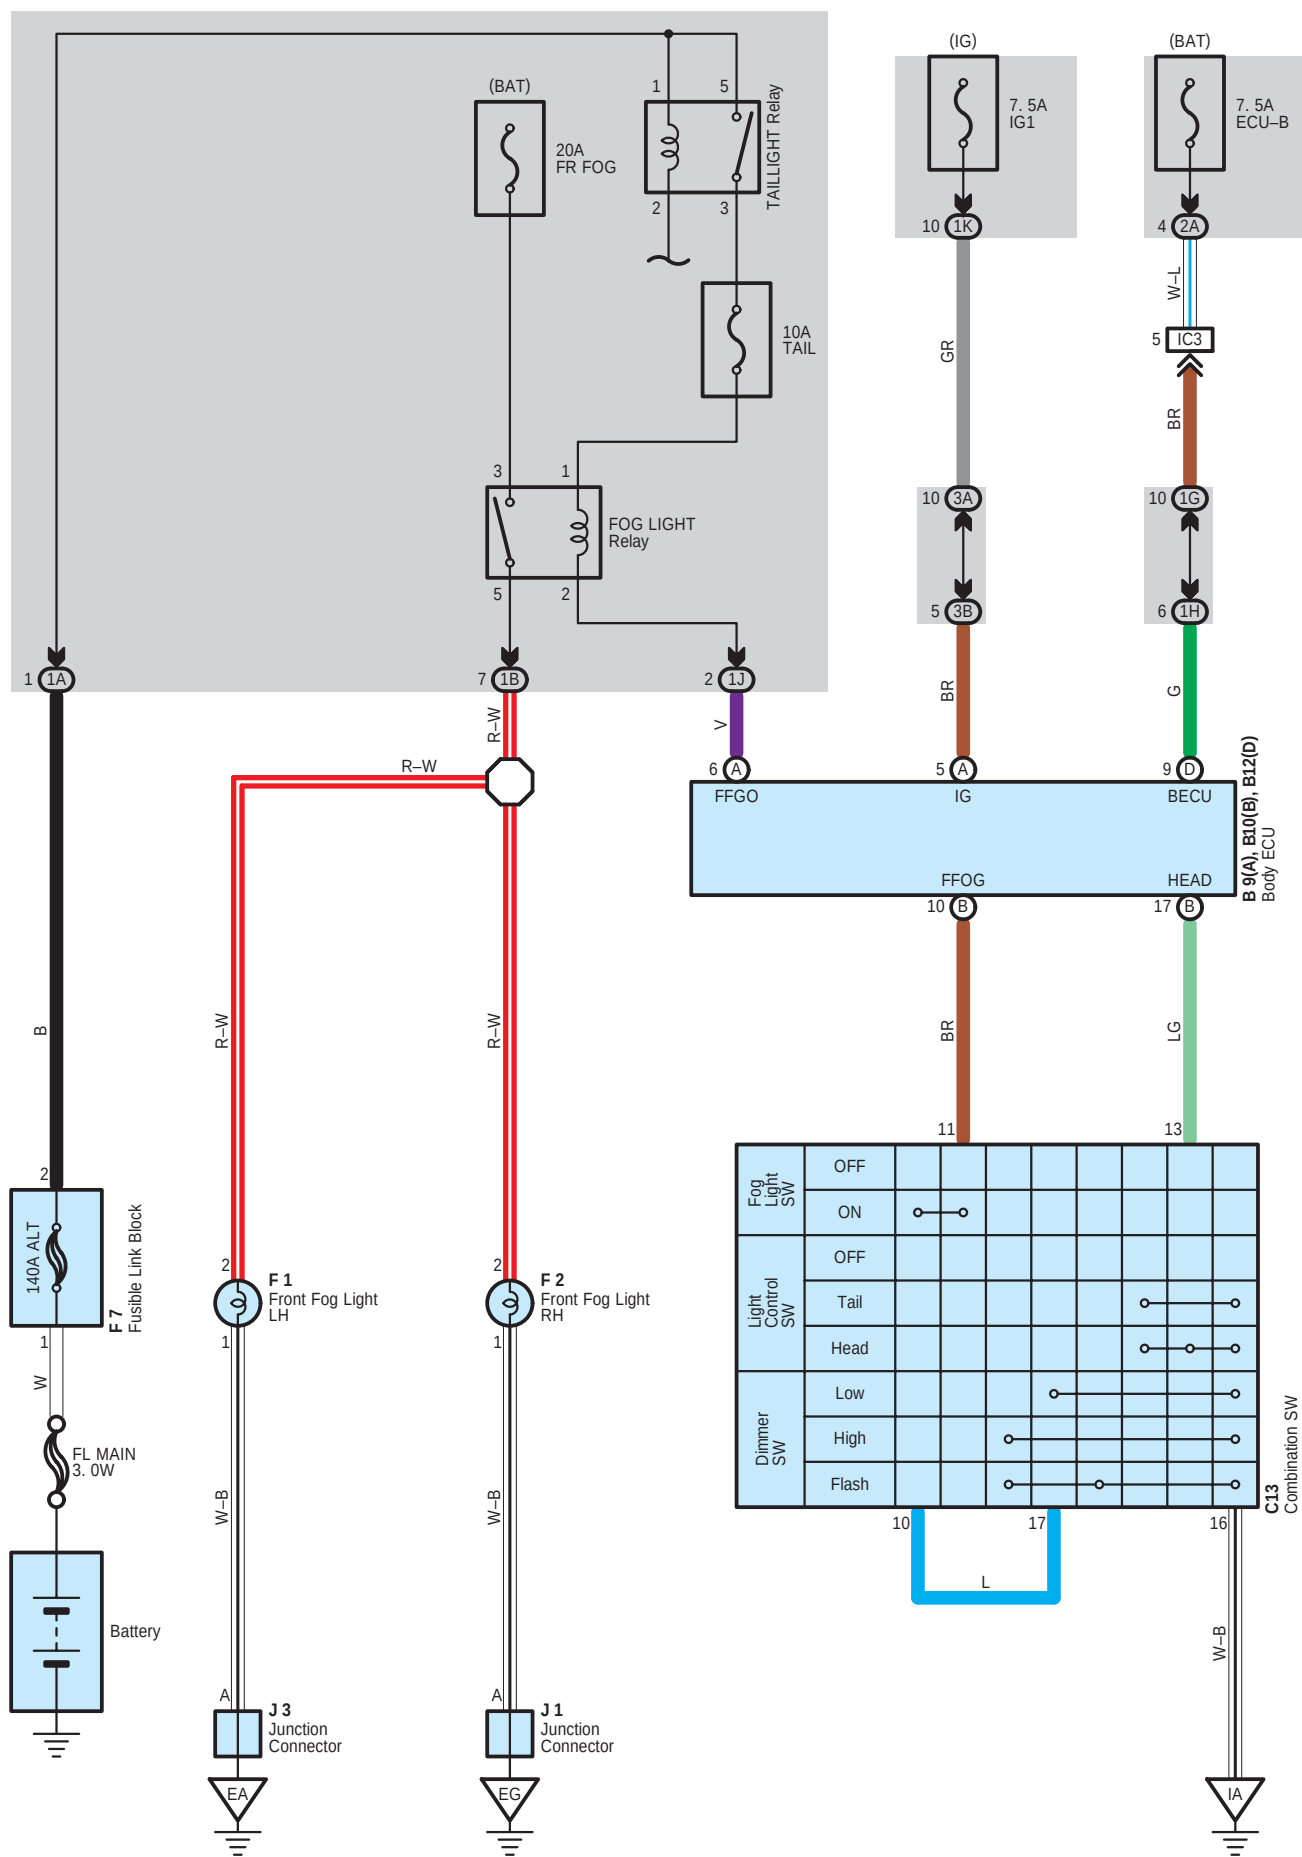

 : Parts Location

Code		See Page	Code	See Page	Code	See Page
B9	A	42	F1	40 (2AZ-FE)	J1	39 (3MZ-FE)
B10	B	42	F2	38 (3MZ-FE)		41 (2AZ-FE)
B12	D	42		40 (2AZ-FE)	J3	39 (3MZ-FE)
C13		42	F7	38 (3MZ-FE)		41 (2AZ-FE)
F1		38 (3MZ-FE)		40 (2AZ-FE)		

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	29	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1B		
1G	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1H		
1J	28	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1K		
2A	27	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3A	30	Instrument Panel Wire and Center J/B (Behind the Instrument Panel Center)
3B		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	50	Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)

 : Ground Points

Code	See Page	Ground Points Location
EA	48 (3MZ-FE)	Right Front Fender Apron
	49 (2AZ-FE)	
EG	48 (3MZ-FE)	Under the Left Headlight
	49 (2AZ-FE)	
IA	50	Left Cowl Side Panel