



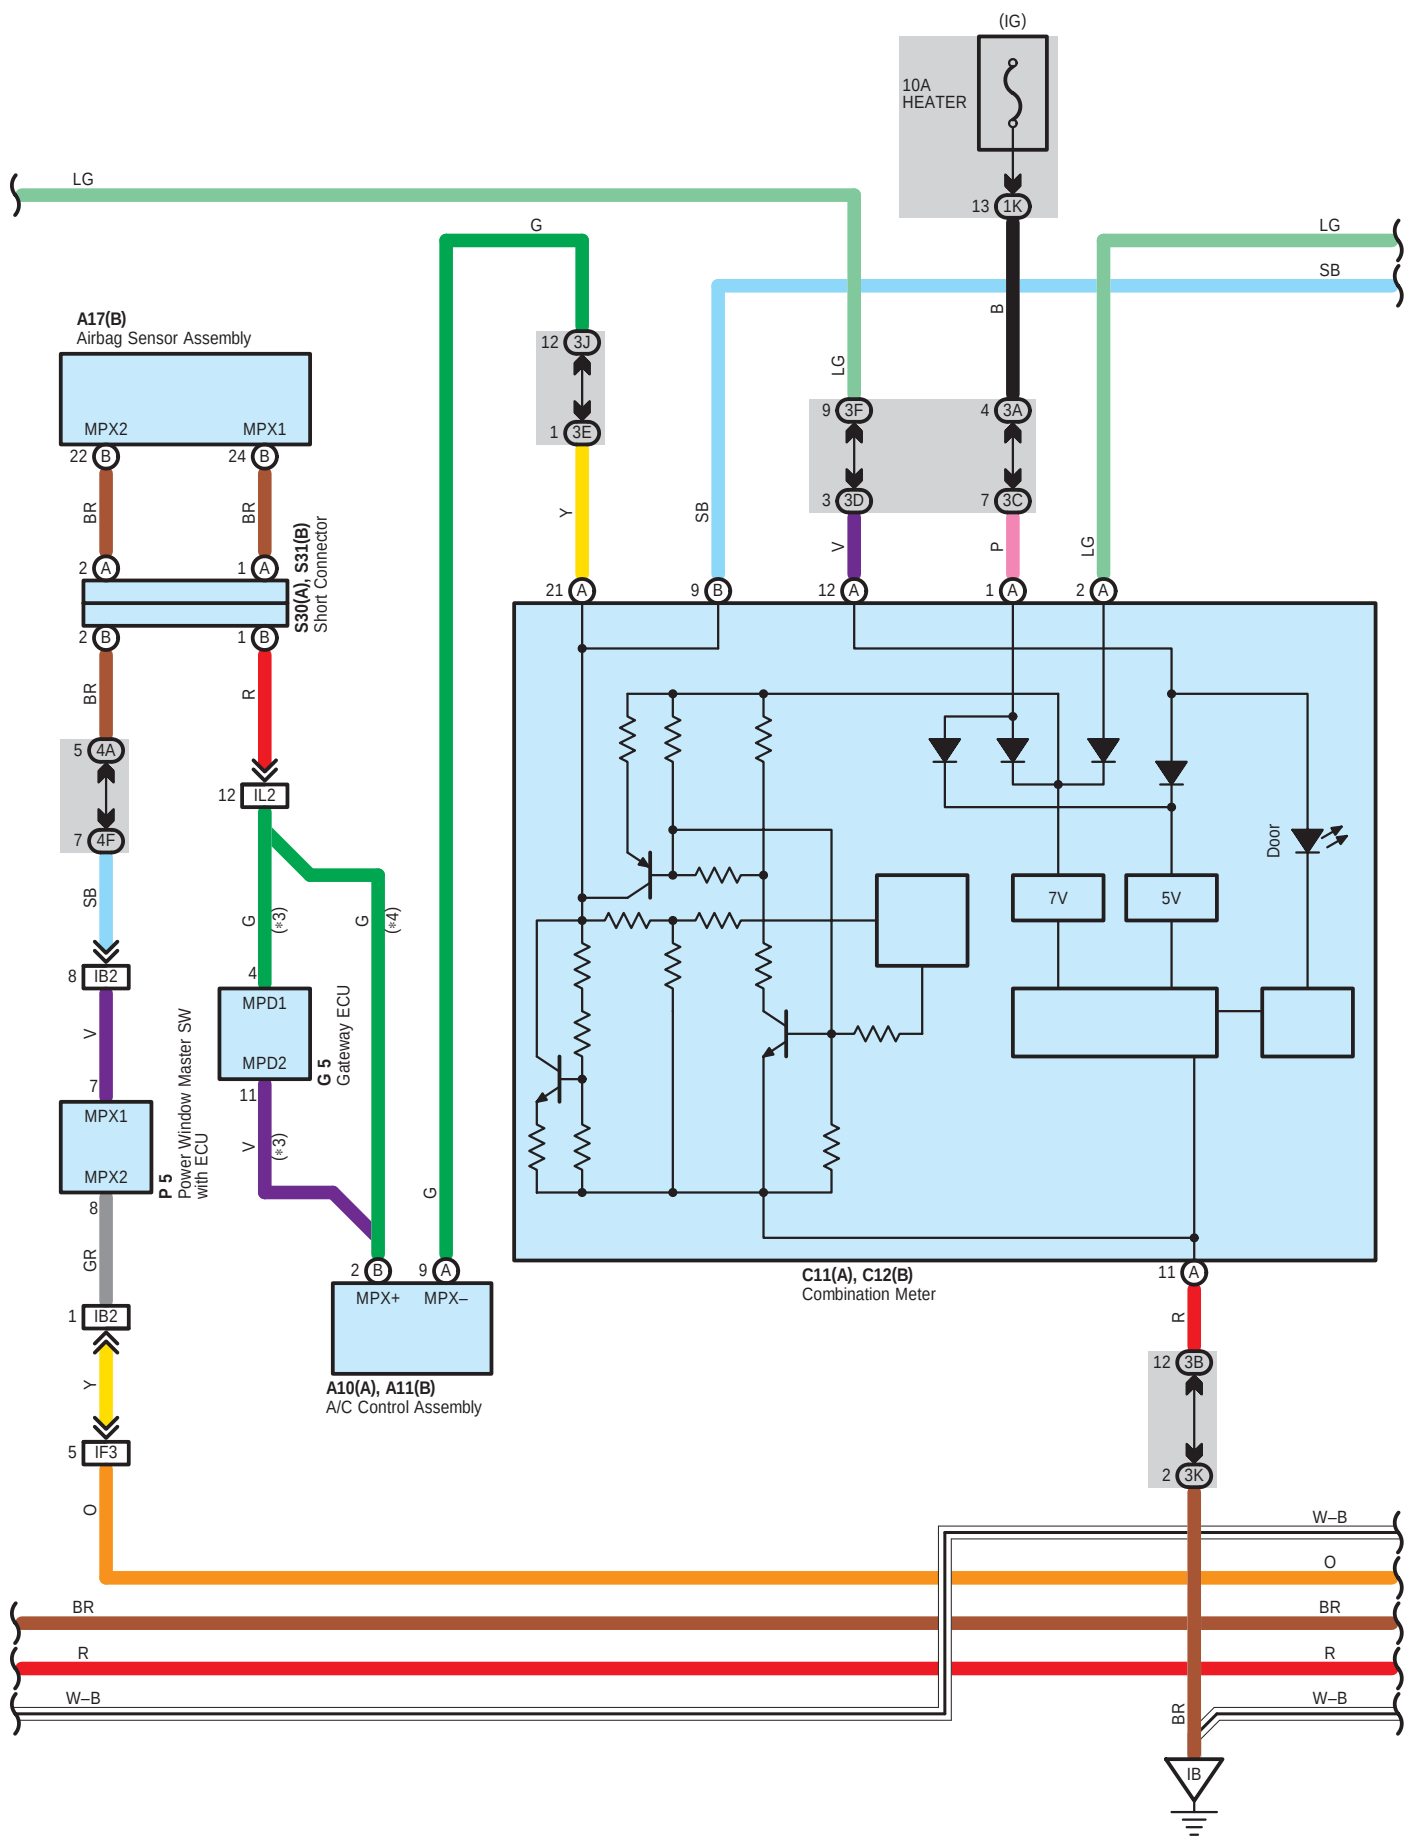

Interior Light

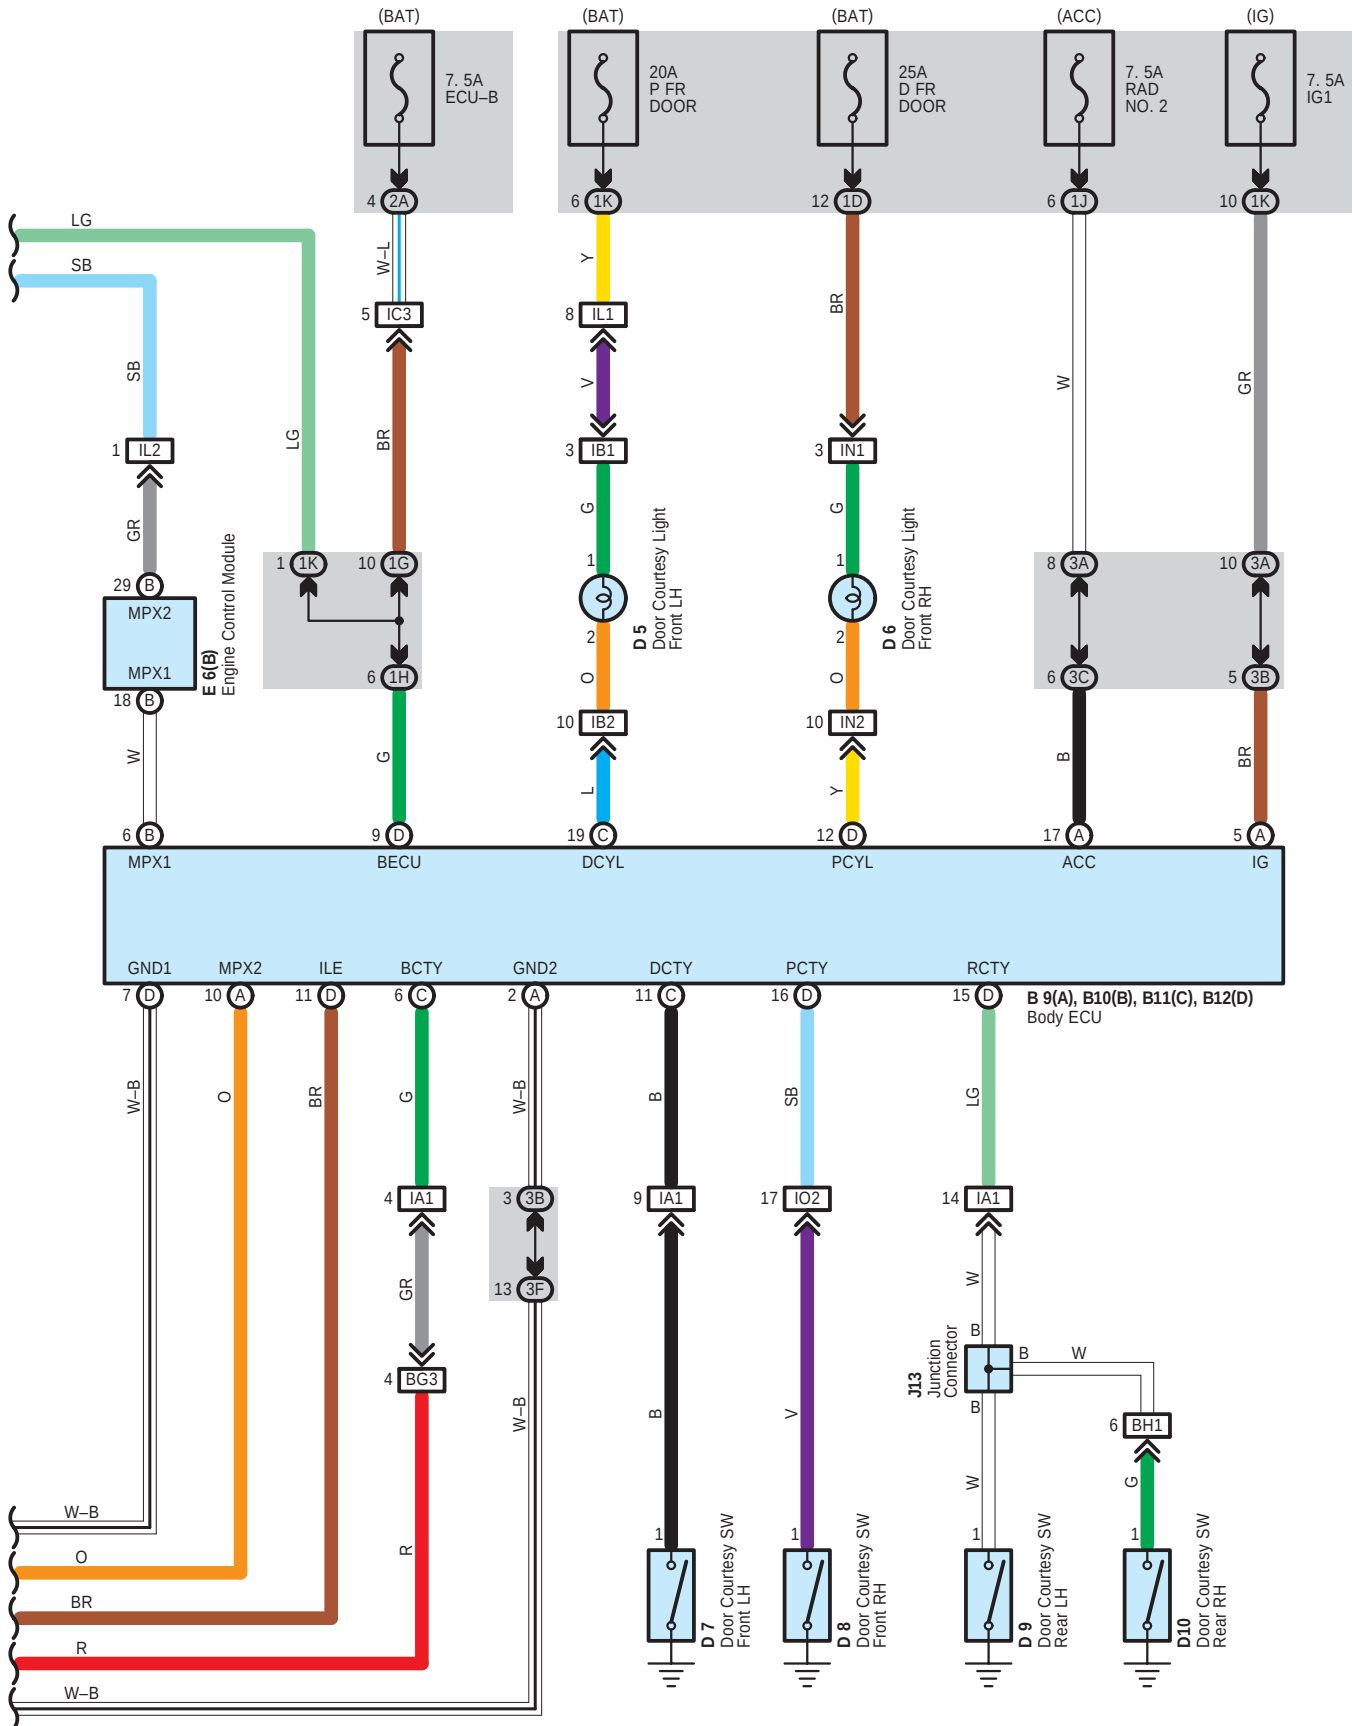

System Outline

Illuminated Entry System

This system provides various functions listed below through communication control of the body ECU etc.

- * Each relevant light lights up if any door is opened.
- * If all the doors are closed with the ignition SW set at OFF after any door is opened, each light lights up for 15 sec., and then fades out when the time set on the timer has elapsed.
- * If any door is unlocked from the driver or passenger side or if any door is unlocked with the unlock SW on the transmitter after all the doors are closed and locked, each light lights up for 15 sec., and then fades out when the time set on the timer has elapsed.
- * If the ignition SW is turned to the ACC or ON position while each light is being lit by the timer, the timer lighting is cancelled and the light fades out.
- * If all the doors are closed with the ignition SW set at ACC or ON after any door is opened, the timer lighting is cancelled and the light fades out.
- * Each light above is the interior light, ignition key cylinder light, and door courtesy lights.

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
A10	A	42	D6		44	O5		44
A11	B	42	D7		44	P5		44
A17	B	42	D8		44	R11		45
B9	A	42	D9		44	R12		45
B10	B	42	D10		44	S30	A	43
B11	C	42	E6	B	42	S31	B	43
B12	D	42	G5		43	T7		43
C11	A	42	I14		43	V9		45
C12	B	42	I16		44	V10		45
D4		44	J13		44			
D5		44	J14		44			

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1G		
1H		
1J	28	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1K		
2A	27	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3A	30	Instrument Panel Wire and Center J/B (Behind the Instrument Panel Center)
3B		
3C		
3D		
3E		
3F		
3J	31	
3K		
4A	33	Cowl Wire and Passenger Side J/B (Right Side of Grove Box)
4D		
4F		
4H		
4J	32	
4L		
4M		
4N		

Interior Light

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	50	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IB1	50	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IB2		
IC3	50	Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)
IE1	50	Roof Wire and Cowl Wire (Near the Bottom of Left Front Pillar)
IF3	50	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
IK3	51	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IL1	51	Instrument Panel Wire and Cowl Wire (Upper Side of Passenger Side J/B)
IL2		
IN1	51	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IN2		
IO2	51	Cowl Wire and Floor Wire (Right Kick Panel)
BG1	52	Back Door No.1 Wire and Floor No.2 Wire (Rear Left of the Roof)
BG3		
BH1	52	Floor No.2 Wire and Floor Wire (Near the Rear Side Marker Light RH)

: Ground Points

Code	See Page	Ground Points Location
IA	50	Left Cowl Side Panel
IB	50	Right Instrument Panel Brace
IC	50	Right Cowl Side Panel
BC	52	Left Side of Rear Cross Member
BE	52	Left Side of Back Door

