




Illumination

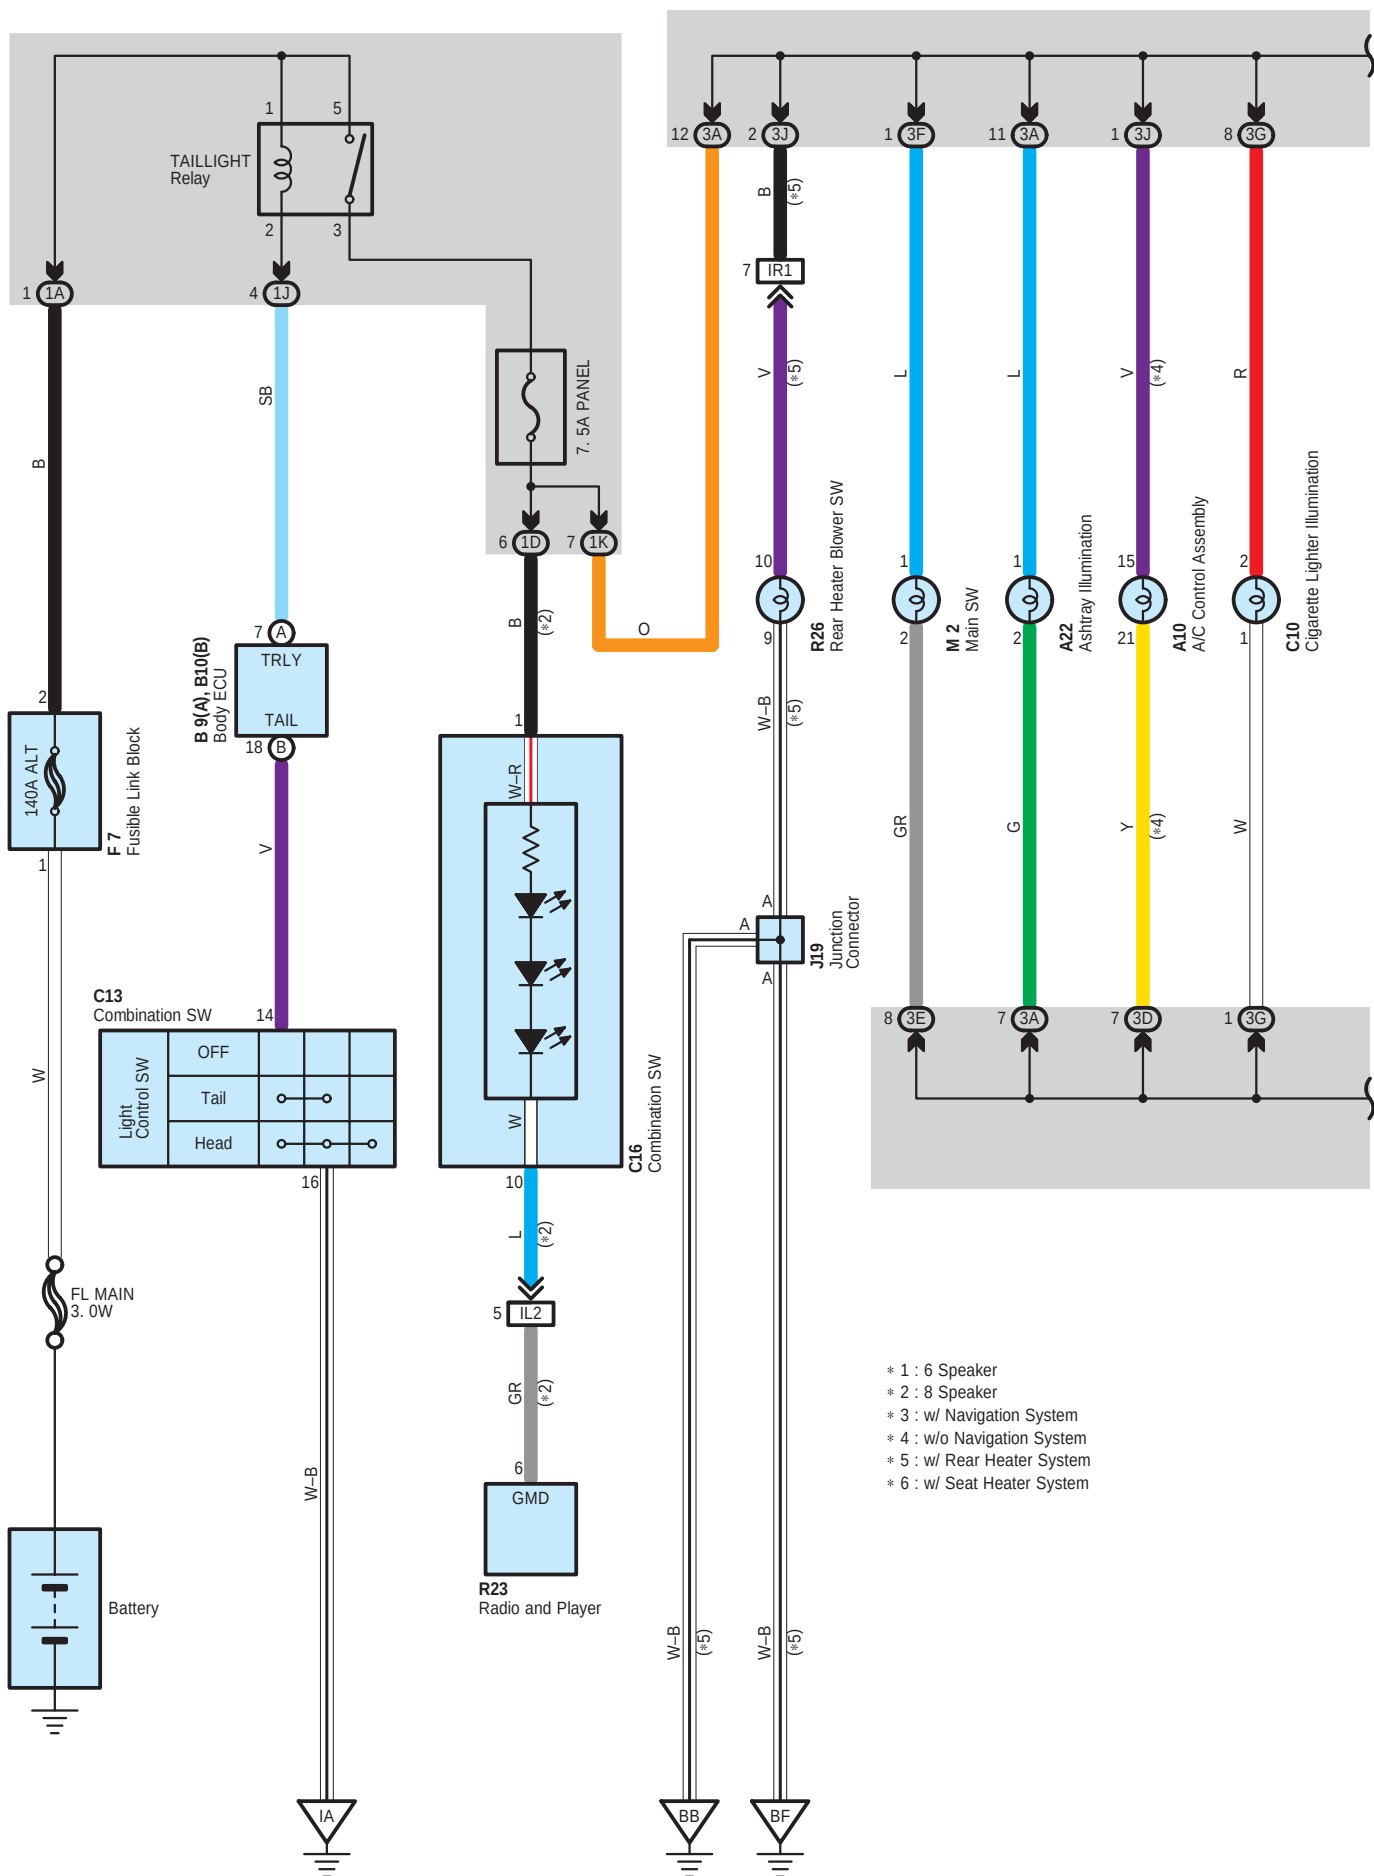

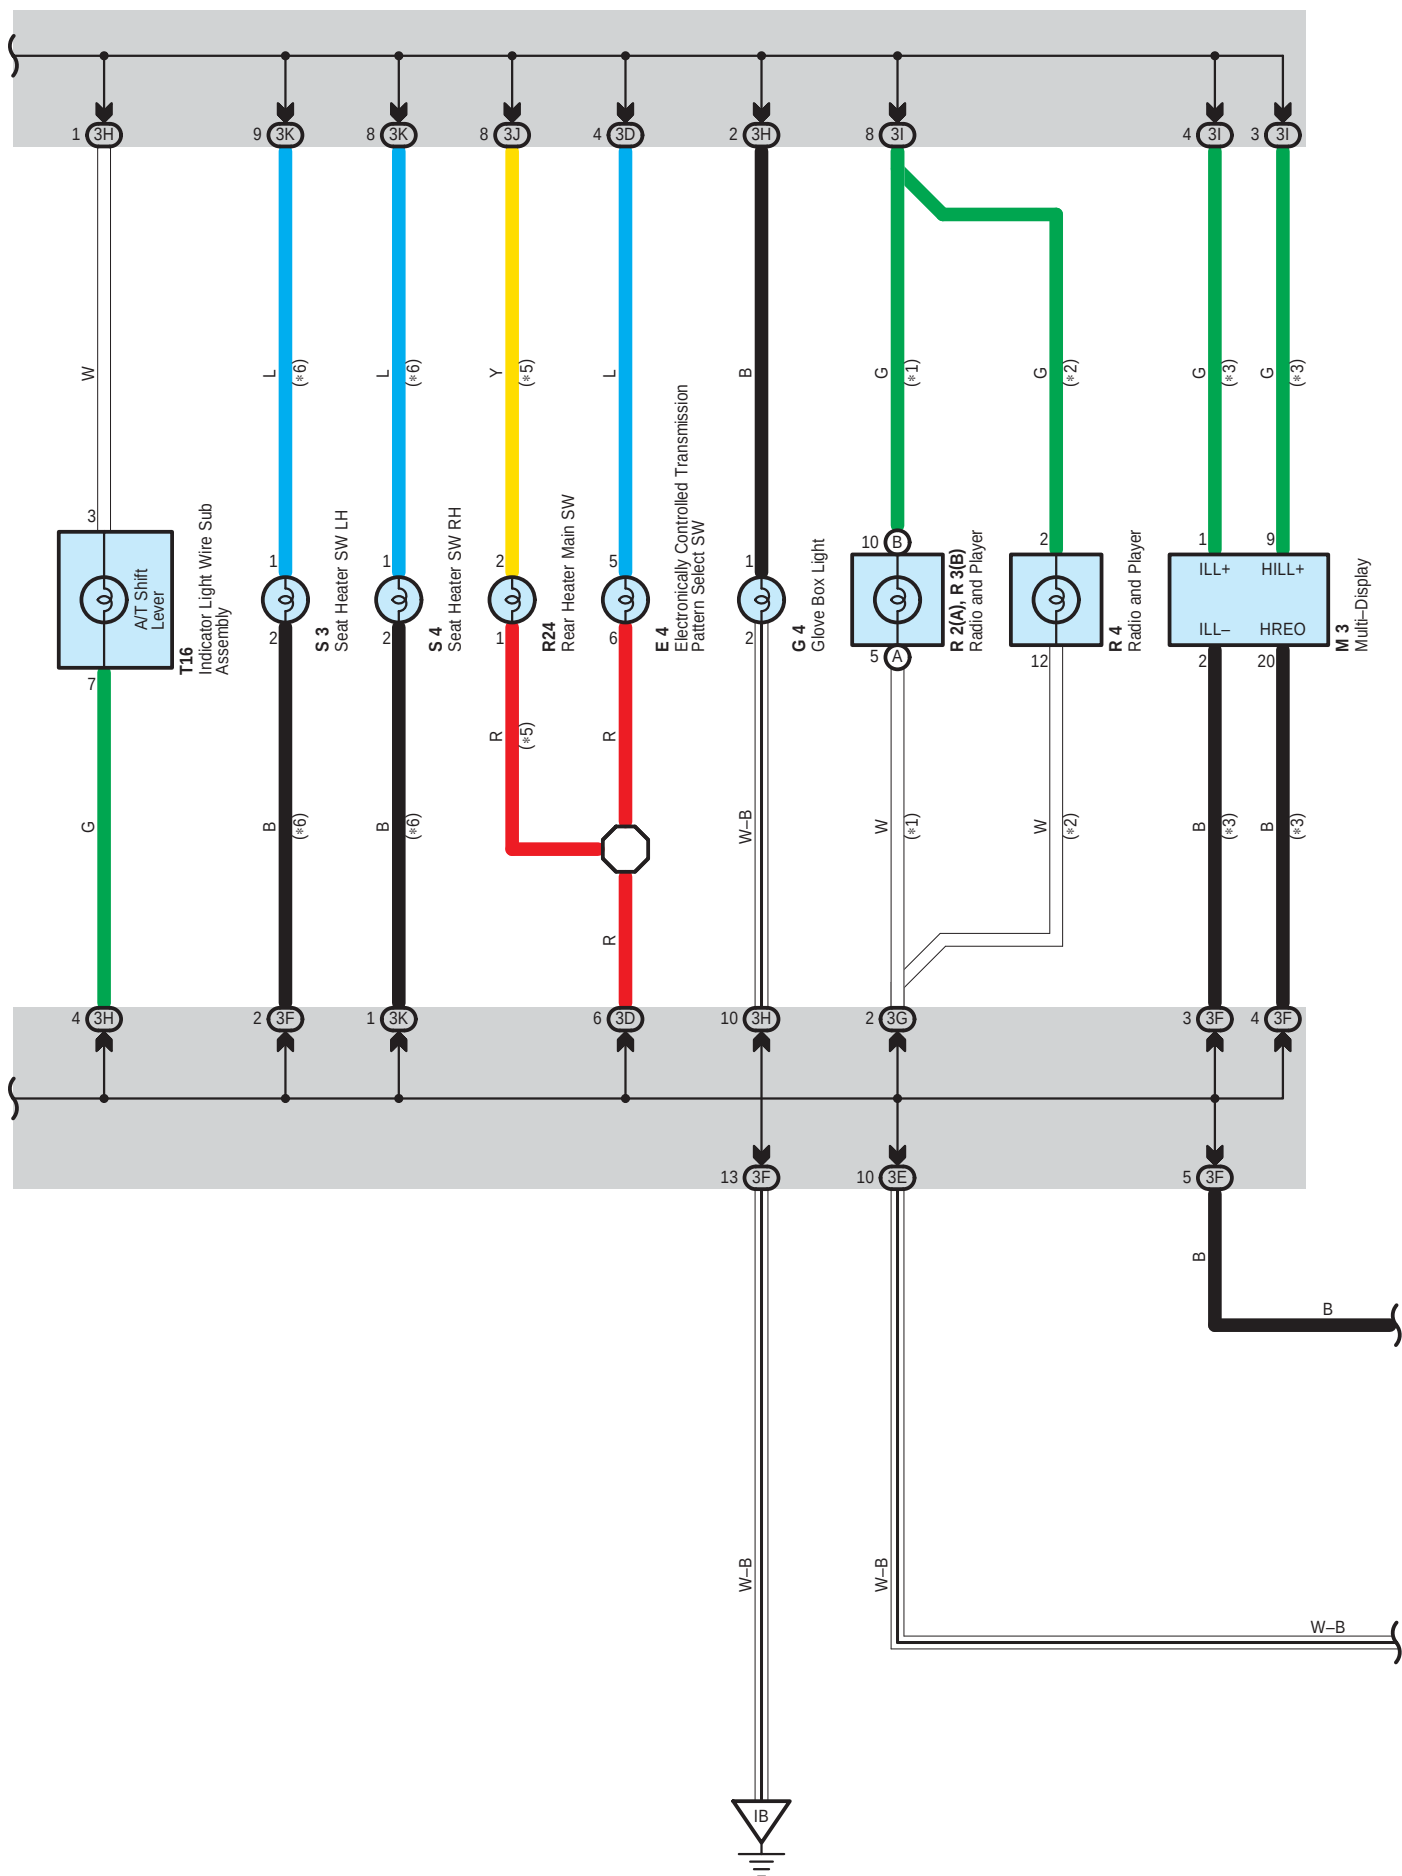

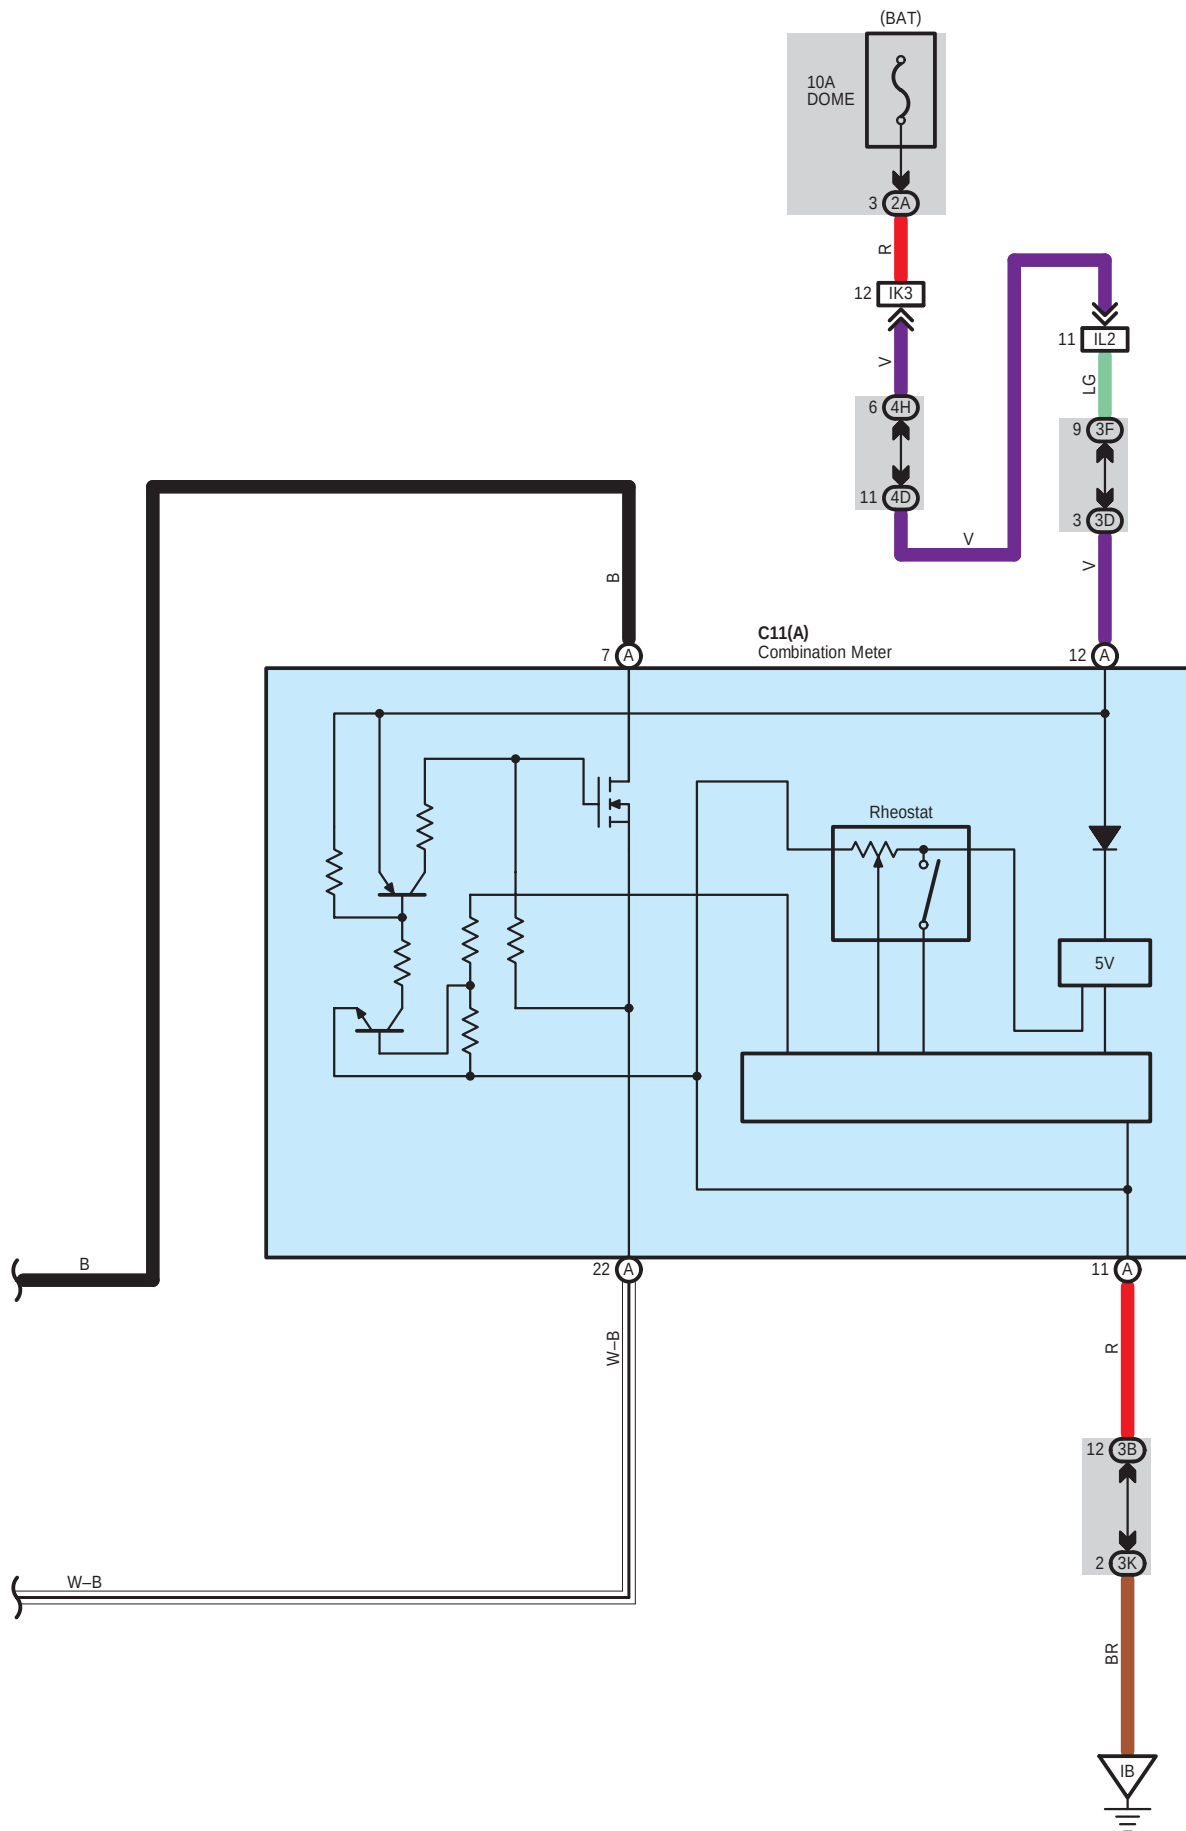

 : Parts Location

Code		See Page	Code		See Page	Code		See Page
A10		42	E4		42	R3	B	43
A22		42	F7		38 (3MZ–FE)	R4		43
B9	A	42			40 (2AZ–FE)	R23		43
B10	B	42	G4		43	R24		43
C10		42	J19		44	R26		45
C11	A	42	M2		43	S3		43
C13		42	M3		43	S4		43
C16		42	R2	A	43	T16		43

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	29	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1D	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1J	28	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1K		
2A	27	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3A	30	Instrument Panel Wire and Center J/B (Behind the Instrument Panel Center)
3B		
3D		
3E		
3F		
3G	31	
3H		
3I		
3J		
3K		
4D	33	Cowl Wire and Passenger Side J/B (Right Side of Grove Box)
4H		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IK3	51	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IL2	51	Instrument Panel Wire and Cowl Wire (Upper Side of Passenger Side J/B)
IR1	51	Instrument Panel Wire and Floor Wire (Under the Shift Lever)

 : Ground Points

Code	See Page	Ground Points Location
IA	50	Left Cowl Side Panel
IB	50	Right Instrument Panel Brace
BB	52	Right Center Pillar
BF	52	Near the Rear Side Marker Light RH