



Trailer Towing

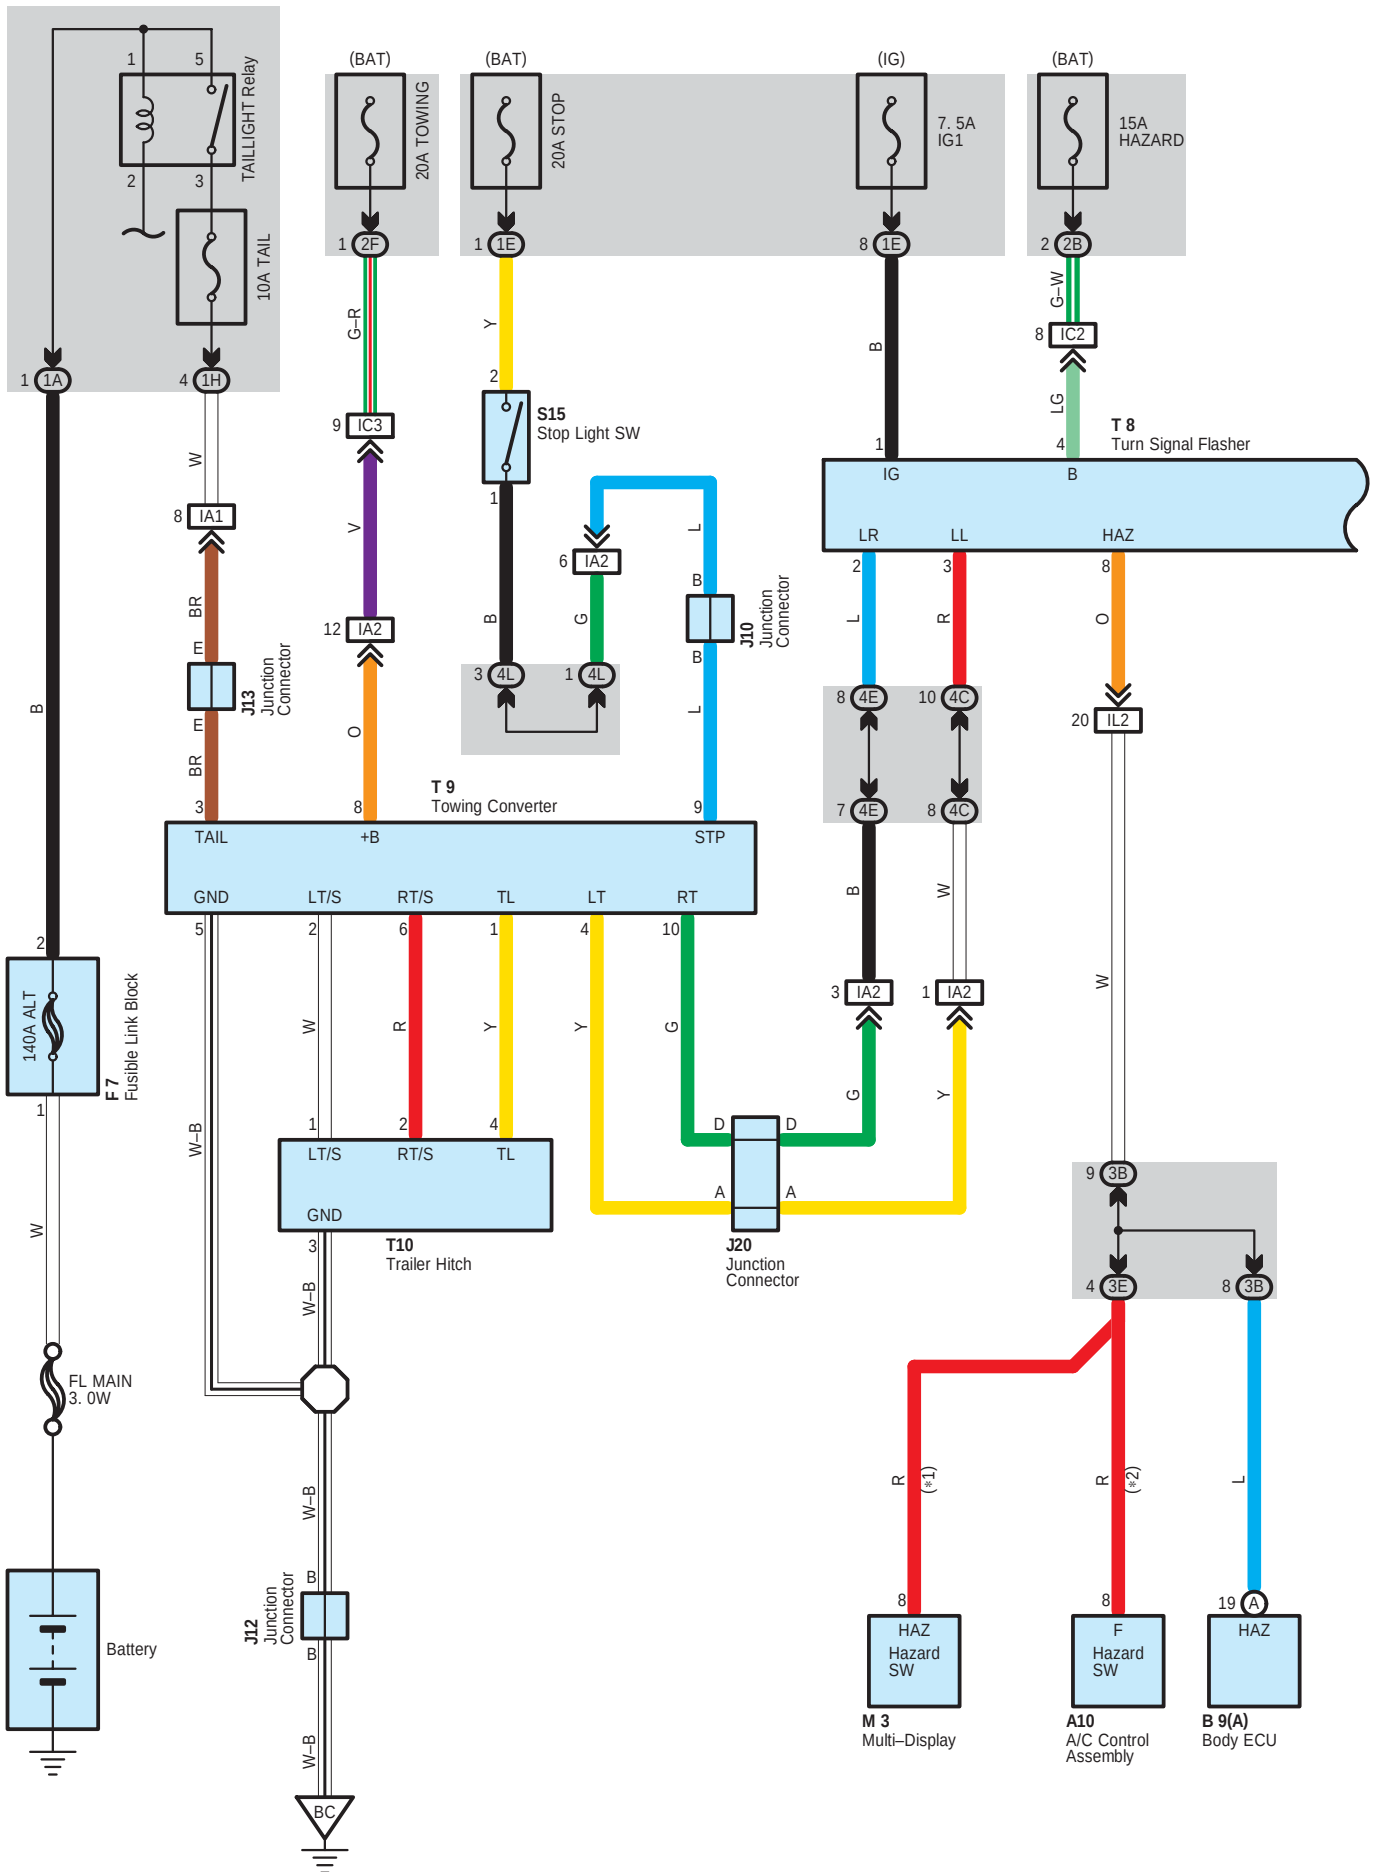

- * 1 : w/ Navigation System
- * 2 : w/o Navigation System

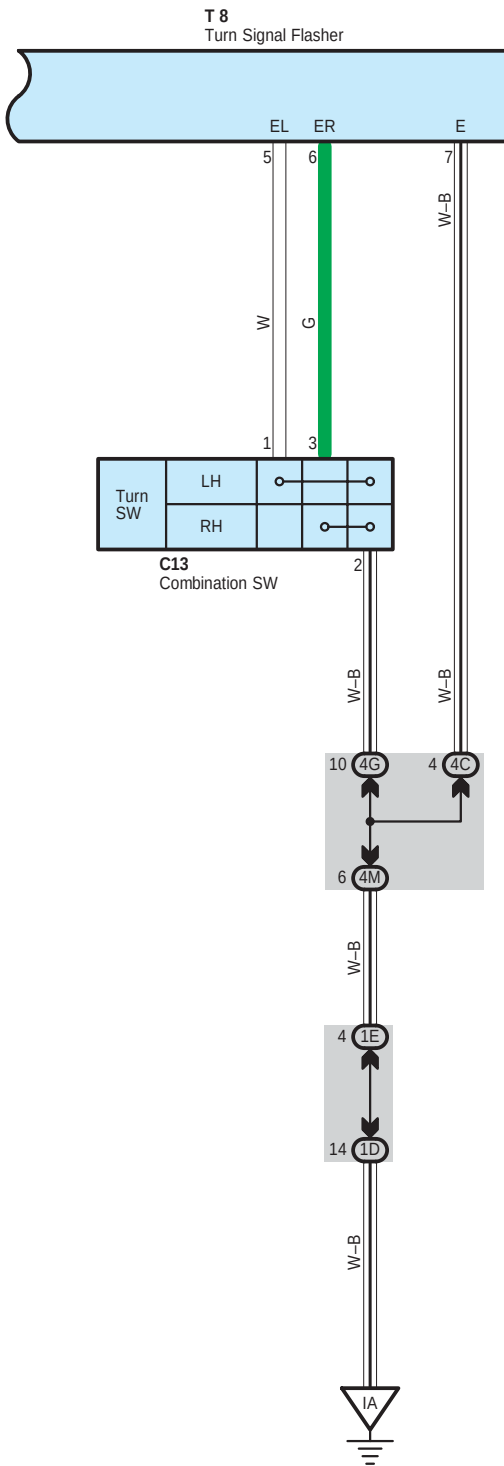

Trailer Towing

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A10	42	J10	44	S15	43
B9 A	42	J12	44	T8	43
C13	42	J13	44	T9	45
F7	38 (3MZ-FE)	J20	43	T10	45
	40 (2AZ-FE)	M3	43		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	29	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1D	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1H		
2B	27	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2F		
3B	30	Instrument Panel Wire and Center J/B (Behind the Instrument Panel Center)
3E		
4C	33	Cowl Wire and Passenger Side J/B (Right Side of Grove Box)
4E		
4G		
4L	32	
4M		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	50	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IA2		
IC2	50	Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)
IC3		
IL2	51	Instrument Panel Wire and Cowl Wire (Upper Side of Passenger Side J/B)

: Ground Points

Code	See Page	Ground Points Location
IA	50	Left Cowl Side Panel
BC	52	Left Side of Rear Cross Member