




Door Lock Control

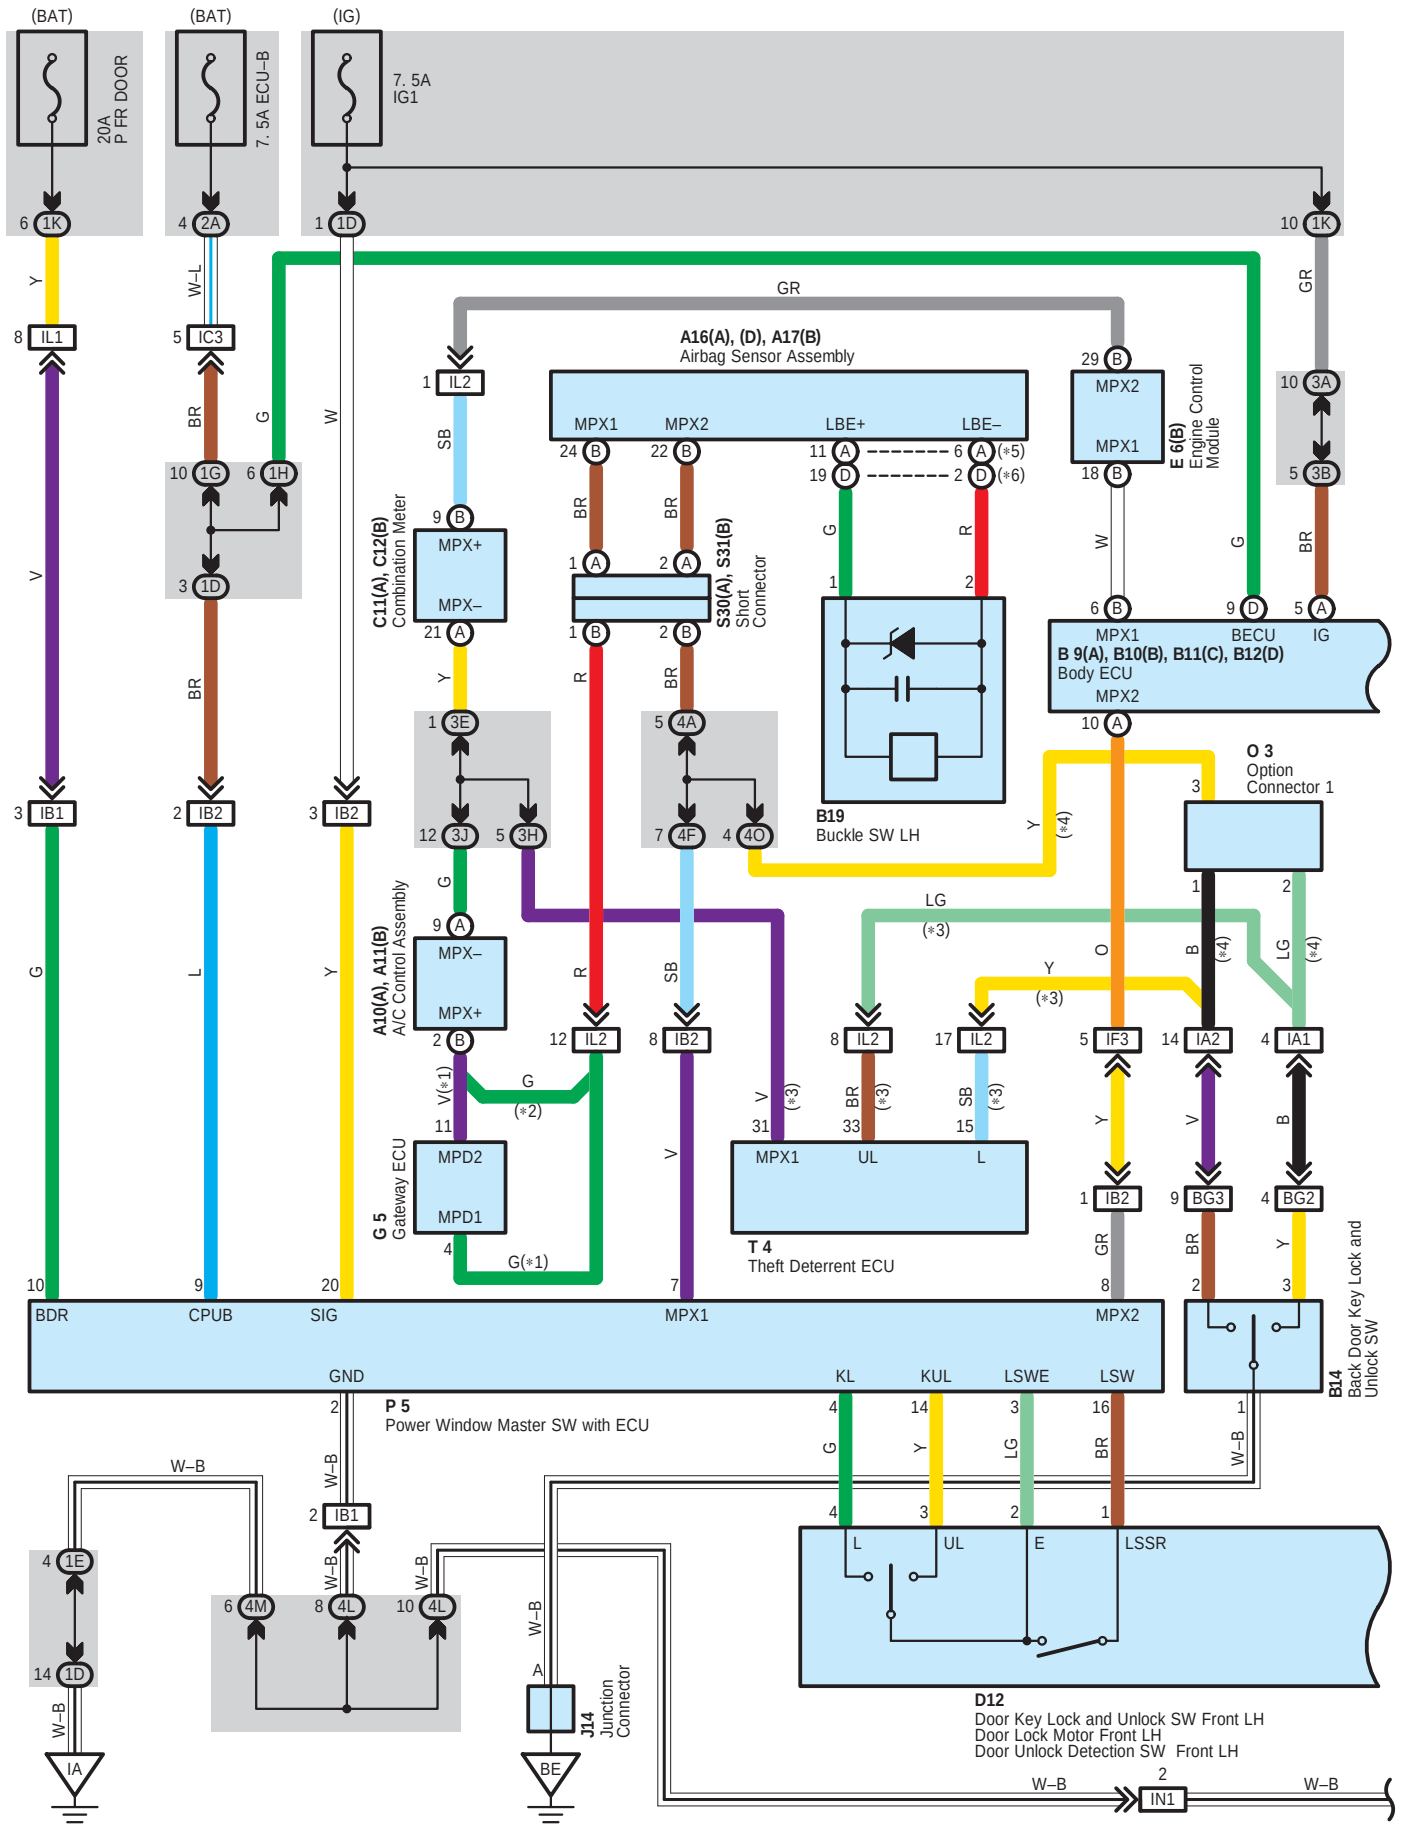

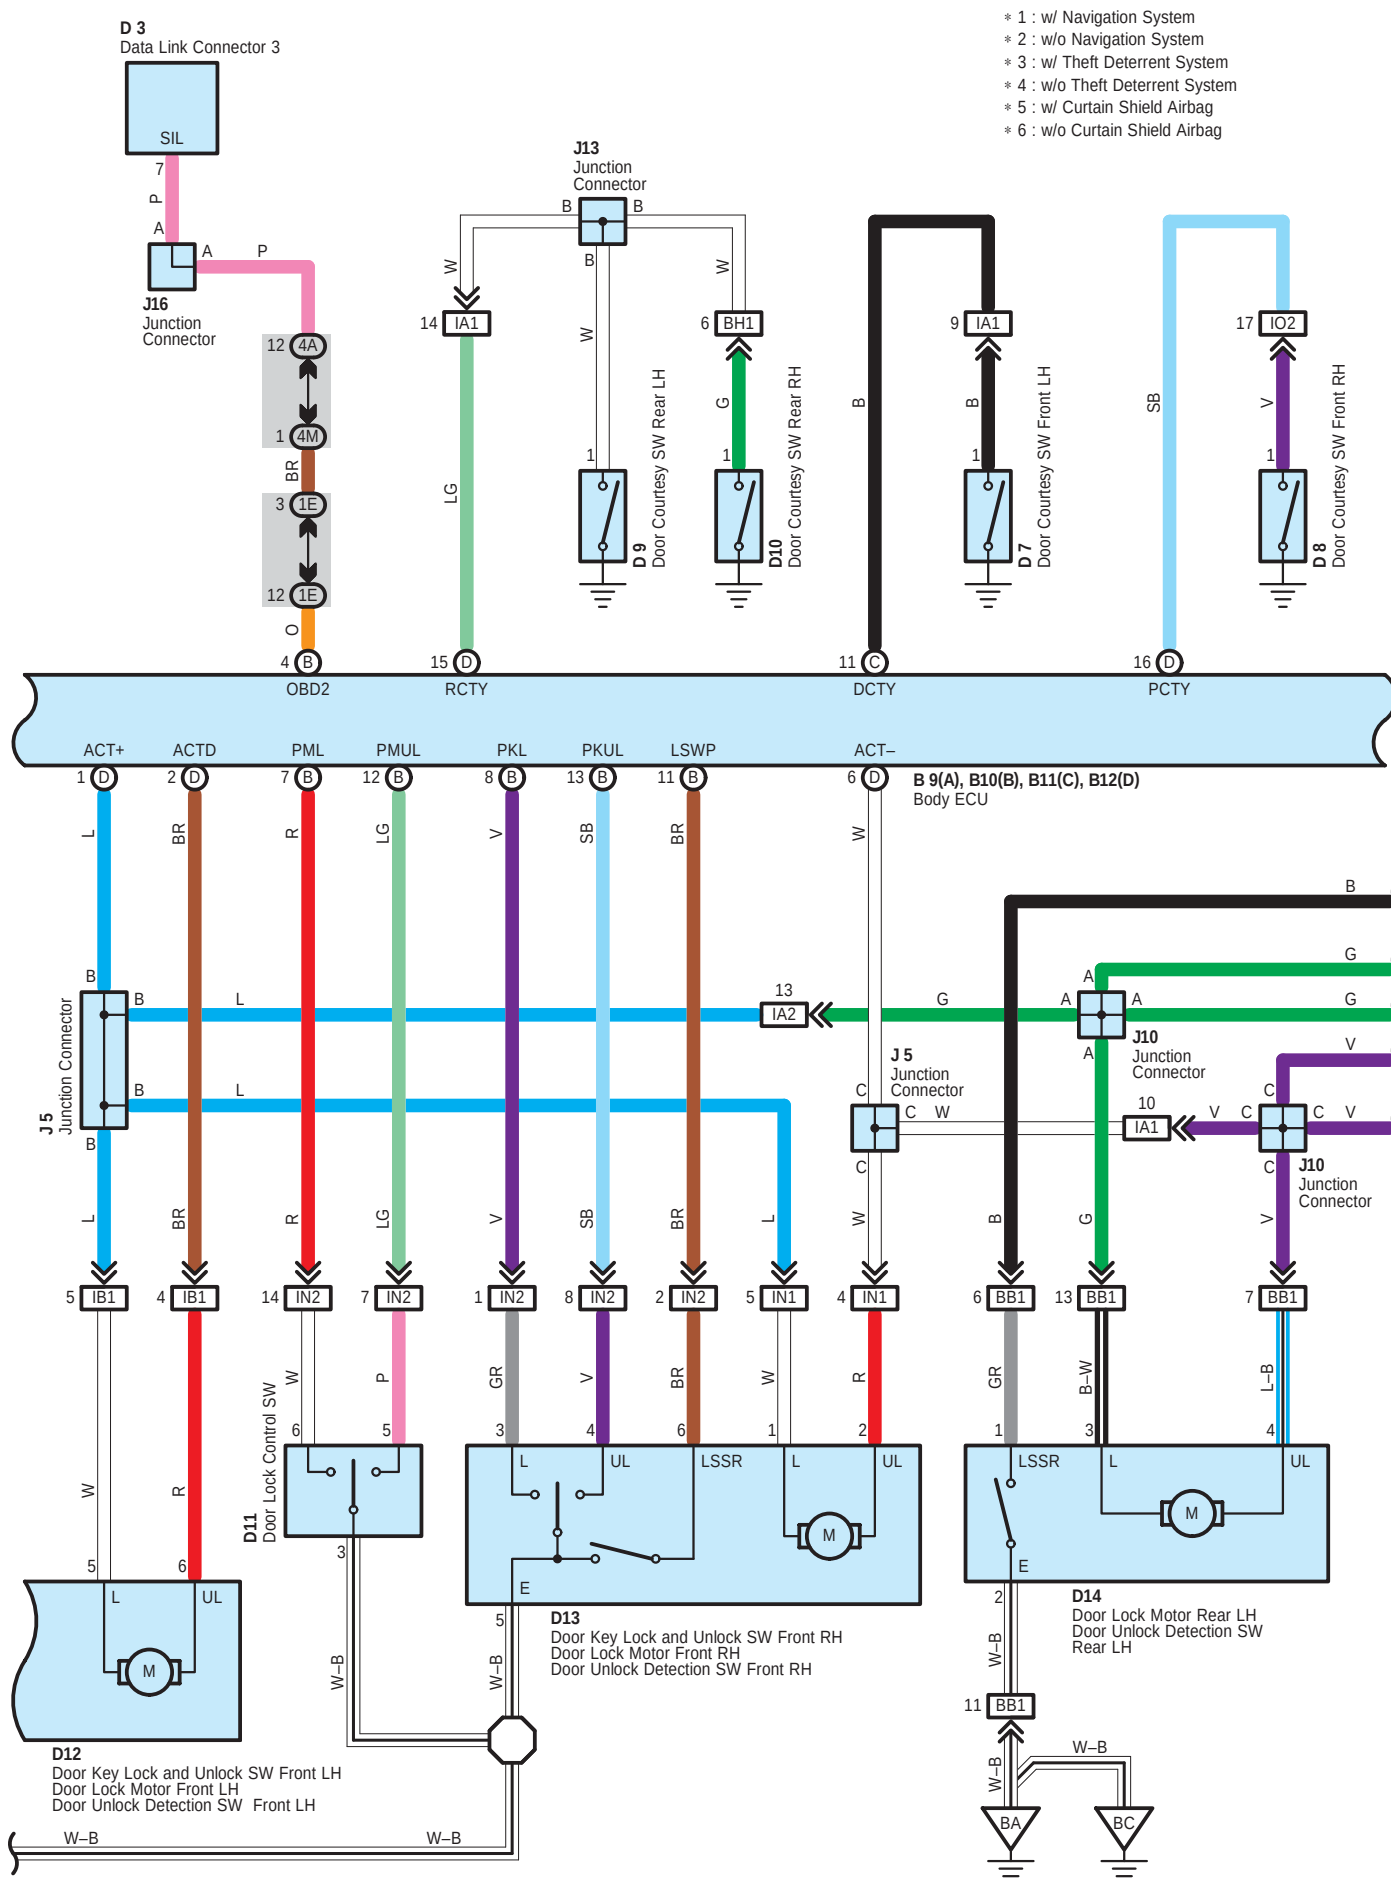

- * 1 : w/ Navigation System
- * 2 : w/o Navigation System
- * 3 : w/ Theft Deterrent System
- * 4 : w/o Theft Deterrent System
- * 5 : w/ Curtain Shield Airbag
- * 6 : w/o Curtain Shield Airbag

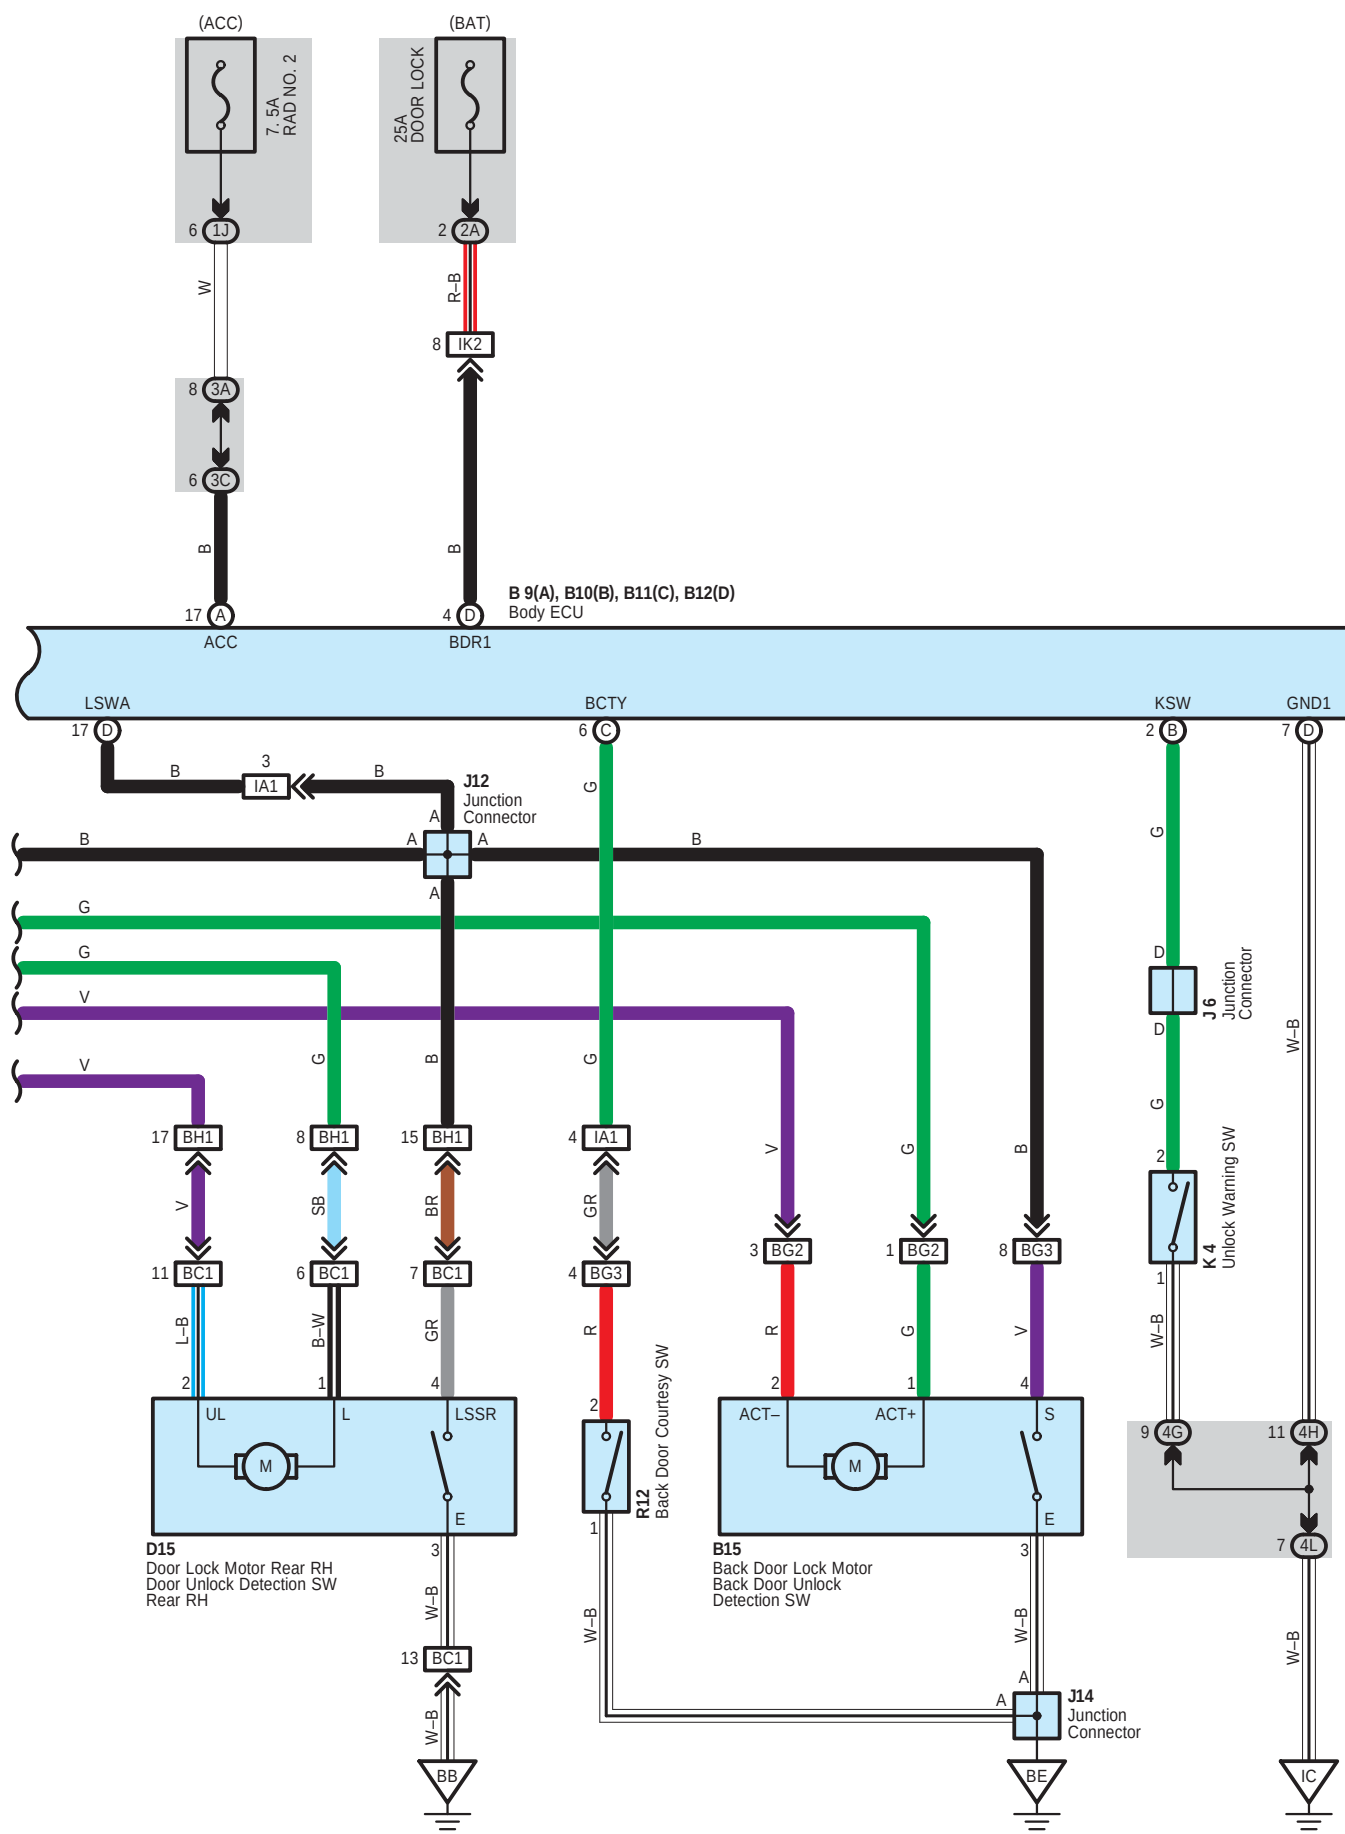

System Outline

The door lock control is controlled through the various signals input into the body ECU through communication control of the body ECU etc.

1. Manual Operation

All doors can be Locked/Unlocked through the operation of the driver and passenger side door lock control SW.

2. Double Operation Unlock Operation

When the door key lock and unlock SW front LH is turned to the unlock side, only the driver's door is unlocked. And if the door key lock and unlock SW front LH is turned to the unlock side again within 3 seconds, all the doors to unlock.

3. Manual Unlock Protection

Once the doors are locked by the door knob (Key less operation), the door key or the transmitter, they can not be unlocked by the door lock control SW. The protection is canceled when the ignition SW is turned on or unlock operation is made by the door key or the transmitter.

4. Ignition Key Reminder Operation

When the door lock operation is made using the door knob with the ignition key remained inserted in the key cylinder and the door open, unlock operation is automatically made. Additionally, if lock operation is made with the door lock control SW or door key lock and unlock SW, unlock operation is automatically made after the lock operation has been completed.

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
A10	A	42	C12	B	42	J6		43
A11	B	42	D3		42	J10		44
A16	A	42	D7		44	J12		44
	D	42	D8		44	J13		44
A17	B	42	D9		44	J14		44
B9	A	42	D10		44	J16		43
B10	B	42	D11		44	K4		43
B11	C	42	D12		44	O3		43
B12	D	42	D13		44	P5		44
B14		44	D14		44	R12		45
B15		44	D15		44	S30	A	43
B19		46 (*1)	E6	B	42	S31	B	43
		47 (*2)	G5		43	T4		43
C11	A	42	J5		43			

* 1 : w/ Power Seat * 2 : w/o Power Seat

Door Lock Control



: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1G		
1H		
1J	28	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1K		
2A	27	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3A	30	Instrument Panel Wire and Center J/B (Behind the Instrument Panel Center)
3B		
3C		
3E		
3H	31	
3J		
4A	33	Cowl Wire and Passenger Side J/B (Right Side of Grove Box)
4F		
4G		
4H		
4L	32	
4M		
4O		



: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	50	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IA2		
IB1	50	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IB2		
IC3	50	Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)
IF3	50	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
IK2	51	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IL1	51	Instrument Panel Wire and Cowl Wire (Upper Side of Passenger Side J/B)
IL2		
IN1	51	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IN2		
IO2	51	Cowl Wire and Floor Wire (Right Kick Panel)
BB1	52	Rear Door No.1 LH Wire and Floor No.2 Wire (Left Center Pillar)
BC1	52	Rear Door No.1 RH Wire and Floor Wire (Right Center Pillar)
BG2	52	Back Door No.1 Wire and Floor No.2 Wire (Rear Left of the Roof)
BG3		
BH1	52	Floor No.2 Wire and Floor Wire (Near the Rear Side Marker Light RH)



: Ground Points

Code	See Page	Ground Points Location
IA	50	Left Cowl Side Panel
IC	50	Right Cowl Side Panel
BA	52	Left Center Pillar
BB	52	Right Center Pillar
BC	52	Left Side of Rear Cross Member
BE	52	Left Side of Back Door

