



Theft Deterrent System

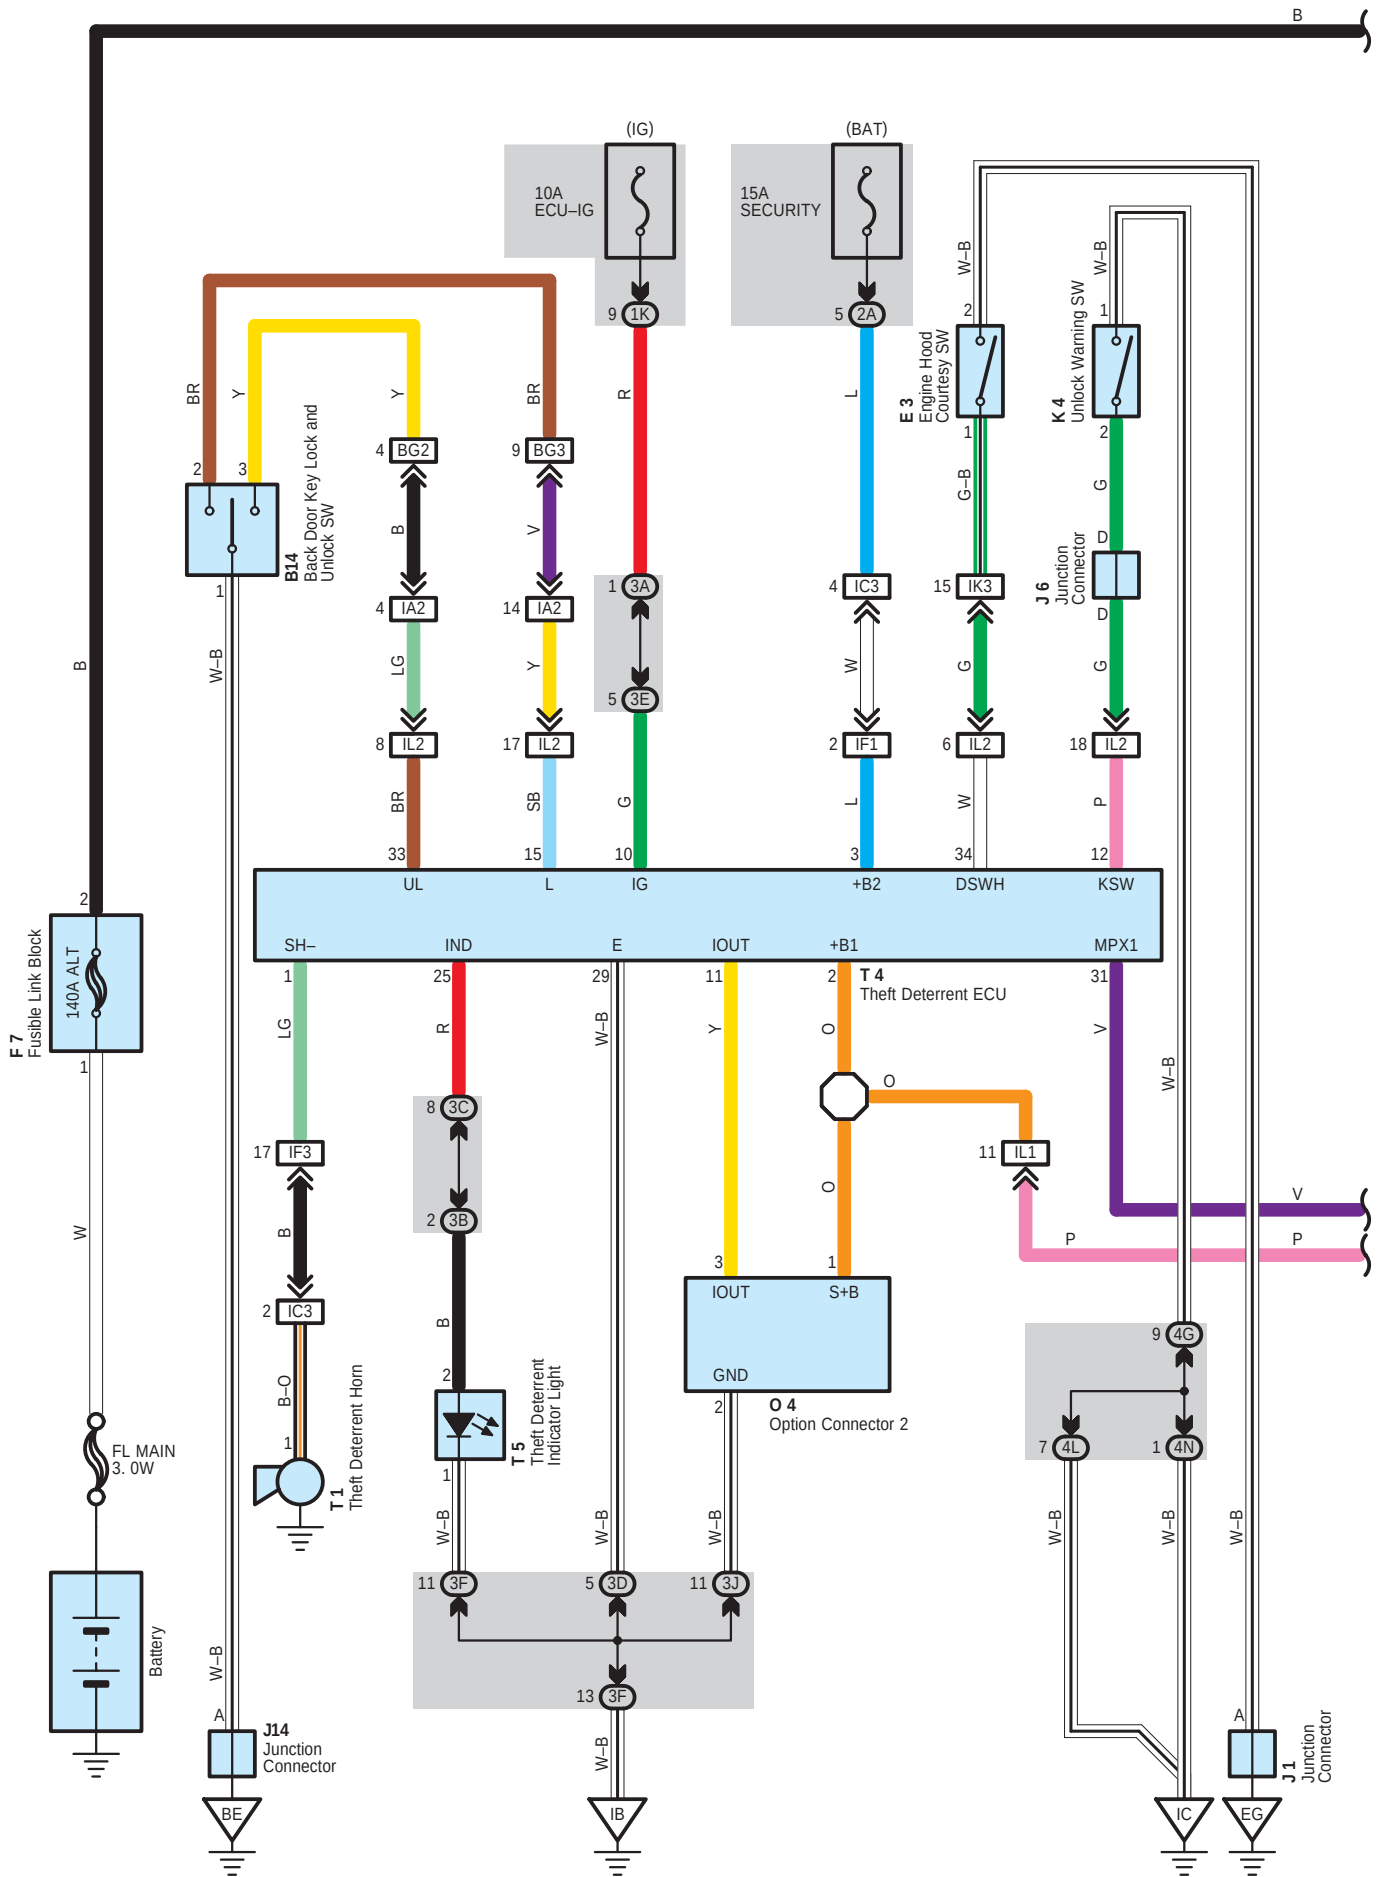

Theft Deterrent System

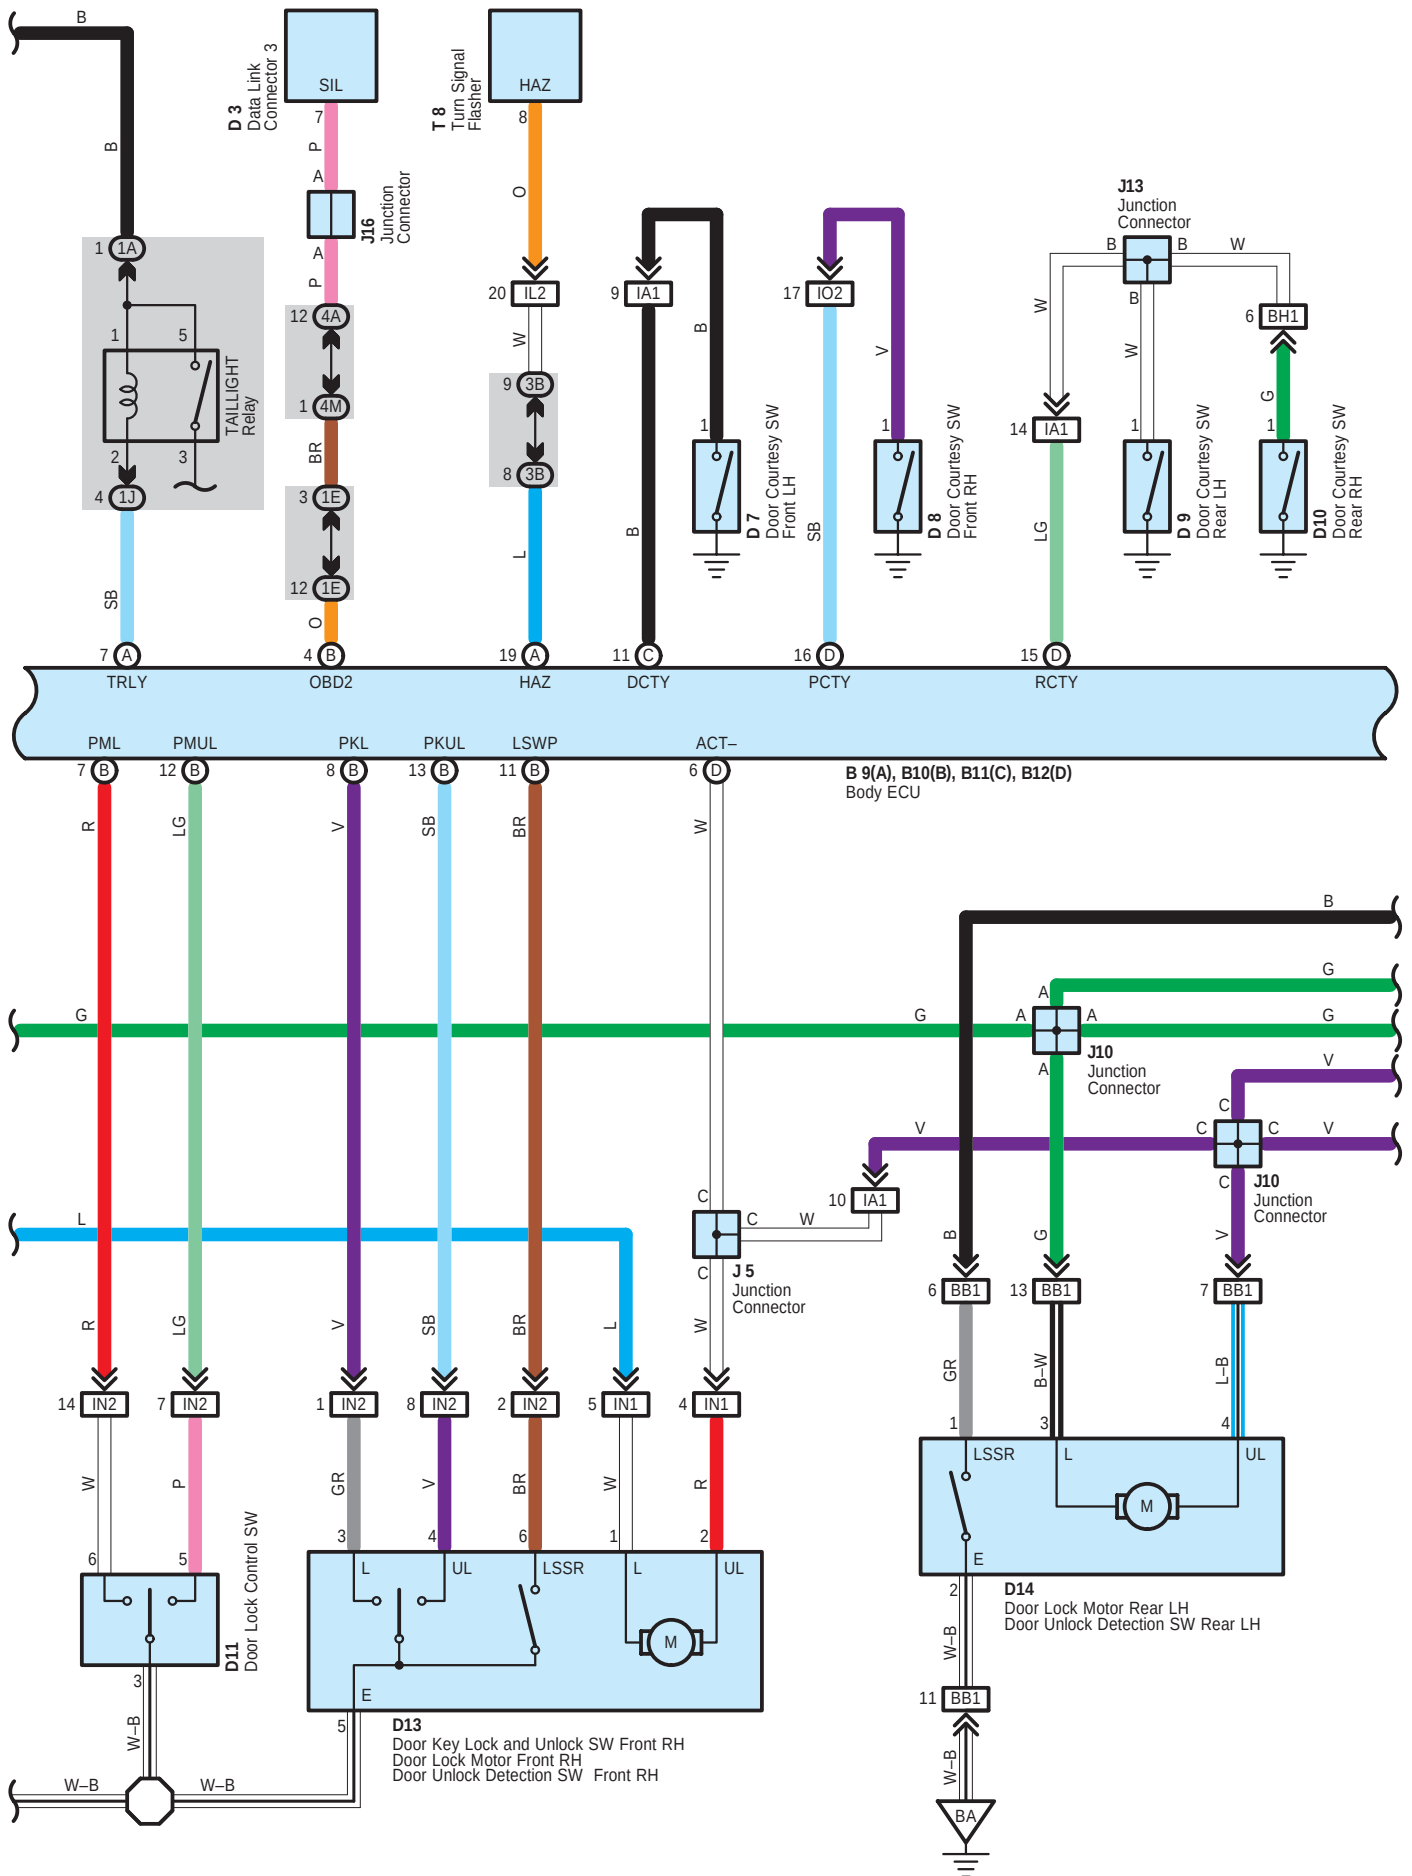

Theft Deterrent System

: Parts Location

Code		See Page	Code		See Page	Code	See Page	
A10	A	42	D11		44	J13	44	
A11	B	42	D12		44	J14	44	
A17	B	42	D13		44	J16	43	
B9	A	42	D14		44	J17	43	
B10	B	42	D15		44	K4	43	
B11	C	42	E3		38 (3MZ–FE)	O4	43	
B12	D	42	E6	B	42	P5	44	
B14		44	F7		38 (3MZ–FE)	R12		45
B15		44			40 (2AZ–FE)	S30	A	43
C11	A	42	G5		43	S31	B	43
C12	B	42	J1		39 (3MZ–FE)	T1		39 (3MZ–FE)
D3		42			41 (2AZ–FE)	T4		43
D7		44	J5		43	T5		43
D8		44	J6		43	T7		43
D9		44	J10		44	T8		43
D10		44	J12		44			

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	23	Engine Room R/B No.3 (Engine Compartment Rear Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	29	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1D	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1G		
1H		
1J	28	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1K		
2A	27	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2B		
2G		
3A	30	Instrument Panel Wire and Center J/B (Behind the Instrument Panel Center)
3B		
3C		
3D		
3E		
3F		
3H	31	
3J		
4A	33	Cowl Wire and Passenger Side J/B (Right Side of Grove Box)
4D		
4F		
4G		
4H	32	
4J		
4L		
4M		
4N		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	50	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IA2		
IB1	50	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IB2		
IC2	50	Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)
IC3		
IF1	50	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
IF3		
IK2	51	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IK3		
IL1	51	Instrument Panel Wire and Cowl Wire (Upper Side of Passenger Side J/B)
IL2		
IN1	51	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IN2		
IO2	51	Cowl Wire and Floor Wire (Right Kick Panel)
BB1	52	Rear Door No.1 LH Wire and Floor No.2 Wire (Left Center Pillar)
BC1	52	Rear Door No.1 RH Wire and Floor Wire (Right Center Pillar)
BG2	52	Back Door No.1 Wire and Floor No.2 Wire (Rear Left of the Roof)
BG3		
BH1	52	Floor No.2 Wire and Floor Wire (Near the Rear Side Marker Light RH)

 : Ground Points

Code	See Page	Ground Points Location
EG	48 (3MZ-FE)	Under the Left Headlight
	49 (2AZ-FE)	
IA	50	Left Cowl Side Panel
IB	50	Right Instrument Panel Brace
IC	50	Right Cowl Side Panel
BA	52	Left Center Pillar
BB	52	Right Center Pillar
BE	52	Left Side of Back Door