



Power Seat for Driver's Seat

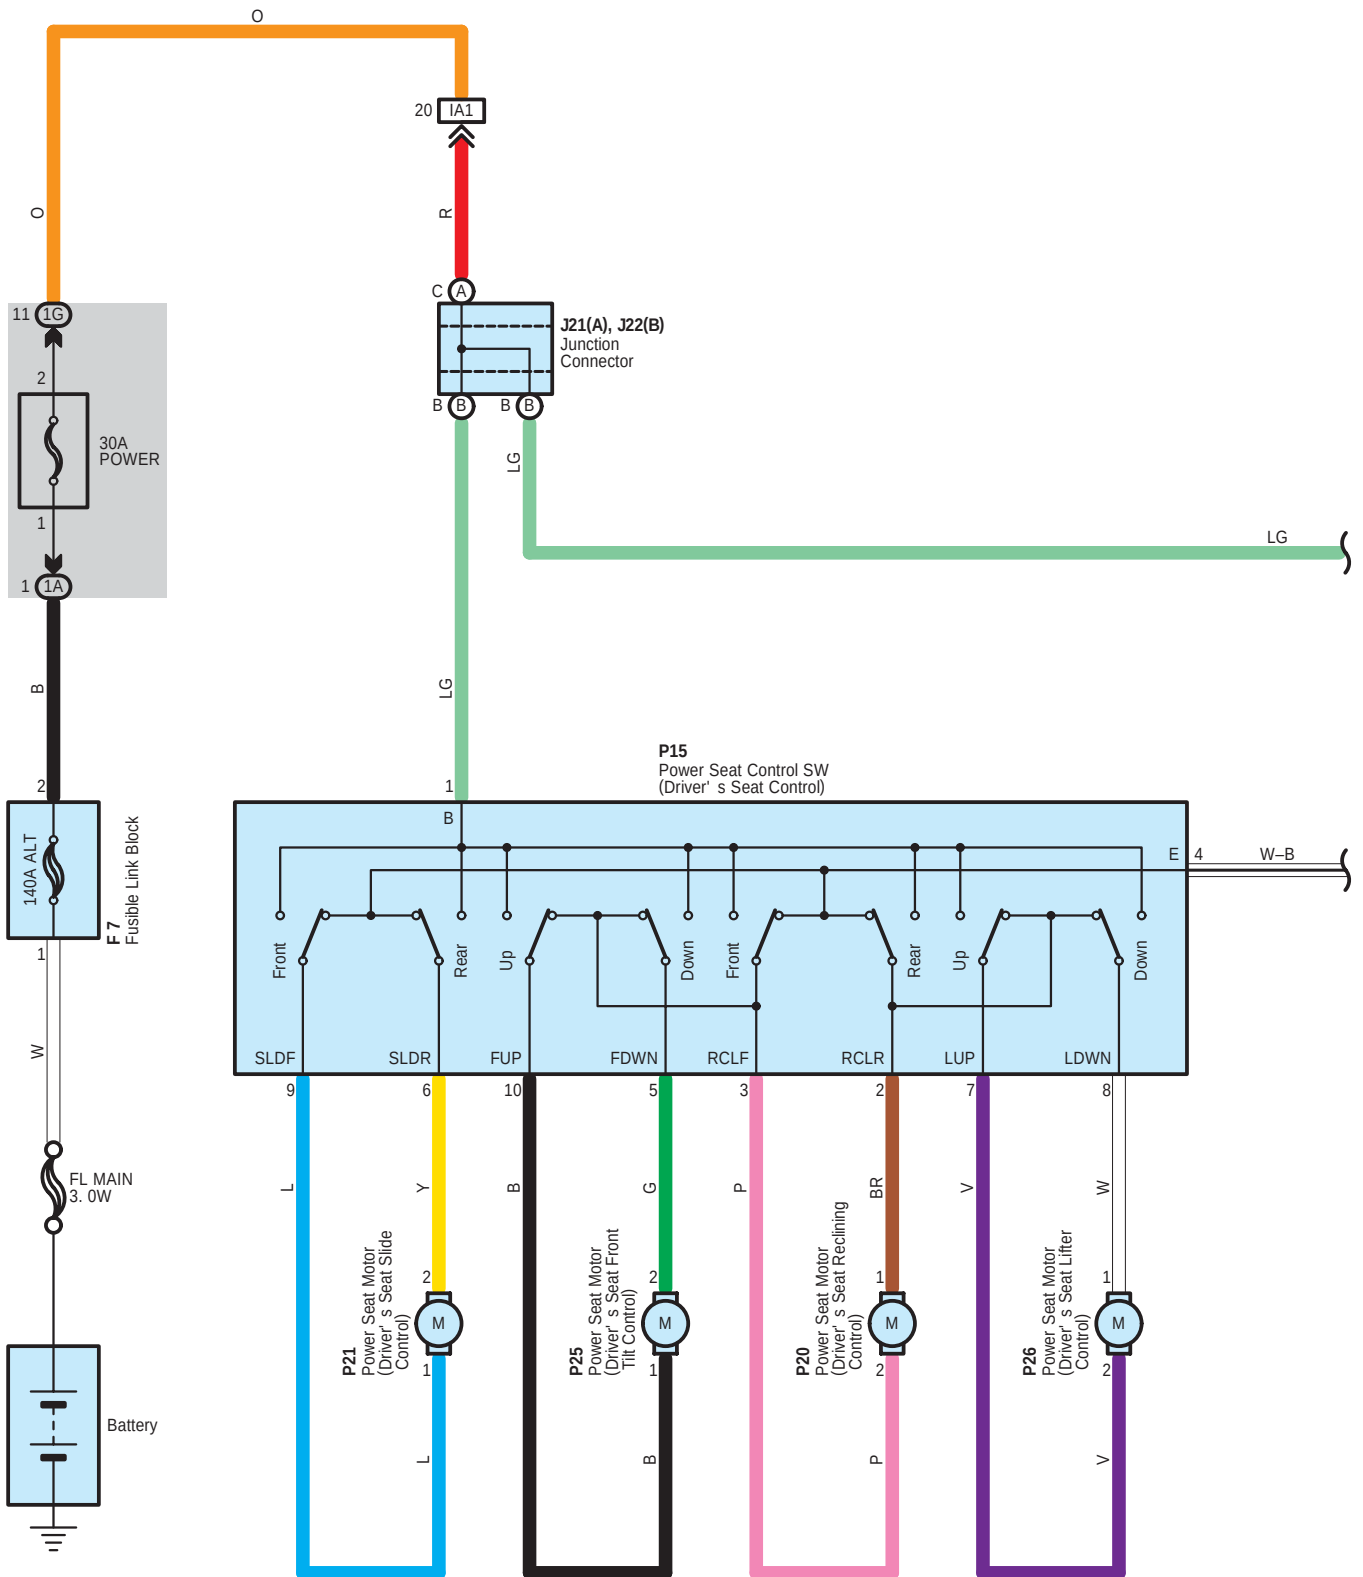

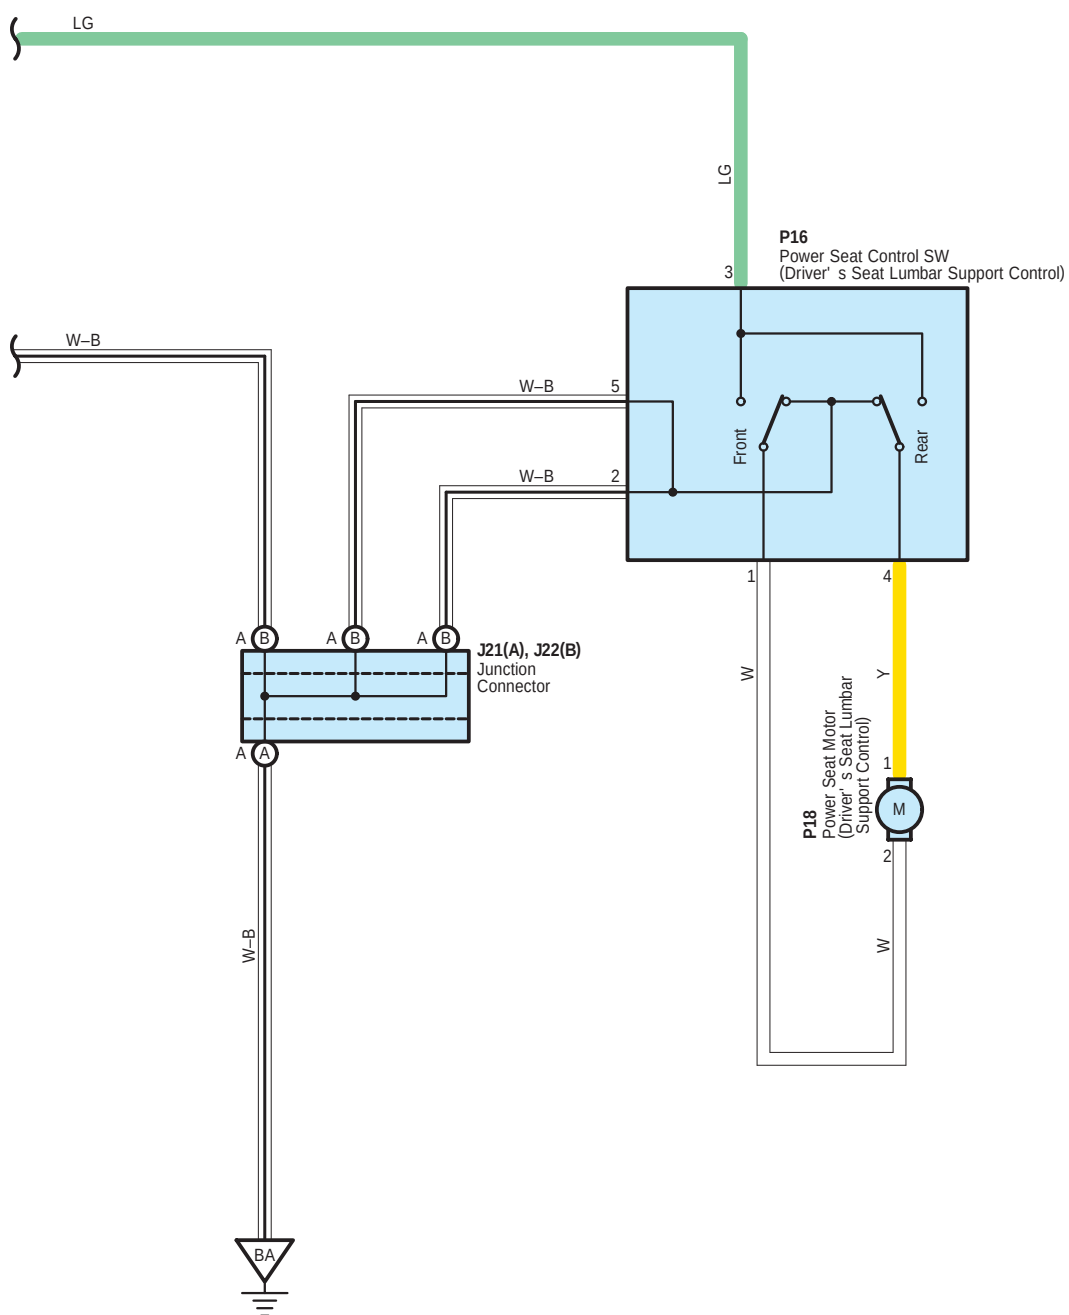

Power Seat for Driver's Seat

: Parts Location

Code		See Page	Code	See Page	Code	See Page
F7		38 (3MZ-FE)	P15	46 (*1)	P21	46 (*1)
		40 (2AZ-FE)	P16	46 (*1)	P25	46 (*1)
J21	A	46 (*1)	P18	46 (*1)	P26	46 (*1)
J22	B	46 (*1)	P20	46 (*1)		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	29	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1G	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	50	Cowl Wire and Floor No.2 Wire (Left Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
BA	52	Left Center Pillar

* 1 : w/ Power Seat * 2 : w/o Power Seat

